


13. Rear Regulator and Motor Assembly

A: REMOVAL

- 1) Remove the rear door glass. <Ref. to GW-33, REMOVAL, Rear Door Glass.>
- 2) Remove the rear regulator and motor assembly.
 - (1) Disconnect the connector.
 - (2) Remove the bolts, and then remove the rear regulator and motor assembly.

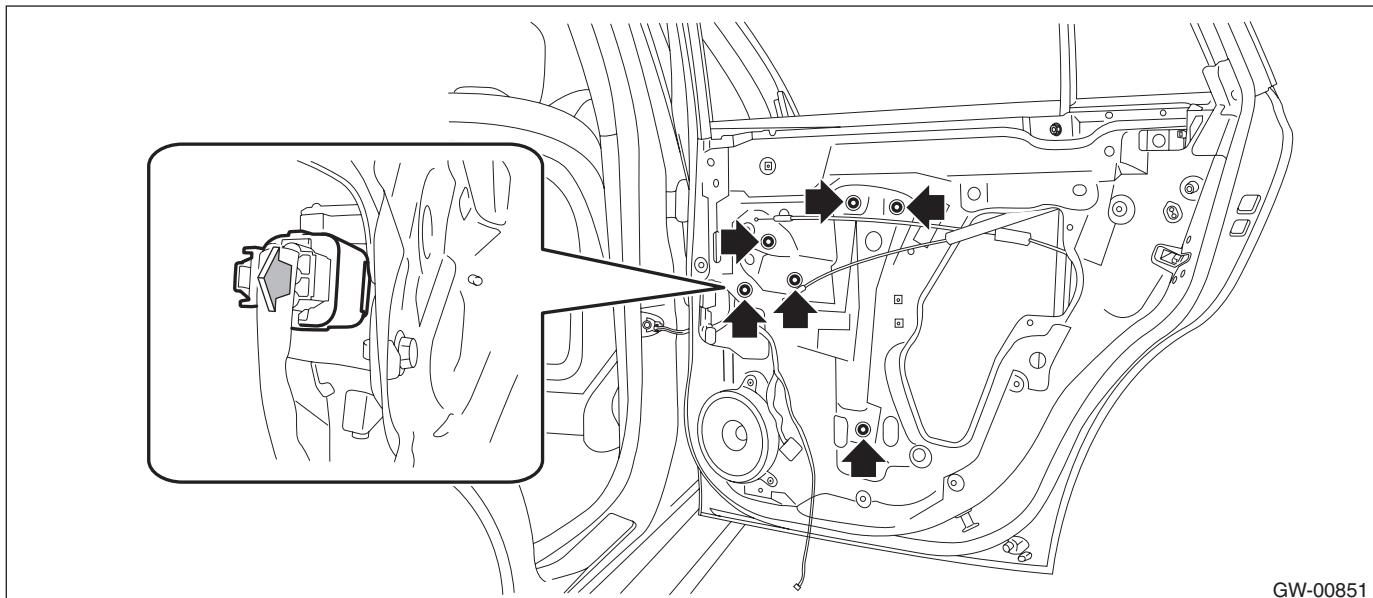

B: INSTALLATION

Install each part in the reverse order of removal.

Tightening torque:


Refer to “COMPONENT” of “General Description”. <Ref. to GW-5, REAR DOOR GLASS, COMPONENT, General Description.>

Rear Regulator and Motor Assembly

GLASS/WINDOWS/MIRRORS

C: INSPECTION

- 1) Disconnect the motor connector.
- 2) Apply battery voltage between the motor connector terminals and check the motor operation.

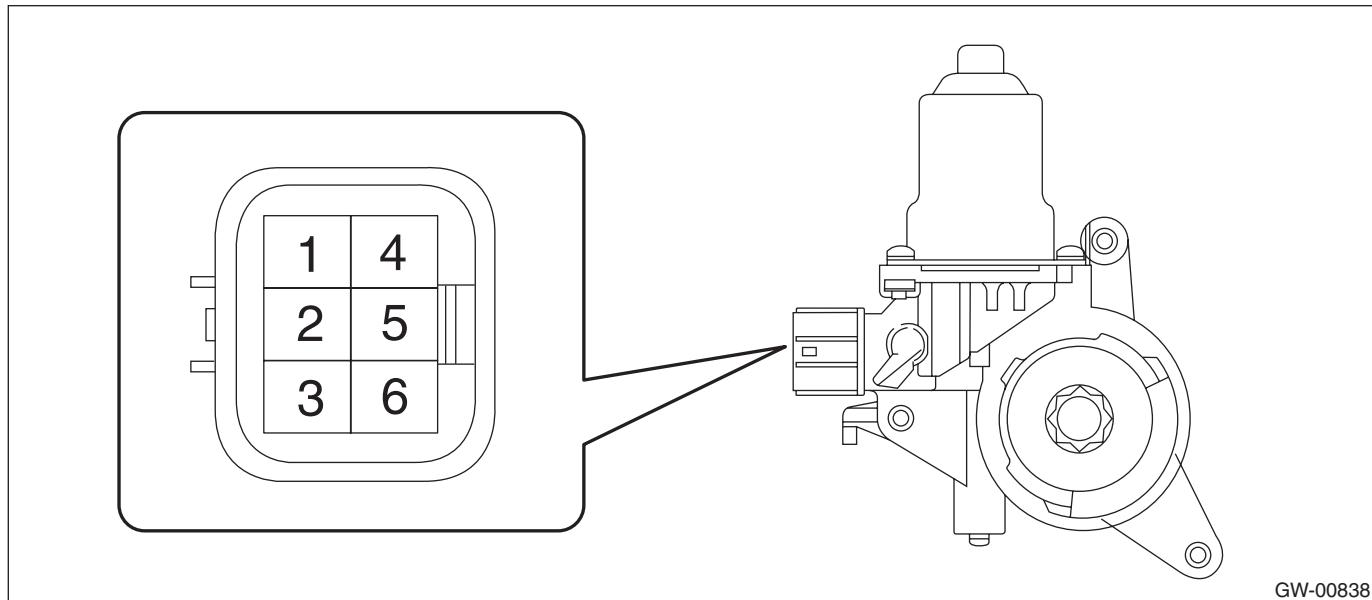

- RH side

Terminal No.	Inspection conditions	Specification
1 (+) — 4 (-)	Apply battery voltage between terminals	Increase
4 (+) — 1 (-)	Apply battery voltage between terminals	Decrease

- LH side

Terminal No.	Inspection conditions	Specification
3 (+) — 6 (-)	Apply battery voltage between terminals	Increase
6 (+) — 3 (-)	Apply battery voltage between terminals	Decrease

- 3) If the inspection results in improper operation, replace the rear regulator and motor assembly.