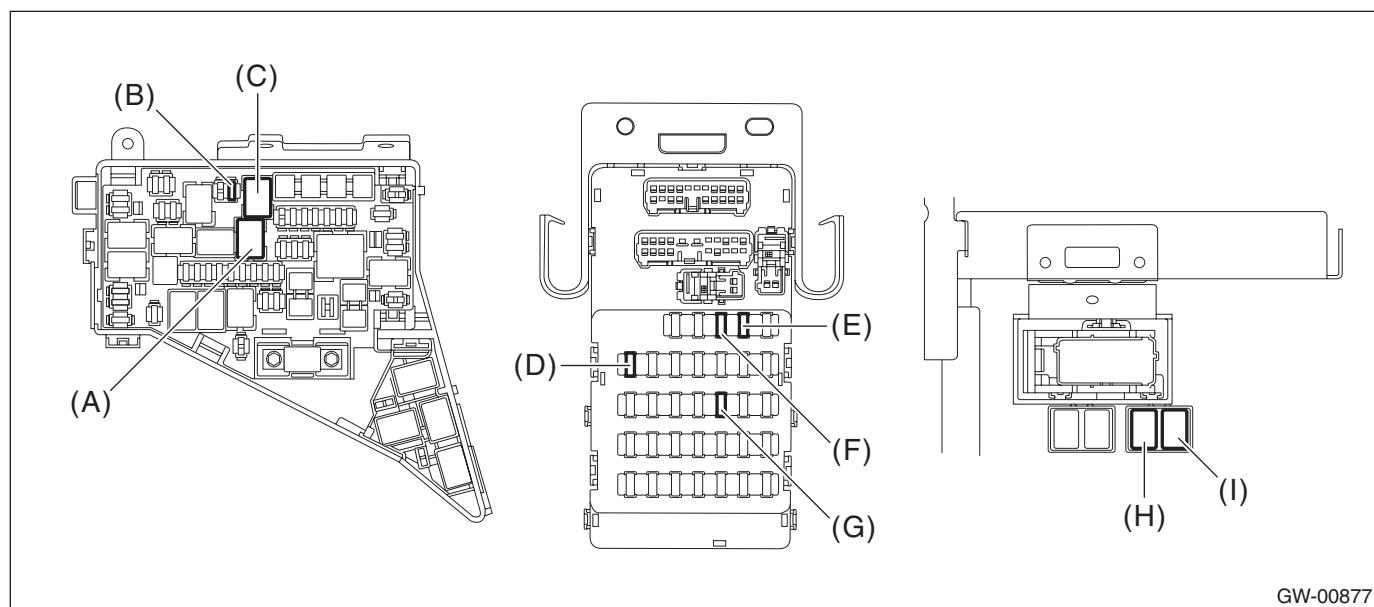


2. Relay and Fuse

A: LOCATION



Main fuse box	Power window relay	(A)
	Fuse 25 A (rear defogger)	(B)
	Rear defogger relay	(C)
Relay & fuse box	Fuse 7.5 A (remote control mirror)	(D)
	Fuse 7.5 A (wiper deicer)	(E)
	Fuse 20 A (power window)	(F)
	Fuse 15 A (wiper deicer, remote control mirror)	(G)
Relay holder	Wiper deicer relay	(H)
	Mirror heater relay	(I)

NOTE:

For other related fuses, refer to the wiring diagram. <Ref. to WI-15, Power Supply Circuit.>

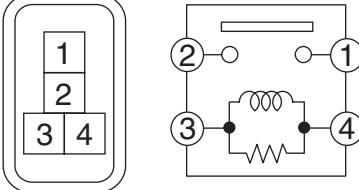
B: INSPECTION

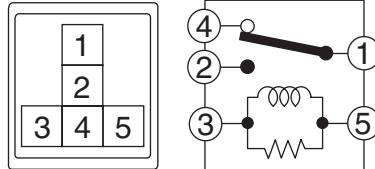
1. CHECK FUSE.

- 1) Remove the fuse and check visually.
- 2) If the fuse is blown out, replace the fuse.

2. CHECK RELAY

1) Check the resistance between relay terminals.

Terminal No.	Inspection conditions	Specification	Circuit
1 — 2	Always	1 MΩ or more	
1 — 2	Apply battery voltage between 4 — 3 terminals.	Less than 1 Ω	 SR-00180

Terminal No.	Inspection conditions	Specification	Circuit
1 — 2	Always	1 MΩ or more	
1 — 4	Always	Less than 1 Ω	
1 — 2	Apply battery voltage between 3 — 5 terminals.	Less than 1 Ω	 SL-01085

2) Replace the relay if the inspection result is not within the standard value.