

## 20. Rearview Mirror (RCD Model)

### A: REMOVAL

**CAUTION:**

Be careful not to damage the mirror surface and windshield glass.

1) Disconnect the ground cable from battery.

2) Remove the rearview mirror.

(1) Slide the upper section of the cover, and release the claws in the lower section, then remove the harness cover (a).


(2) Disconnect the rearview mirror connector (b).

**CAUTION:**

• Be careful not to pull the harness.


• In order to prevent damaging the mirror and harness, remove the connector with the cap as a unit.

When removing the cap, disconnect the connector first.

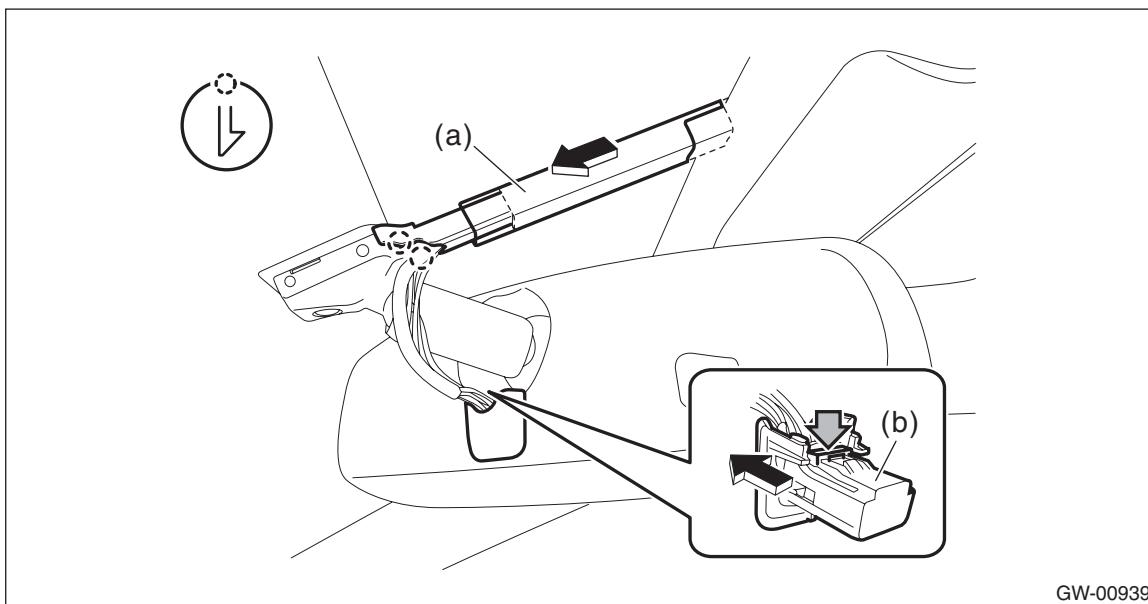

(3) Remove the TORX® bolt, and then slide the rear view mirror to remove.

**Preparation tool: TORX® T20**

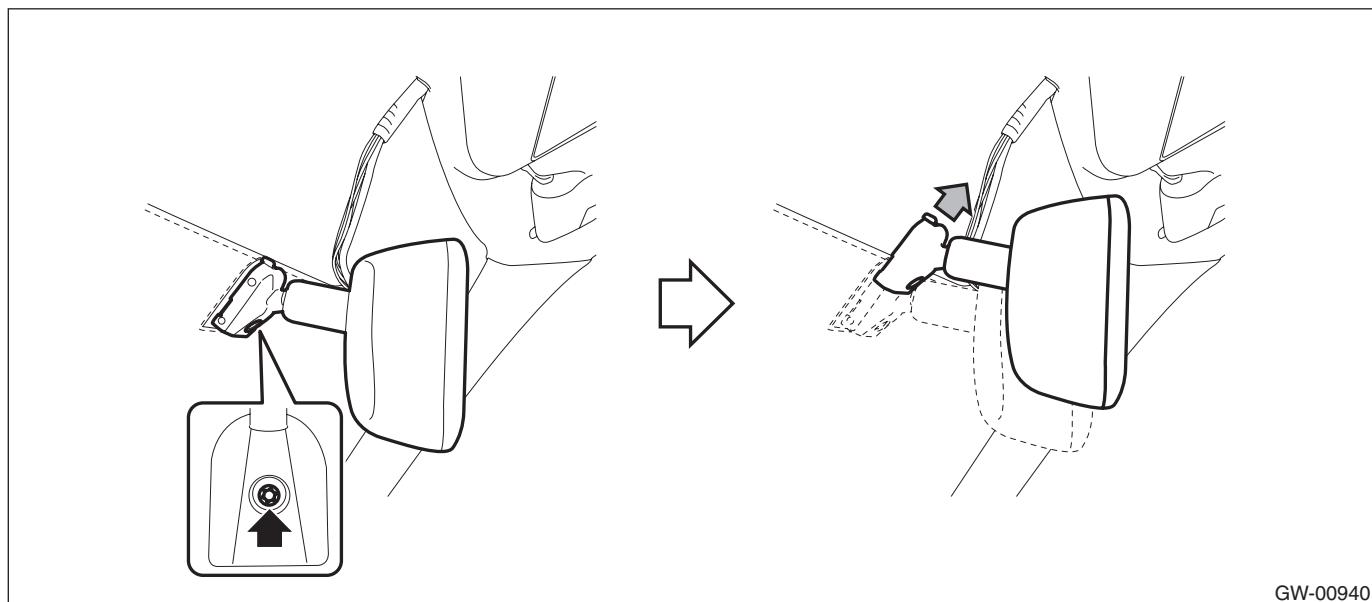

3) When the mirror mount is damaged, use something like piano wire or a spatula to remove.

## B: INSTALLATION

### CAUTION:

When tightening the mounting TORX® bolt, be sure to observe the specified torque. Otherwise, the mount may be damaged in over-torque conditions.

- 1) Install each part in the reverse order of removal.
- 2) Perform calibration and zone setting of the rearview mirror (RCD). <Ref. to GW-59, ADJUSTMENT, Rearview Mirror (RCD Model).>

### *Tightening torque:*

Refer to "COMPONENT" of "General Description". <Ref. to GW-6, MIRROR, COMPONENT, General Description.>


## C: ADJUSTMENT

### CAUTION:

- When the rearview mirror (RCD) is removed or replaced, perform calibration and zone setting by following the procedures below.
- The zone setting of the vehicle is set to zone "8" at factory setting.

### 1. CALIBRATION

- 1) Before performing calibration, check the following items.
  - There is a sufficient distance from a big metal object or a building.
  - Vehicle is parked on a level surface.
  - The switch of unnecessary accessories (A/C system, audio system and lighting system) is turned to "OFF".
  - All doors are closed.
- 2) Start the engine.
- 3) Hold down the multi-function button (a) for six to nine seconds. Once calibration mode starts, "C" is displayed on the screen (b).

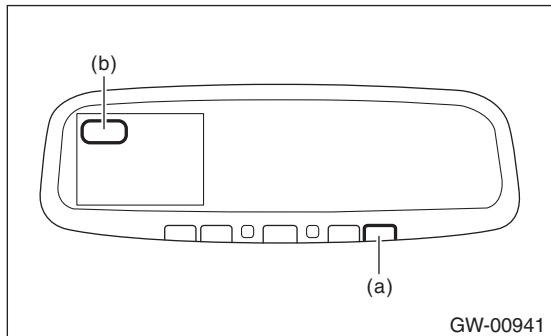

- 4) Drive the vehicle in a circle until the display of "C" on the screen goes off. (Approx. two or three times)
- 5) Display the compass to check the operation.

### CAUTION:

The mirror may not be able to perform the reading correctly. Therefore, when the compass operates only to the specific direction, repeat steps 3) to 5).


## Rearview Mirror (RCD Model)

## GLASS/WINDOWS/MIRRORS


## 2. ZONE SETTING

1) Refer to the compass zone map to check the zone number of area you use the vehicle.

## Compass zone map

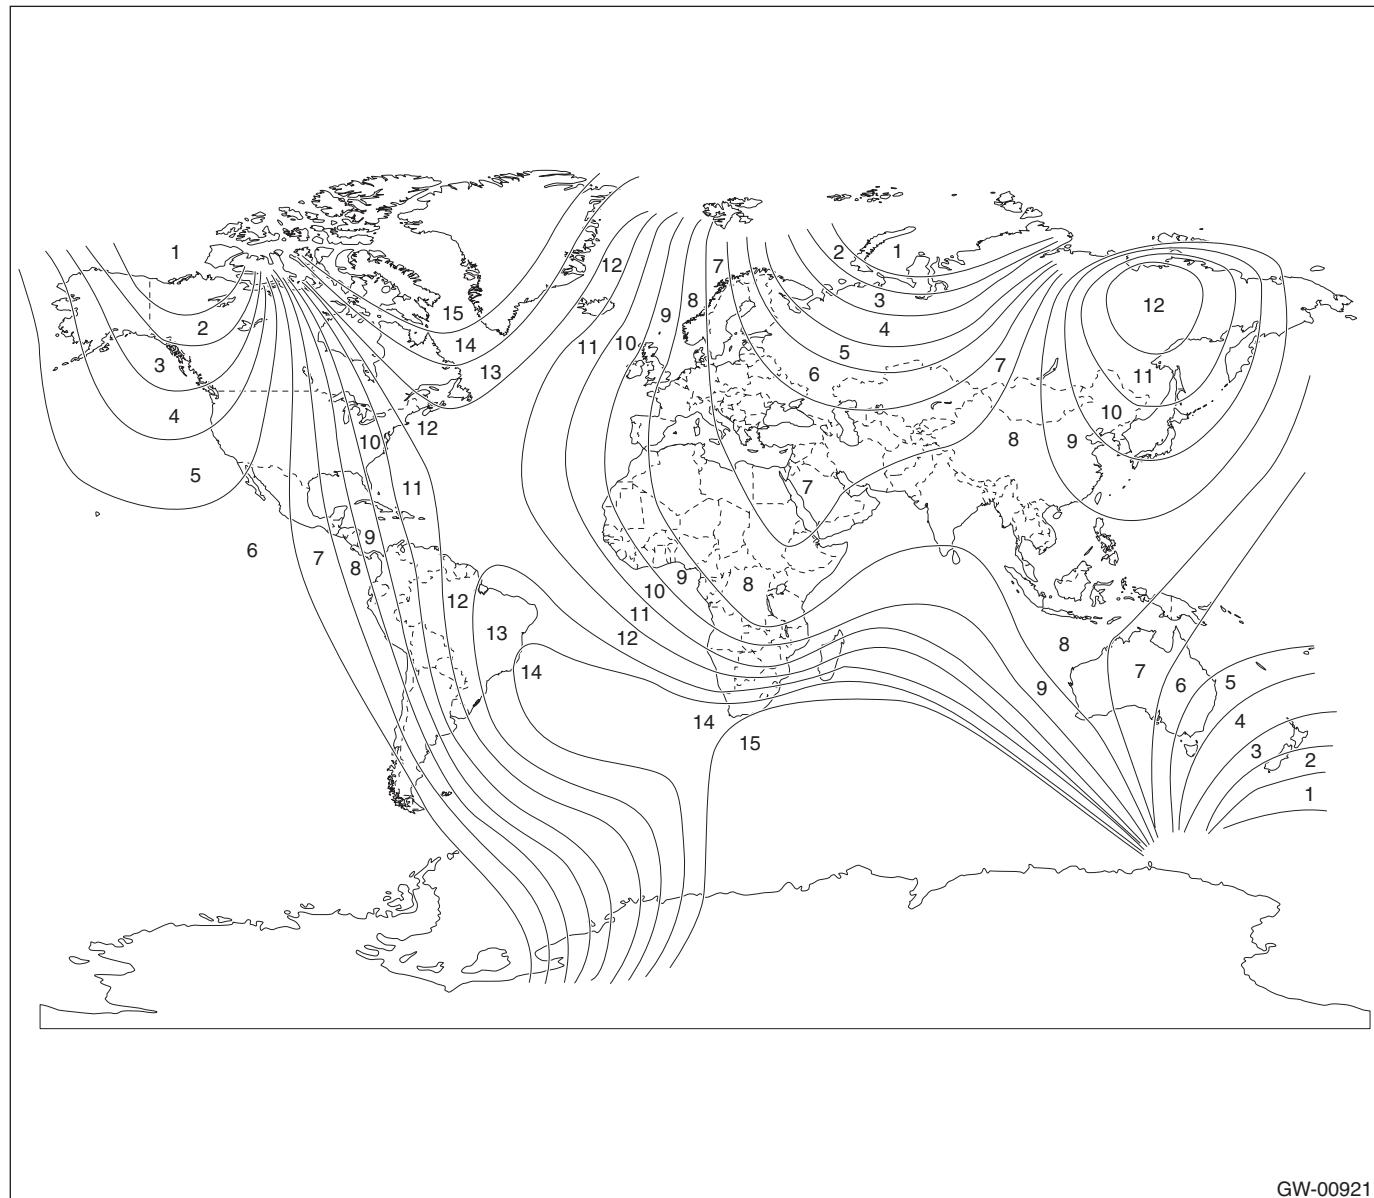

- 2) Turn the ignition switch to ON.
- 3) Hold down the multi-function button (a) for three to six seconds. Once zone setting mode starts, the zone number that is already set is displayed on the screen (b).

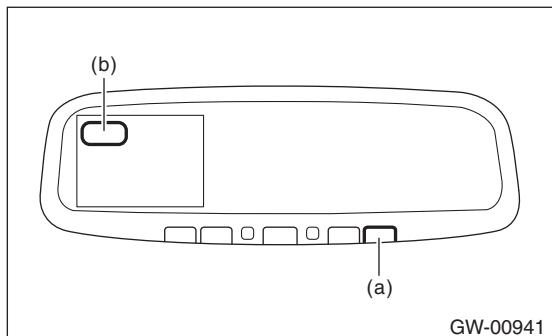

4) Push the multi-function button repeatedly until the zone number you want to set is displayed.

NOTE:

If you leave the multi-function button for three seconds, the zone setting mode is completed.