

5. Front Door Glass

A: REMOVAL


- 1) Remove the front door trim. <Ref. to EI-60, FRONT DOOR, REMOVAL, Door Trim.>
- 2) Remove the sealing cover.

CAUTION:

- Carefully remove the butyl tape. Excessive force will easily break the cover.
- If cover gets broken, replace it with a new part.



- 3) Remove the inner pad.
- 4) Attach the battery ground cable and power window switch and turn the ignition to ON.
- 5) Remove the front door glass.
 - (1) Operate the power window switch to move the front door glass to the position where the mounting bolts can be seen.
 - (2) Remove the bolt.

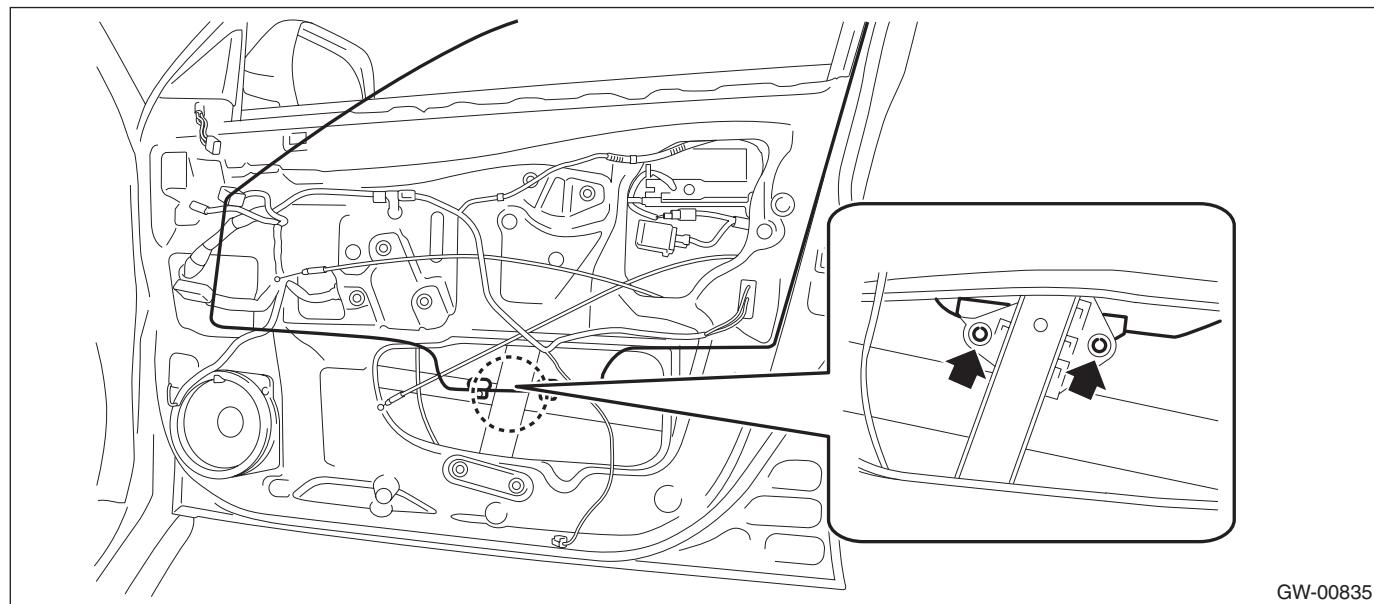


GW-00835

(3) While tilting the glass, remove the windshield glass.

CAUTION:

Avoid impact and damage to the glass.

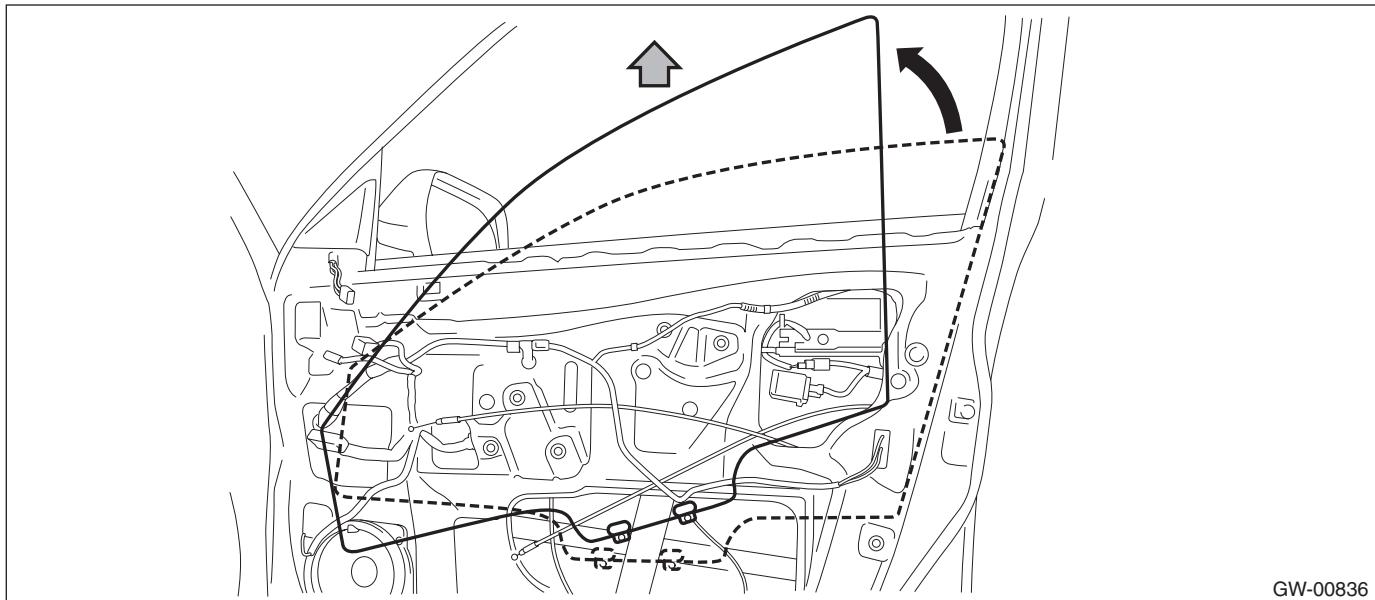

B: INSTALLATION

CAUTION:

Make sure that the glass run rubber is placed securely in the door frame and sash.

Install each part in the reverse order of removal.

Tightening torque:

Refer to “COMPONENT” of “General Description”. <Ref. to GW-4, FRONT DOOR GLASS, COMPONENT, General Description.>