


6. Front Regulator and Motor Assembly

A: REMOVAL

- 1) Remove the front door glass. <Ref. to GW-18, REMOVAL, Front Door Glass.>
- 2) Remove the front regulator and motor assembly.
 - (1) Disconnect the connector.
 - (2) Remove the bolts, and then remove the front regulator and motor assembly.

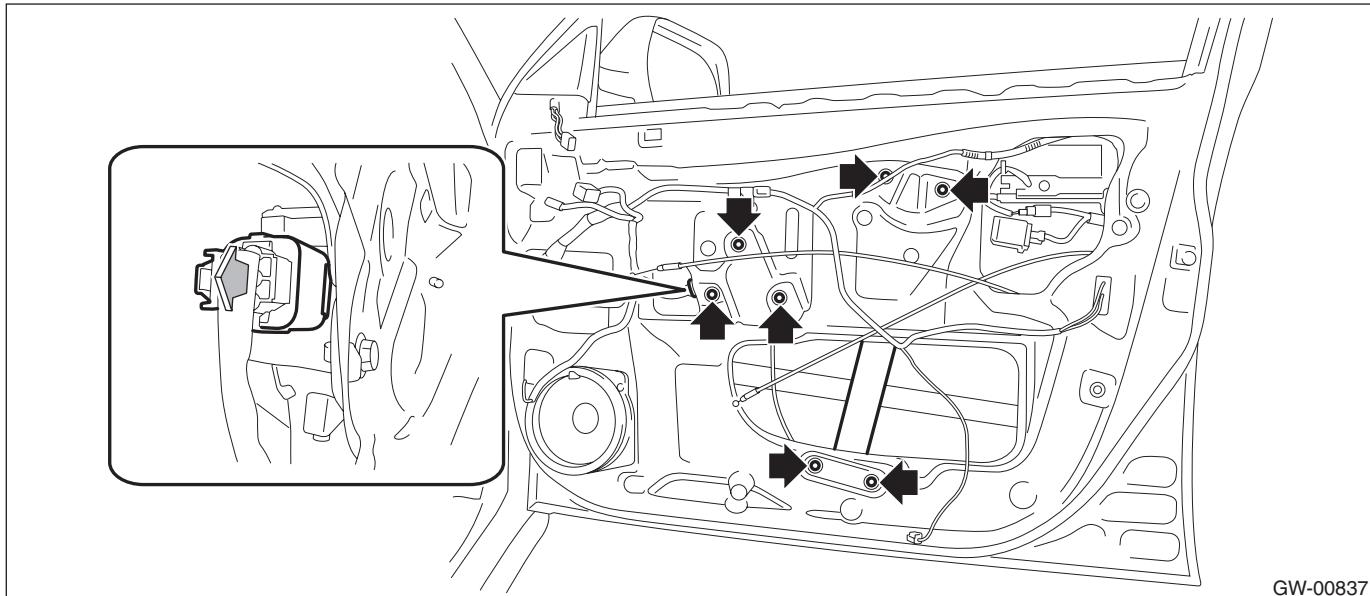

GW-00837

B: INSTALLATION


Install each part in the reverse order of removal.

Tightening torque:

Refer to "COMPONENT" of "General Description". <Ref. to GW-4, FRONT DOOR GLASS, COMPONENT, General Description.>

C: INSPECTION

- 1) Disconnect the motor connector.
- 2) Apply battery voltage between the motor connector terminals and check the motor operation.

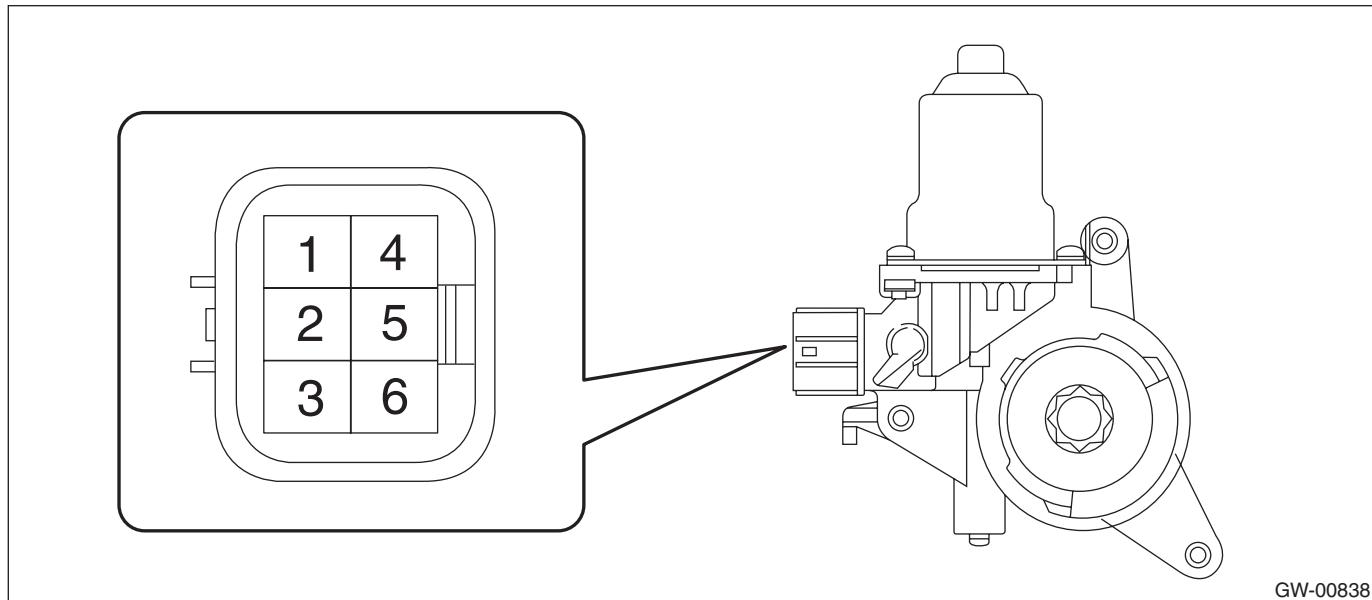

- RH side

| Terminal No. | Inspection conditions | Specification |
|---------------|---|---------------|
| 1 (+) — 4 (-) | Apply battery voltage between terminals | Increase |
| 4 (+) — 1 (-) | Apply battery voltage between terminals | Decrease |

- LH side

| Terminal No. | Inspection conditions | Specification |
|---------------|---|---------------|
| 3 (+) — 6 (-) | Apply battery voltage between terminals | Increase |
| 6 (+) — 3 (-) | Apply battery voltage between terminals | Decrease |

- 3) If the inspection results in improper operation, replace the front regulator and motor assembly.