

8. Scalp Cap


A: REPLACEMENT

1. MODEL WITHOUT ELECTRIC RETRACTABLE MIRROR


CAUTION:

- When removing the mirror, be careful not to damage the back surface of mirror with a flat tip screwdriver.
- When installing the mirror, insert the connector and clip securely.

- 1) Operate the remote control mirror switch to face the mirror surface upward.
- 2) Disconnect the ground cable from battery.
- 3) Remove the outer mirror.
 - (1) Disconnect the clips using a flat tip screwdriver.

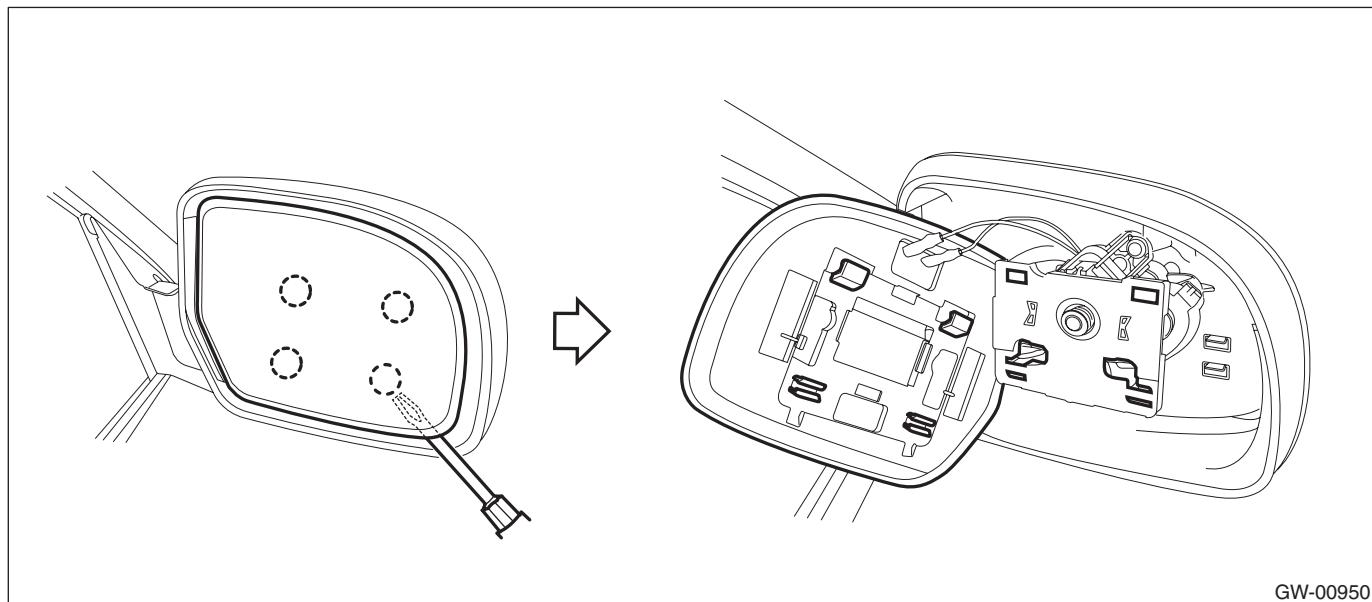

(2) Disconnect the mirror heater connector. (Model with mirror heater)

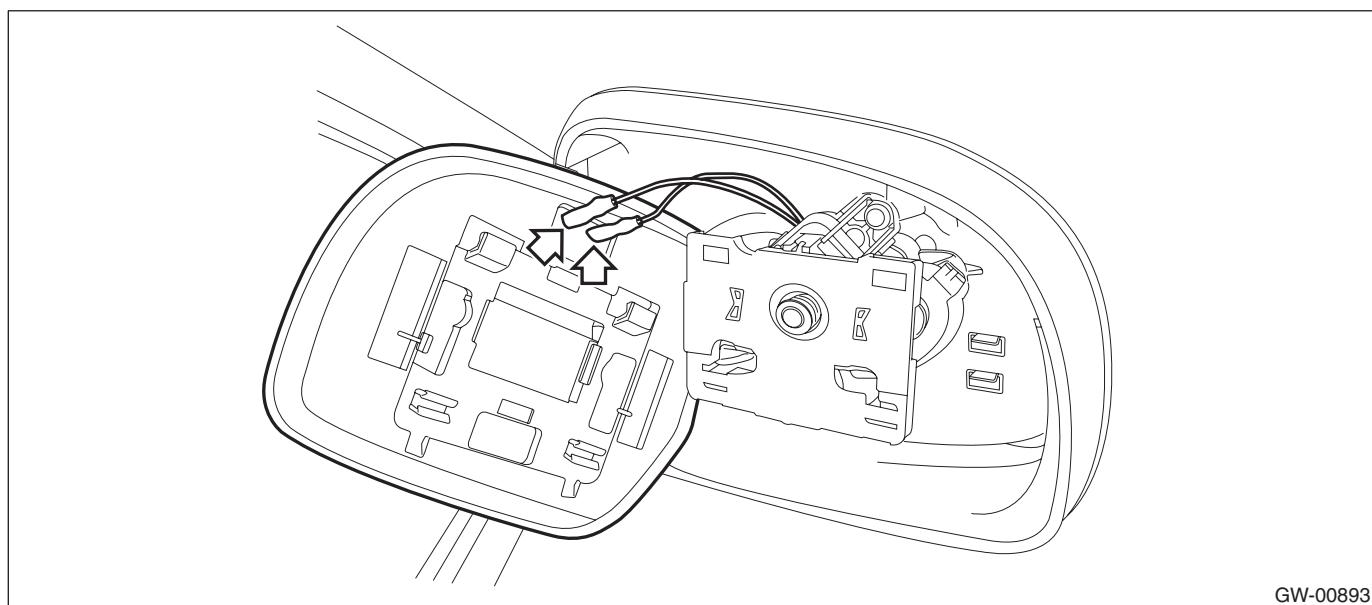


Scalp Cap

GLASS/WINDOWS/MIRRORS

4) Disconnect the claws and then remove the scalp cap.


CAUTION:

Be careful not to apply excessive force when removing the scalp cap, as the lower hooks may become damaged.

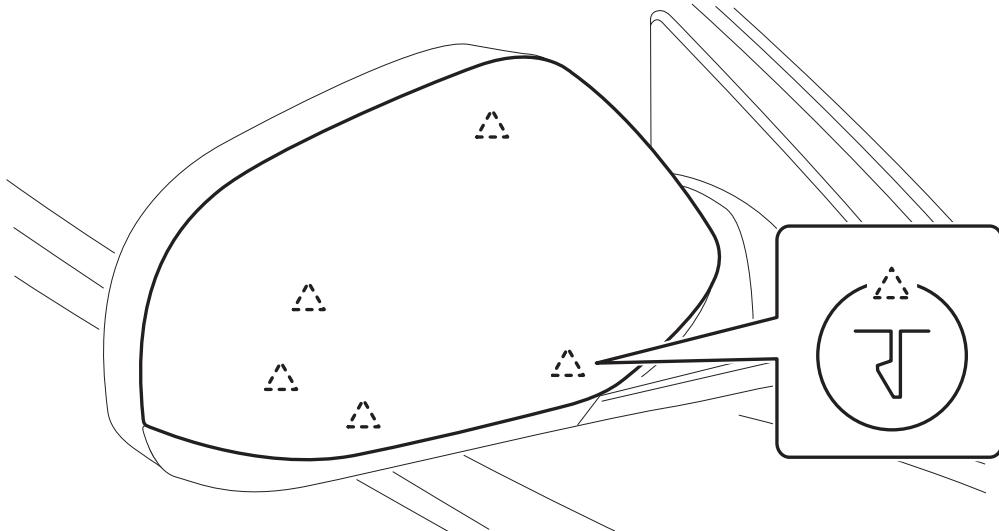

GW-00947

5) Engage the claws into the hole and install the scalp cap.

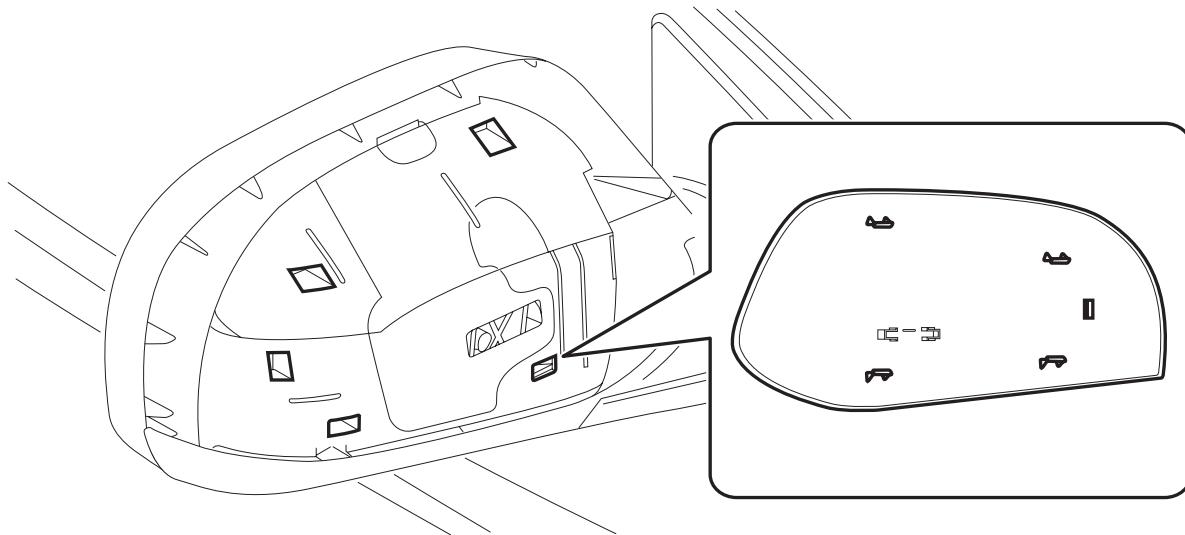

GW-00948


6) Check that all the claws are securely engaged.

2. MODEL WITH ELECTRIC RETRACTABLE MIRROR


CAUTION:

- When removing the mirror, be careful not to damage the back surface of mirror with a flat tip screwdriver.
- When installing the mirror, insert the connector and clip securely.

- 1) Operate the remote control mirror switch to face the mirror surface upward.
- 2) Disconnect the ground cable from battery.
- 3) Remove the outer mirror.
 - (1) Disconnect the clips using a flat tip screwdriver.

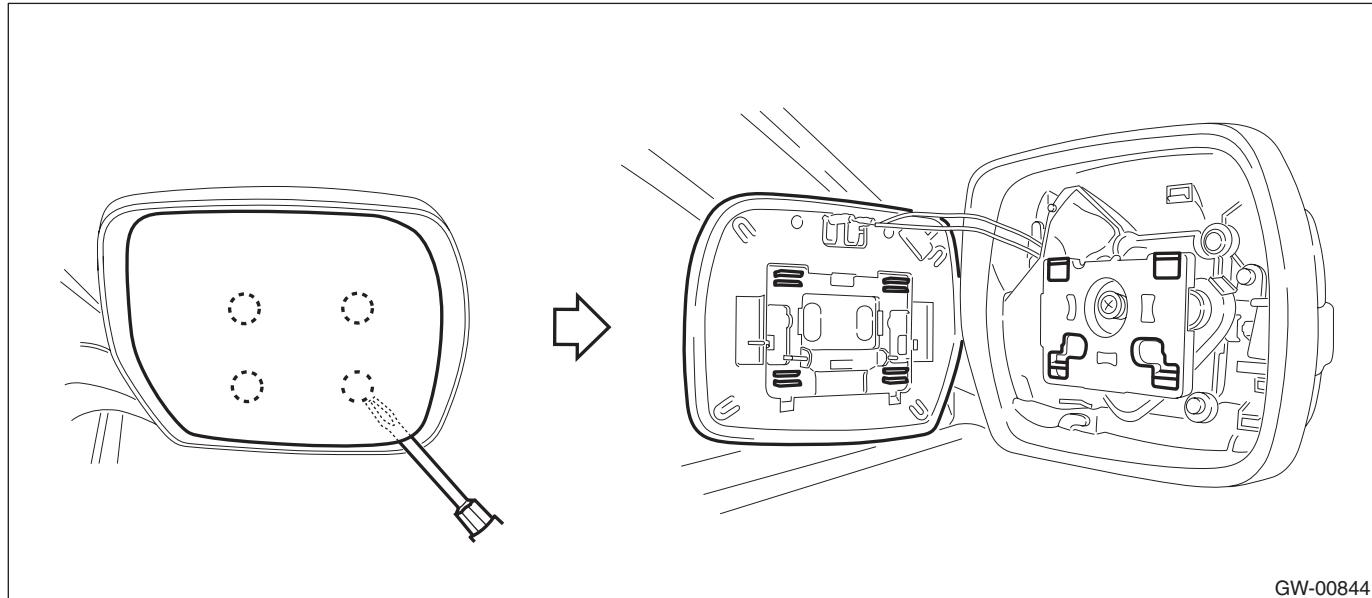

- (2) Disconnect the mirror heater connector. (Model with mirror heater)

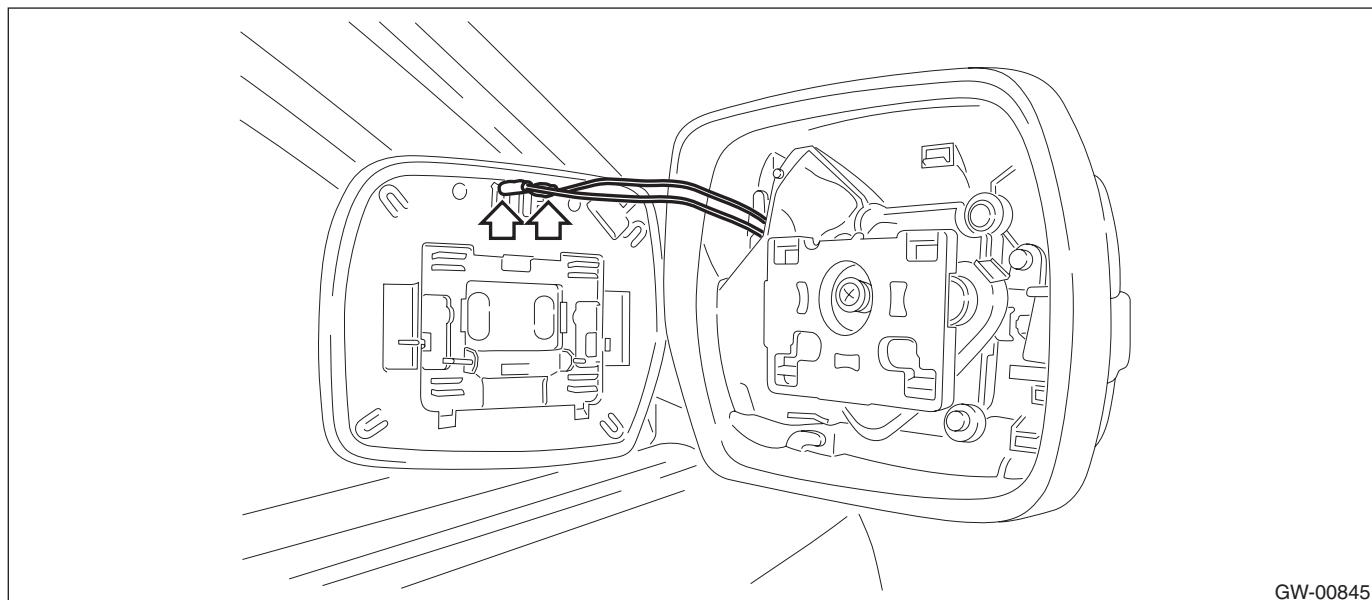


Scalp Cap

GLASS/WINDOWS/MIRRORS

4) Disconnect the claws and then remove the scalp cap.


CAUTION:

Be careful not to apply excessive force when removing the scalp cap, as the lower hooks may become damaged.

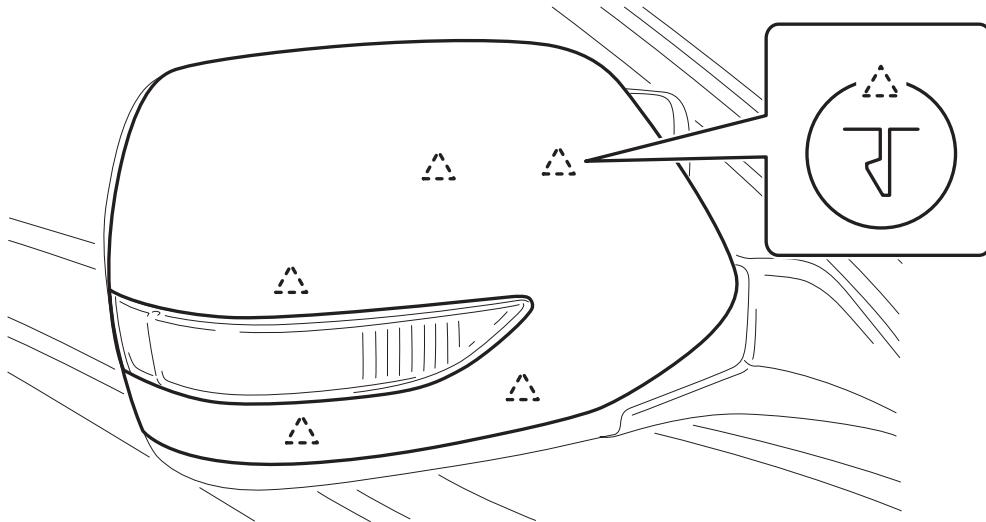

GW-00839

5) Engage the claws into the hole and install the scalp cap.

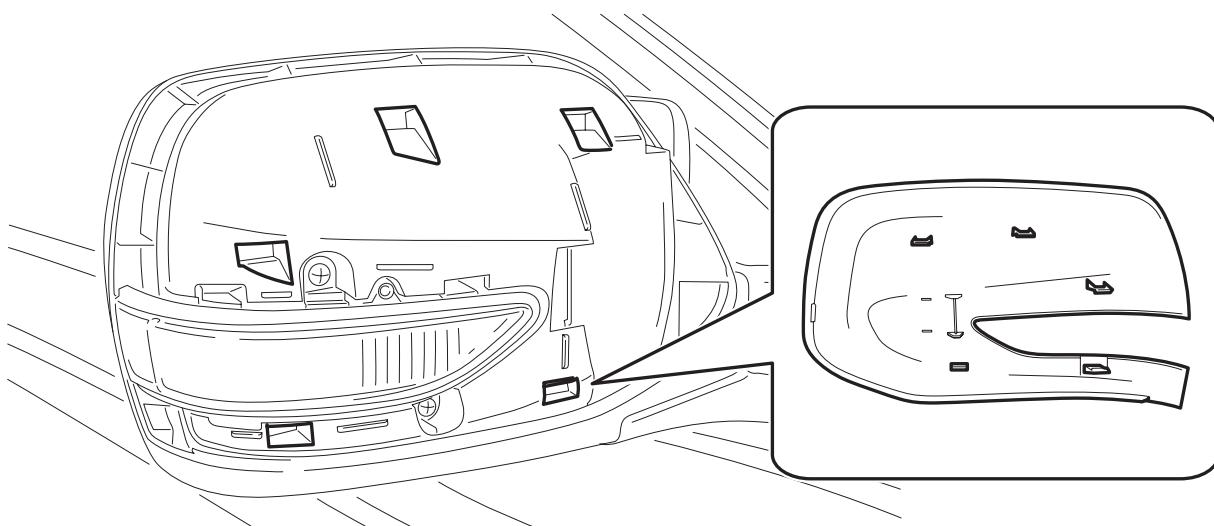

GW-00840

6) Check that all the claws are securely engaged.