

### 14. Control Panel

#### A: REMOVAL


##### 1. AUTO A/C MODEL

- 1) Disconnect the ground cable from battery.
- 2) Remove the center panel assembly.

**CAUTION:**

**Do not put your finger on the fin of the air vent grille. Doing so may damage the fin.**

- (1) Attach the protective tape (a) to the meter visor.

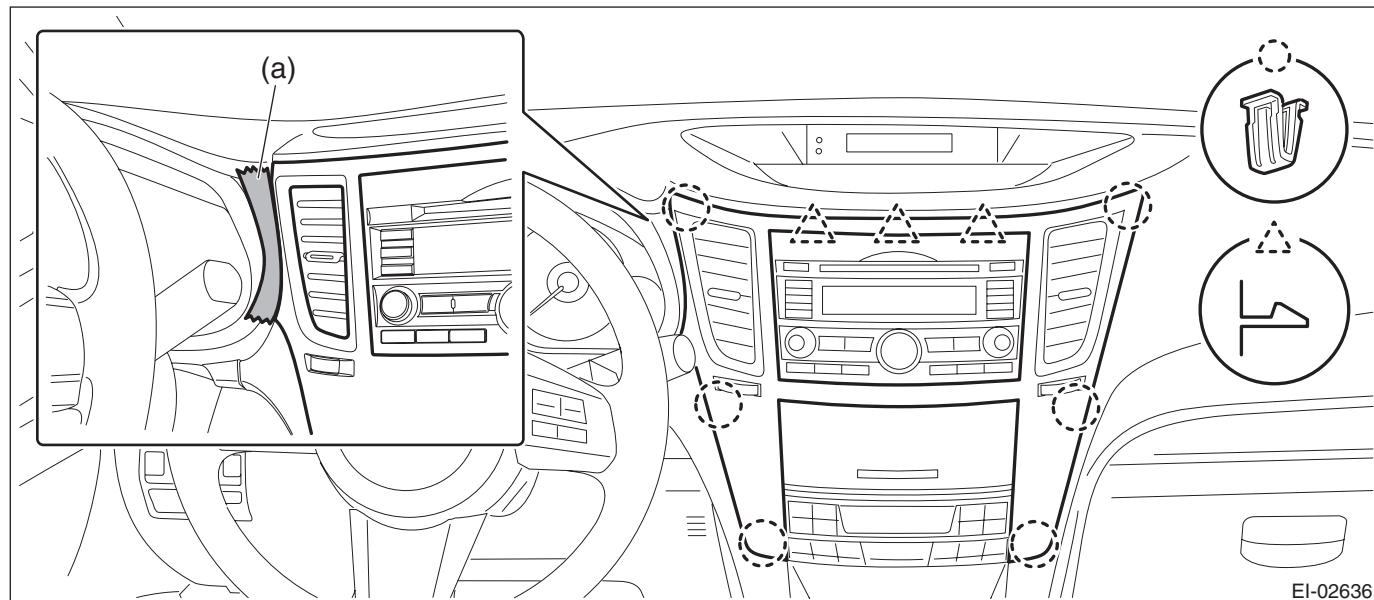


- (2) Insert a finger into the air vent grille and release the left and right clips at the top of the center panel. (A), (B)
- (3) Insert a finger into the air vent grille and release the left and right clips at the center of the center panel. (C), (D)

## Control Panel


### HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

(4) Release the clips at the bottom of the center panel and remove the center panel assembly.

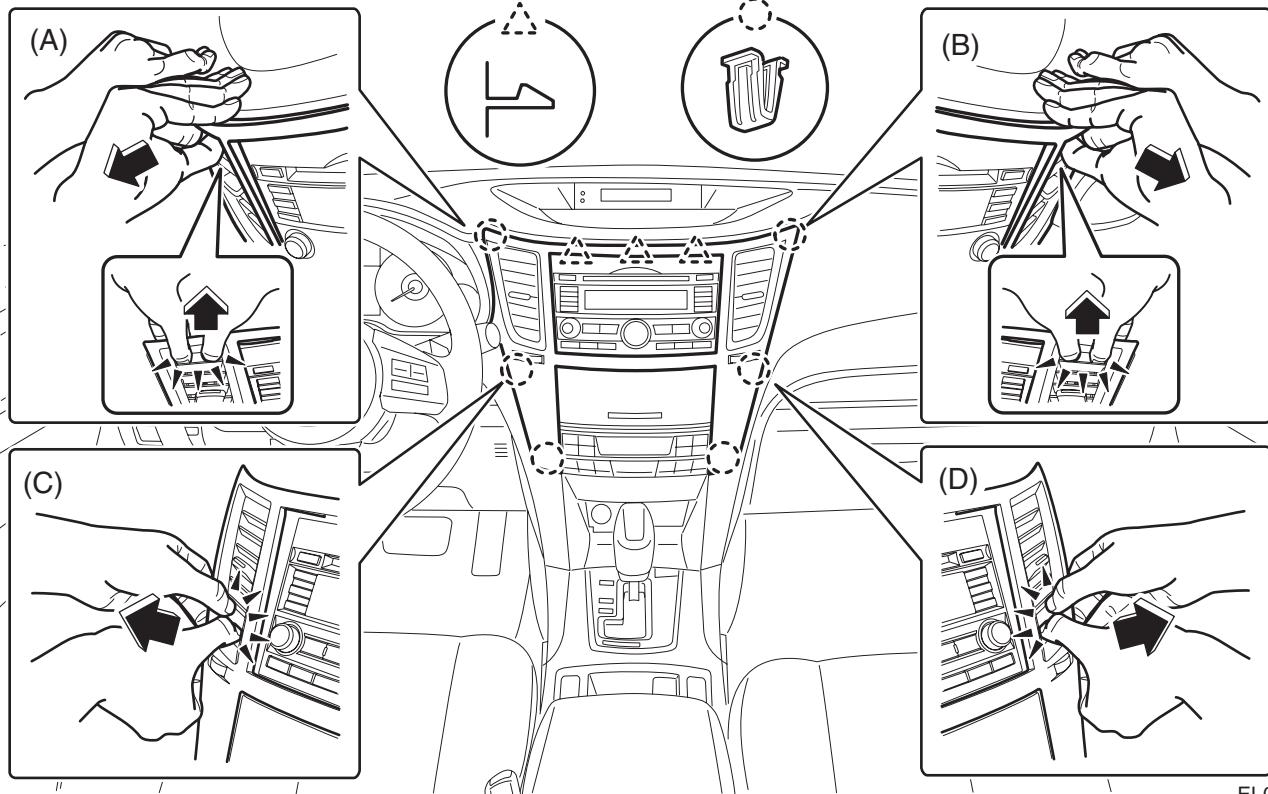

3) Remove the audio assembly.

- (1) Remove the left and right screws, and partially pull the audio out from center console.
- (2) Disconnect the connectors, and remove the audio assembly.

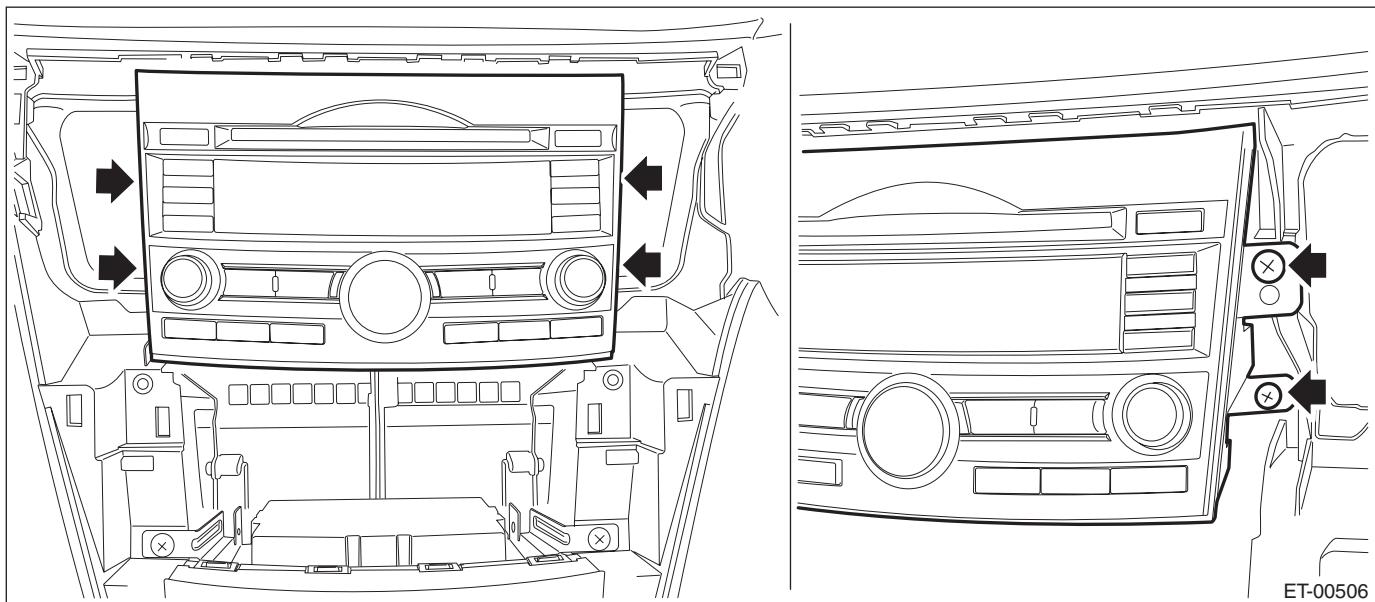


## Control Panel

### HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

4) Remove the navigation assembly. (model with navigation)


(1) Remove the left and right screws.

(2) Disconnect the connectors, and remove the navigation assembly.

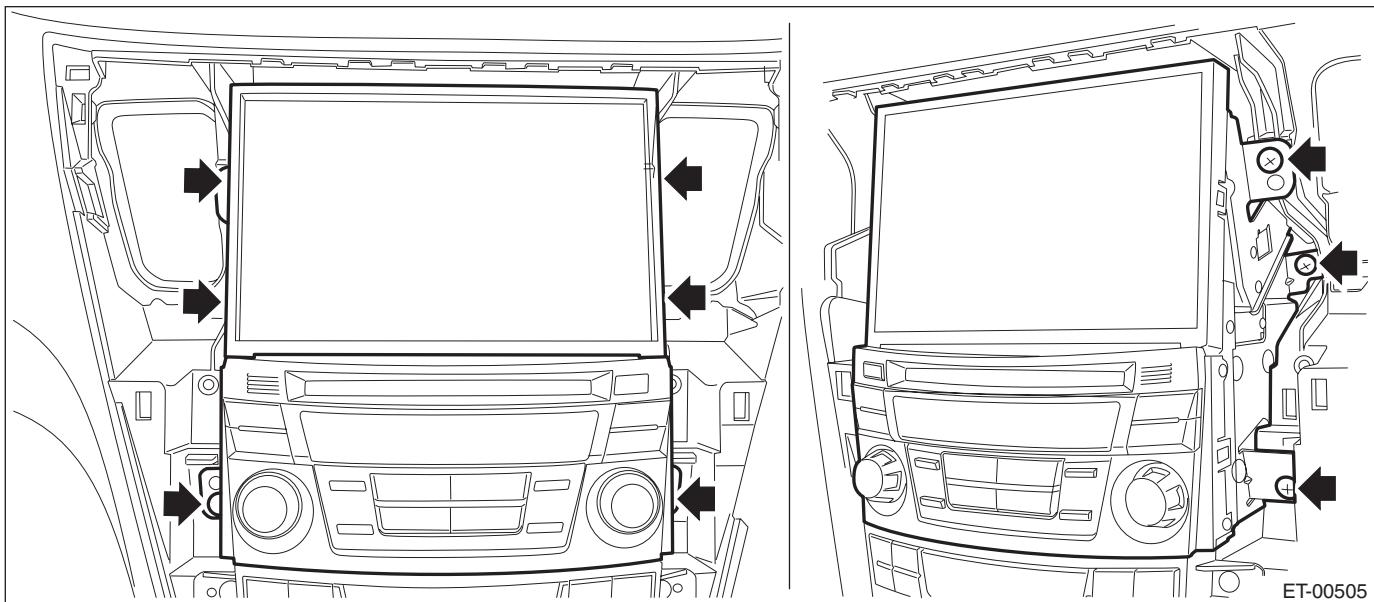

5) Remove the control panel.


(1) Remove the screws and release the clip.

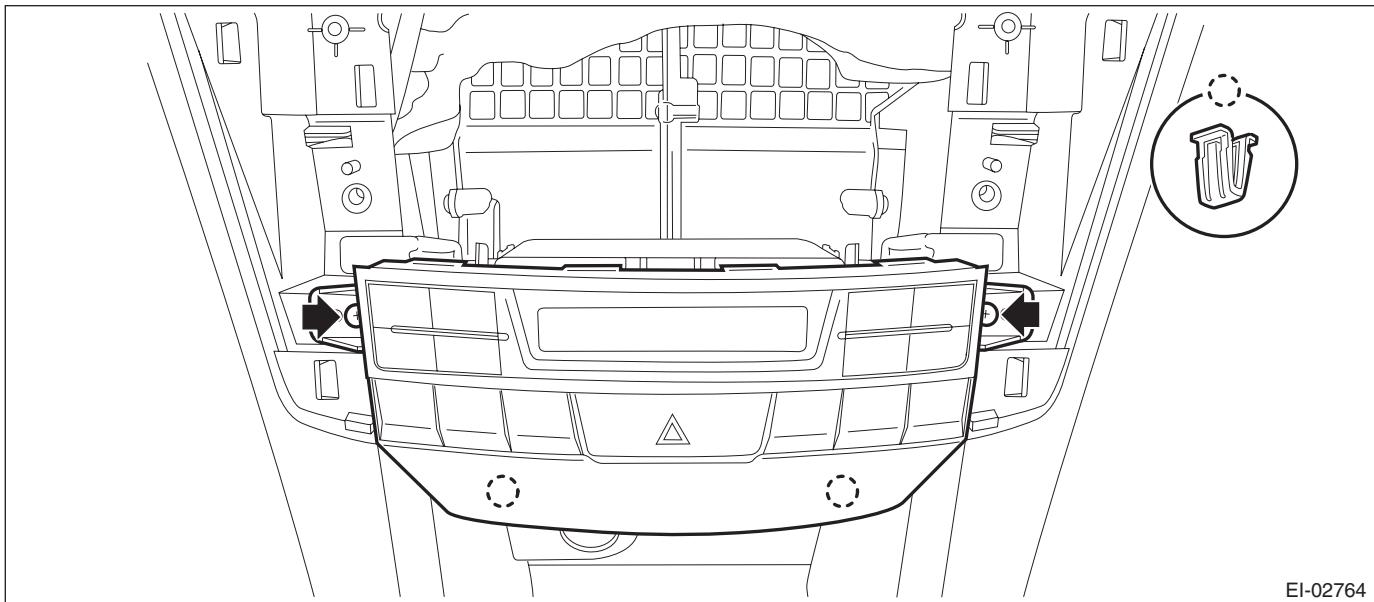

## Control Panel

### HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

(2) Pull forward the control module and disconnect the connector.

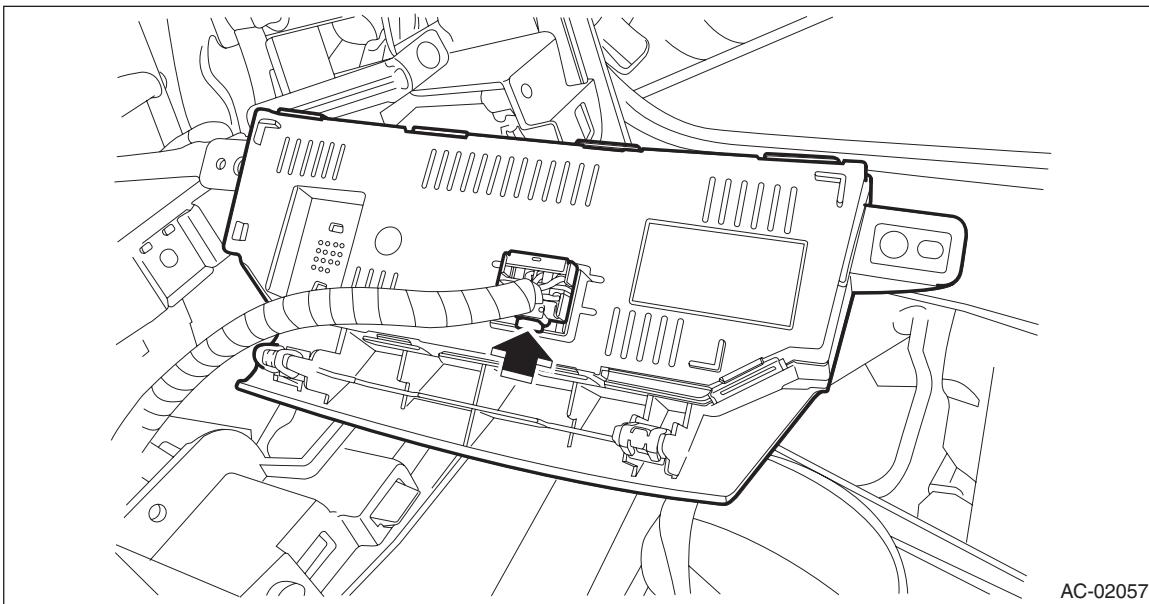


## 2. MANUAL A/C MODEL

- 1) Disconnect the ground cable from battery.
- 2) Remove the center panel assembly.

### CAUTION:

**Do not put your finger on the fin of the air vent grille. Doing so may damage the fin.**

(1) Attach the protective tape (a) to the meter visor.

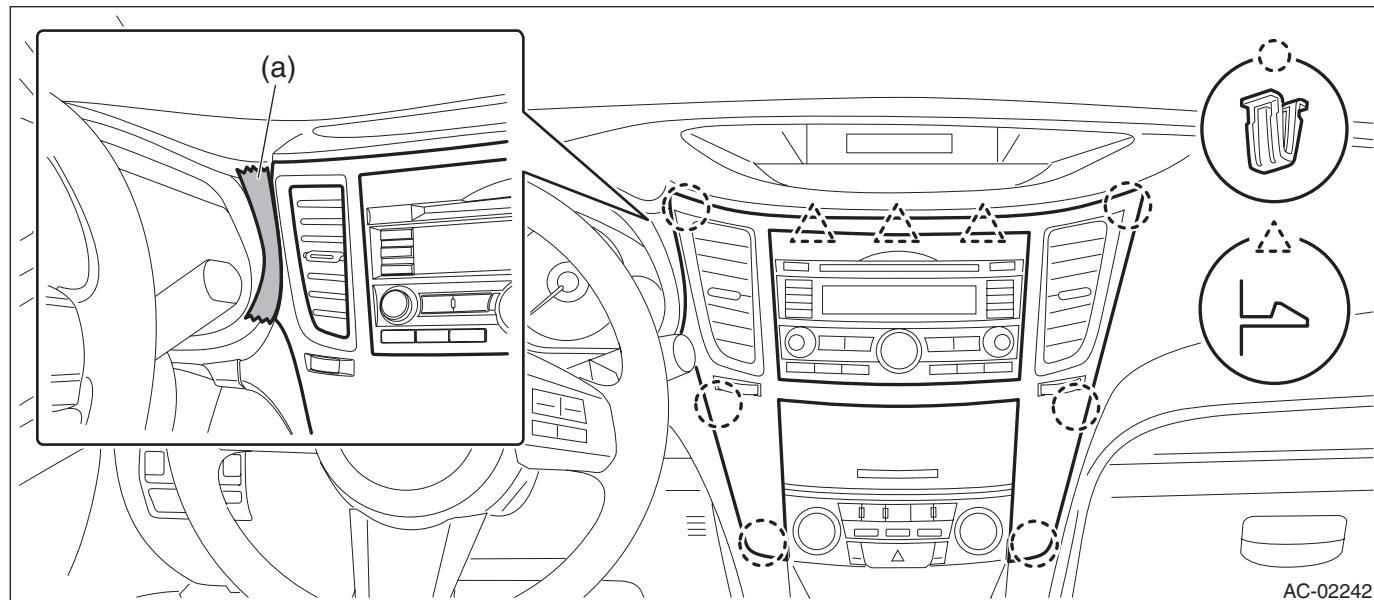


- (2) Insert a finger into the air vent grille and release the left and right clips at the top of the center panel. (A), (B)
- (3) Insert a finger into the air vent grille and release the left and right clips at the center of the center panel. (C), (D)

## Control Panel


### HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

(4) Release the clips at the bottom of the center panel and remove the center panel assembly.

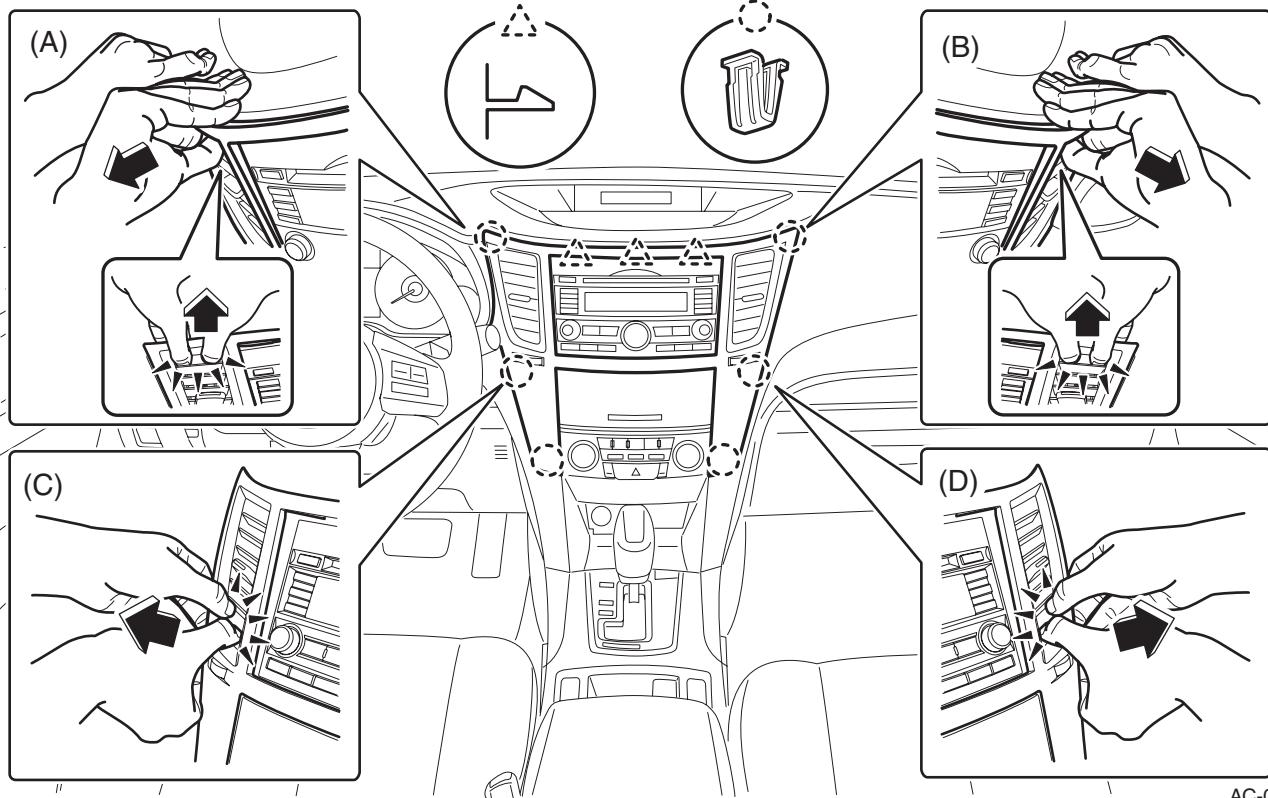

3) Remove the audio assembly.

- (1) Remove the left and right screws, and partially pull the audio out from center console.
- (2) Disconnect the connectors, and remove the audio assembly.

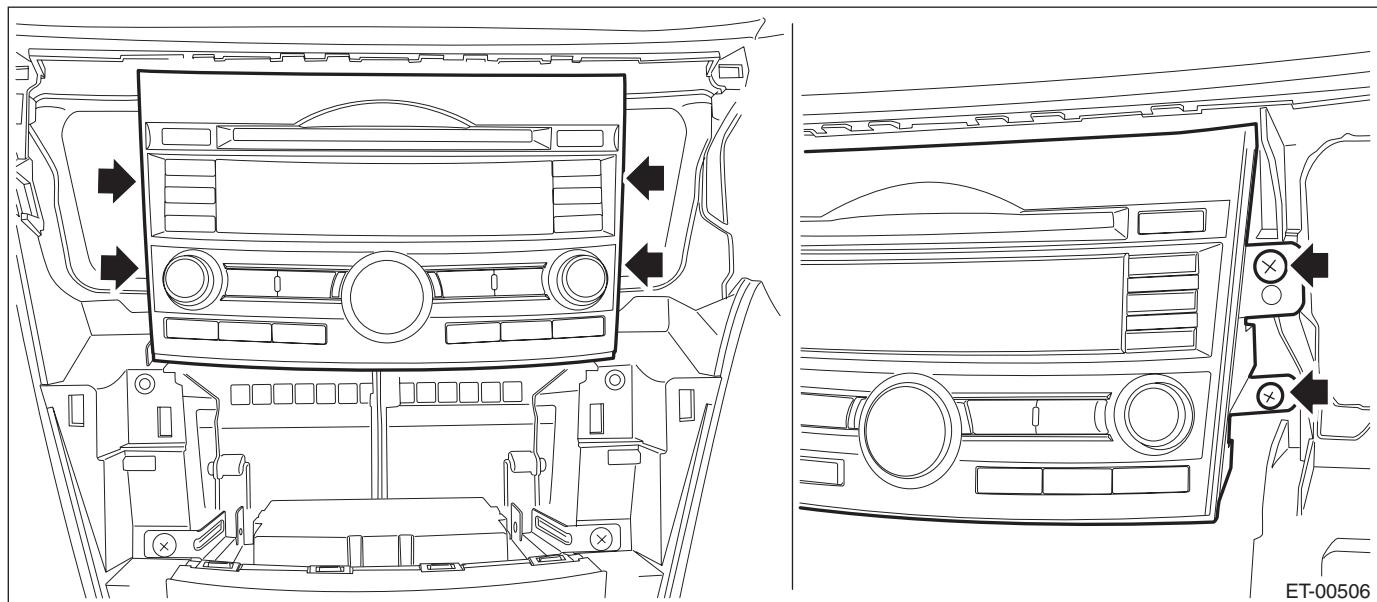


## Control Panel

### HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

4) Remove the navigation assembly. (model with navigation)


(1) Remove the left and right screws.

(2) Disconnect the connectors, and remove the navigation assembly.

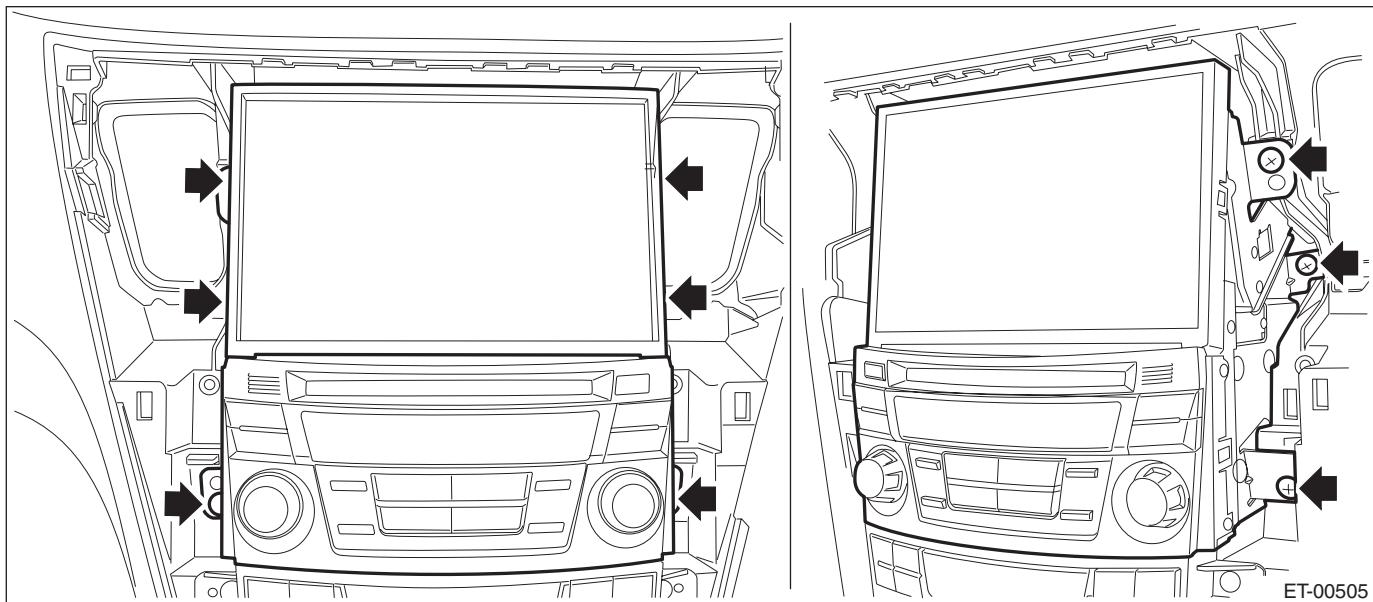

5) Remove the control panel.


(1) Remove the screws and release the clip.

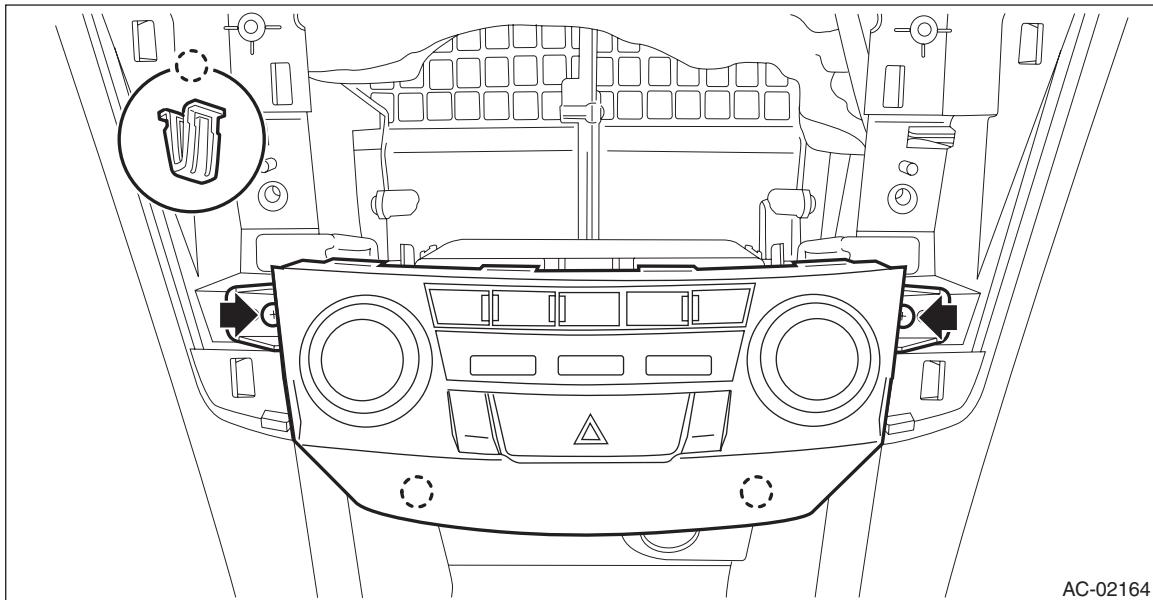

# Control Panel

## HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

(2) Pull the control panel and disconnect the connector.

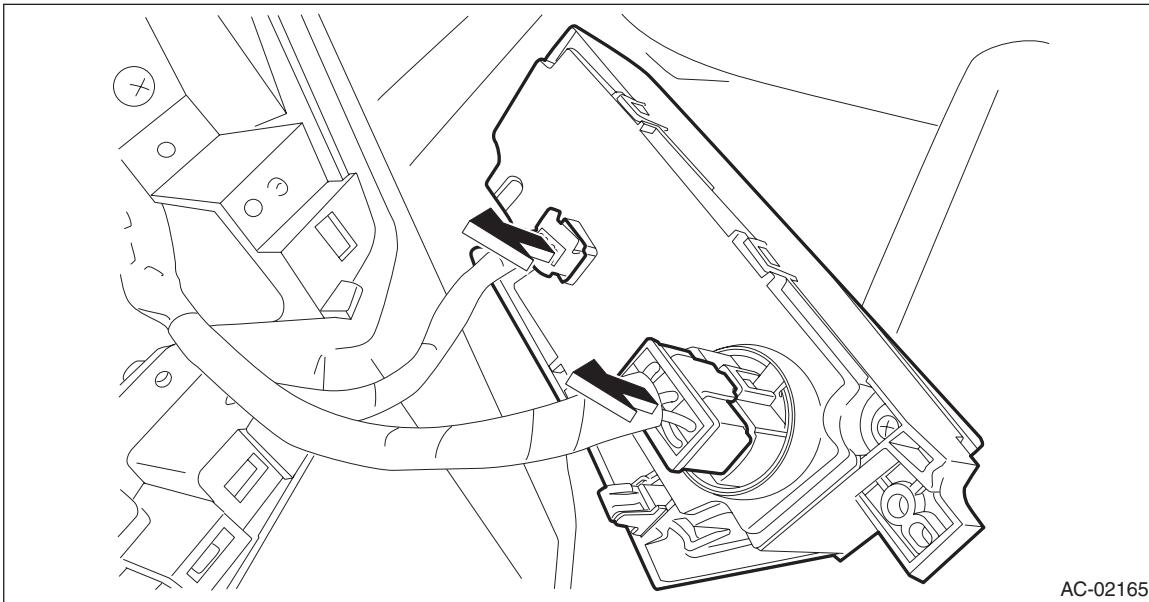

## B: INSTALLATION


Install each part in the reverse order of removal.

## C: INSPECTION

### 1. BLOWER SWITCH (MANUAL A/C MODEL)

- 1) Remove the control panel. <Ref. to AC-44, MANUAL A/C MODEL, REMOVAL, Control Panel.>
- 2) Check the resistance between blower switch terminals.

*Preparation tool: Circuit tester*

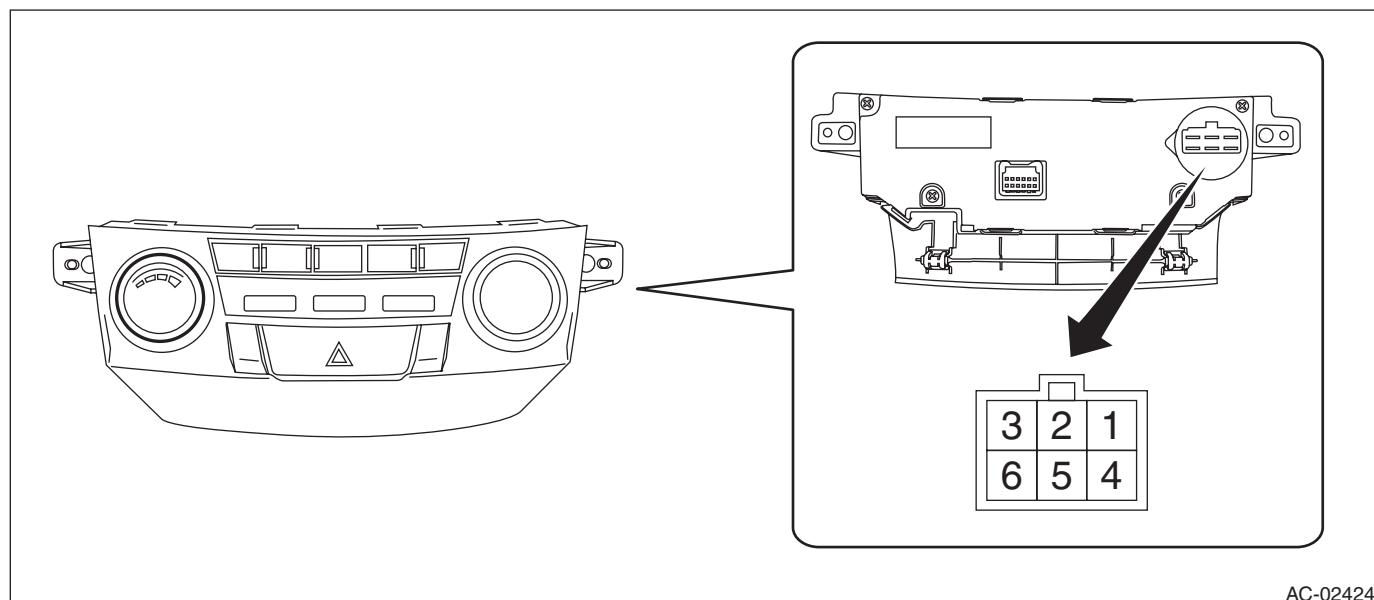

Terminal No.	Inspection Conditions	Standard
—	OFF	—
1 — 2, 4	1 (LO)	Less than 1 Ω
1 — 3, 4	2 (M1)	Less than 1 Ω
1 — 4, 6	3 (M2)	Less than 1 Ω
1 — 4, 5	4 (HI)	Less than 1 Ω

- 3) Replace the control panel if the inspection result is not within the standard value.