


Ambient Sensor (Auto A/C Model)

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

22. Ambient Sensor (Auto A/C Model)

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the ambient sensor.
 - (1) Disconnect the connector.
 - (2) Remove the ambient sensor from the radiator lower panel.

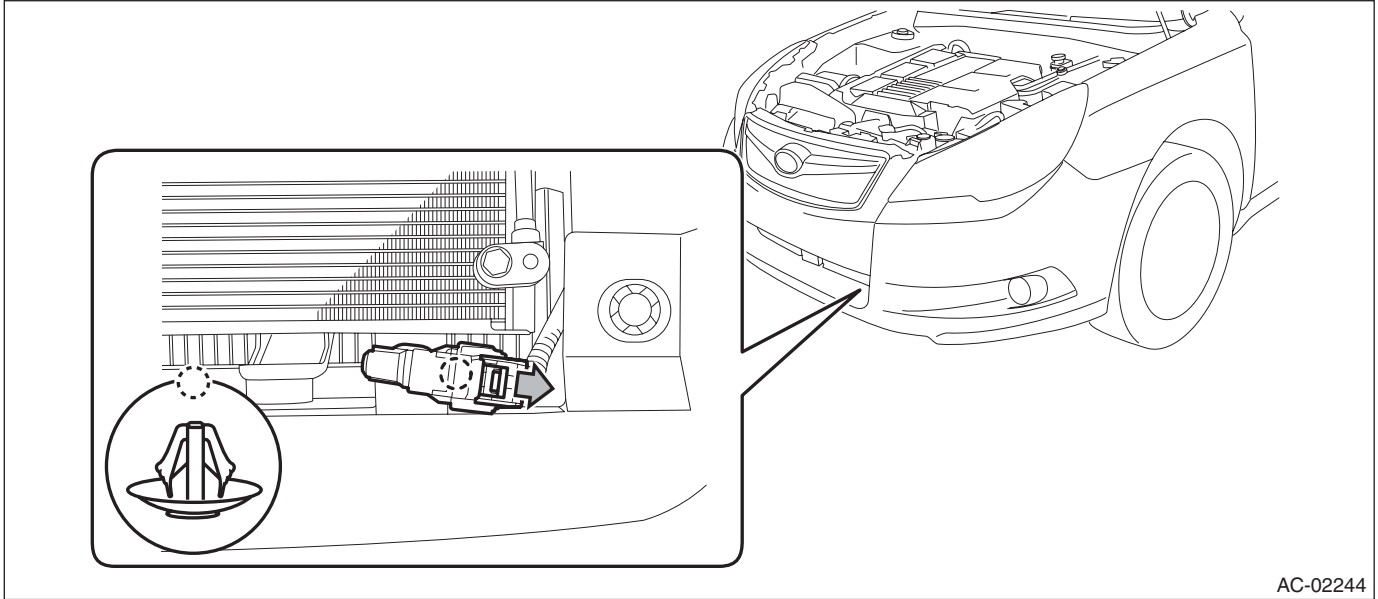

AC-02244

B: INSTALLATION

Install each part in the reverse order of removal.

Ambient Sensor (Auto A/C Model)

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)


C: INSPECTION

- 1) Visually check the ambient sensor for dirt or damage, and clean or replace as necessary.
- 2) Disconnect the ambient sensor connector.
- 3) Check the resistance between ambient sensor terminals.

CAUTION:

During inspection, be careful not to touch the sensor end in order to avoid misjudgment due to body temperature.

Preparation tool: Circuit tester

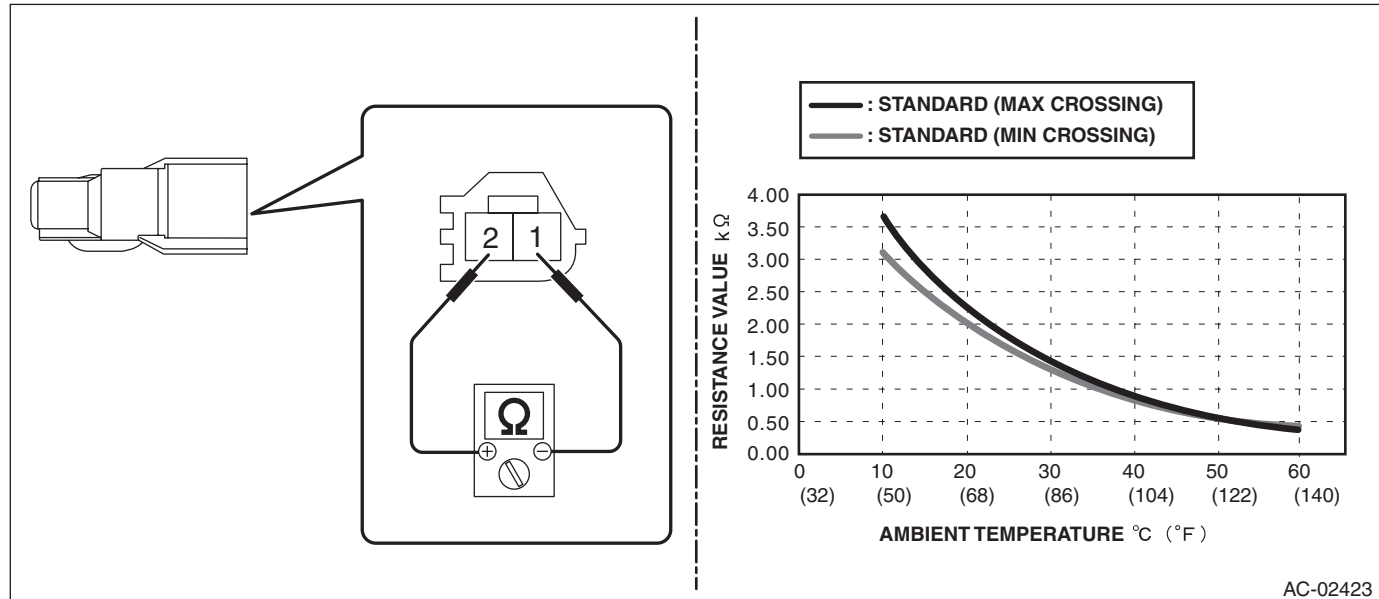

- 4) Replace the ambient sensor if the inspection result is not within the standard value.