


Heater Vent Duct

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

27.Heater Vent Duct

A: REMOVAL

- 1) Remove the instrument panel face assembly. <Ref. to EI-75, REMOVAL, Instrument Panel Assembly.>
- 2) Remove the heater vent duct.
 - (1) Remove the screws and detach the front vent duct (A).
 - (2) Release the claws and remove the screws, then detach the side vent ducts LH and RH (B).

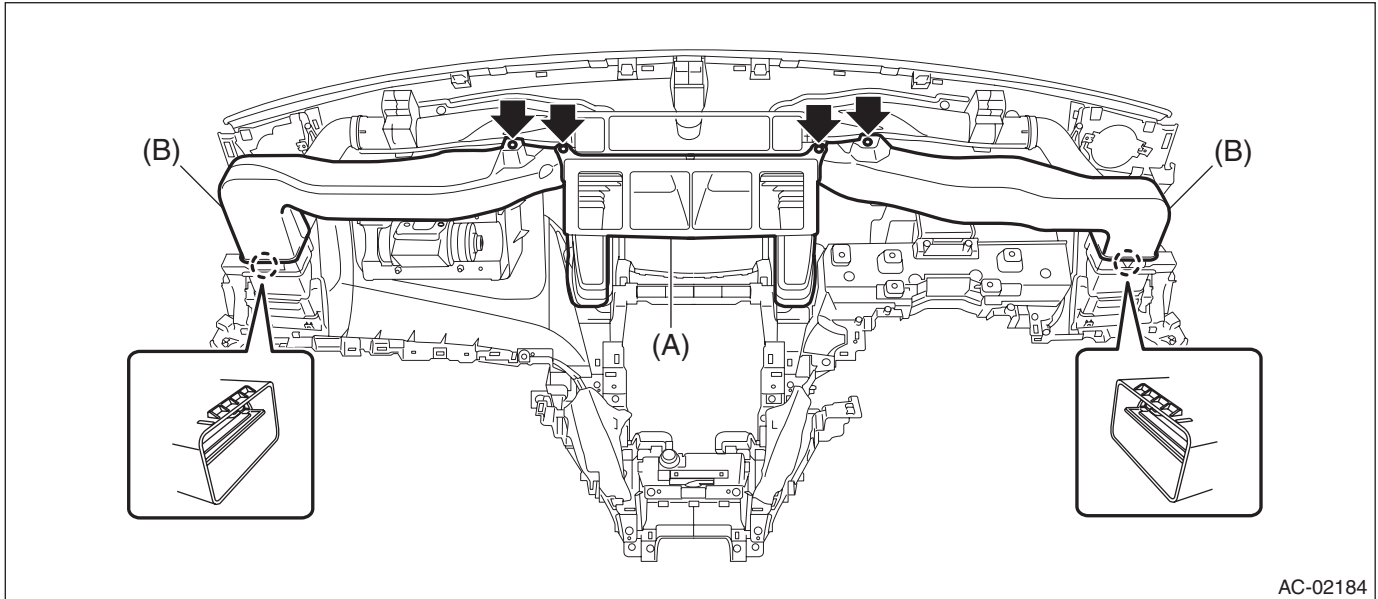

AC-02184

B: INSTALLATION

Install each part in the reverse order of removal.