


7. Relay and Fuse

A: LOCATION

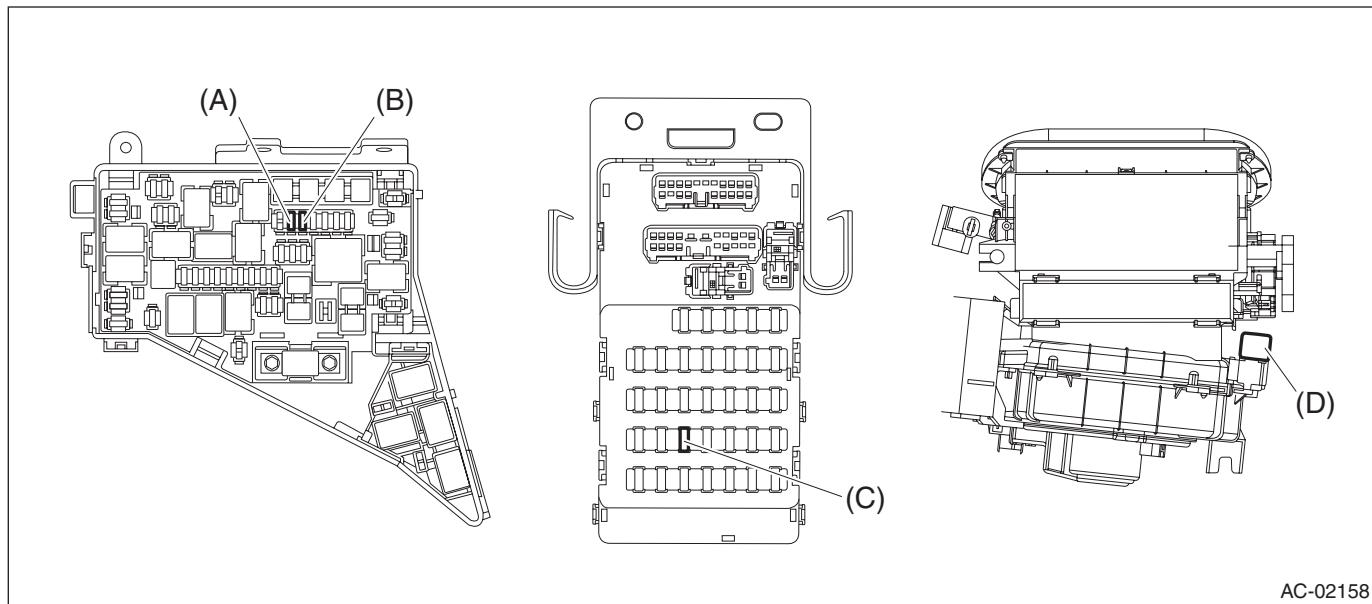

| | | |
|-------------------|--------------------|-----|
| Main fuse box | Fuse 15 A | (A) |
| | Fuse 15 A | (B) |
| Relay & fuse box | Fuse 15 A | (C) |
| Blower motor unit | Blower motor relay | (D) |

NOTE:

For other related fuses, refer to the wiring diagram. <Ref. to WI-15, Power Supply Circuit.>


B: INSPECTION

1. CHECK FUSE.

- 1) Remove the fuse and check visually.
- 2) If the fuse is blown out, replace the fuse.

2. CHECK RELAY

- 1) Check the resistance between relay terminals.
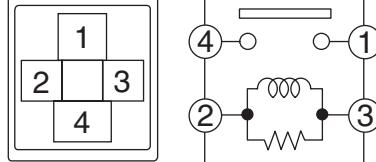
| Terminal No. | Inspection conditions | Standard | Circuit |
|--------------|--|---------------|---|
| 1 — 4 | Always | 1 MΩ or more |  |
| 1 — 4 | Apply battery voltage between 2 — 3 terminals. | Less than 1 Ω | |

- 2) Replace the relay if the inspection result is not within the standard value.