

## 8. Compressor Oil

### A: PROCEDURE

NOTE:

Before making repairs, perform the oil return operation to return the compressor oil in circulation with the refrigerant to the compressor.

- 1) Increase the engine to 1,500 rpm.
- 2) Turn the A/C switch to ON.
- 3) Turn the temperature control switch or dial to MAX COOL.
- 4) Turn the FRESH/RECIRC switch to RECIRC position.
- 5) Turn the airflow adjustment switch or dial to HI (MAX).
- 6) Leave in this condition for 10 minutes.

### B: REPLACEMENT

NOTE:

- If a component has been replaced, add an appropriate amount of compressor oil (same as the amount of remaining oil in removed component).
- When replacing the compressor, the new compressor will already have the specified amount of oil in it. Install the new compressor so that the amount of oil becomes the same as the amount of remaining oil in the removed compressor.
- Since the hygroscopicity of compressor oil is high, perform this series of works quickly.