


# Front Turn Signal Light Bulb

## LIGHTING SYSTEM

### 15. Front Turn Signal Light Bulb

#### A: REMOVAL


- 1) Disconnect the ground cable from battery.
- 2) Remove the clips and remove the air intake duct. (When removing the front turn signal light bulb RH)

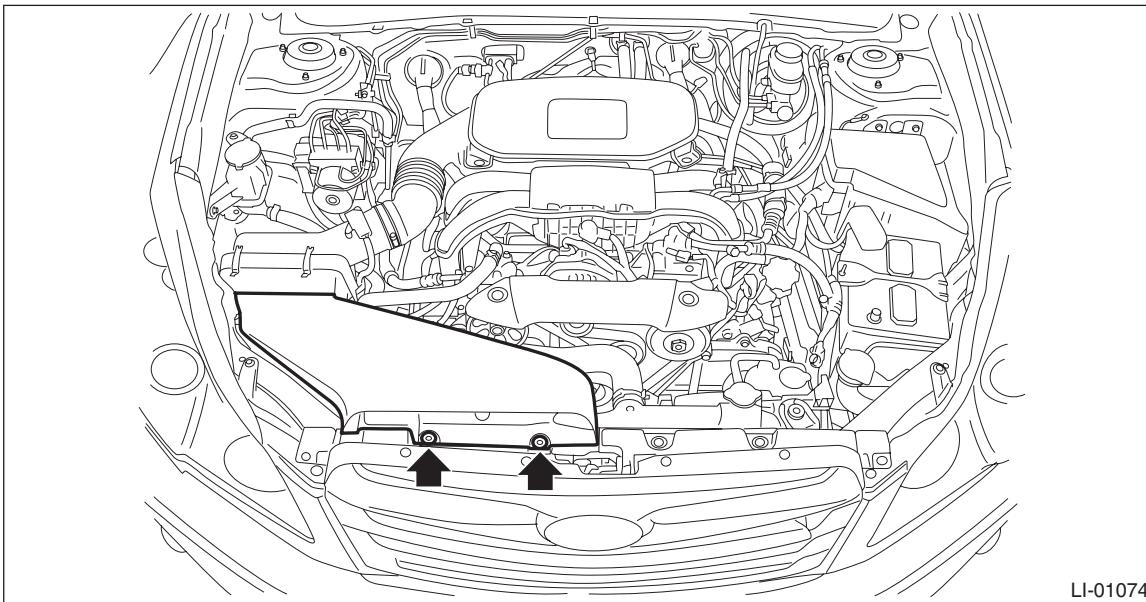


- 3) Remove the fender cover assembly UPR.

(1) Remove the clip.

(2) Release the claws of the fender cover assembly UPR by pulling it forward and remove the fender cover.

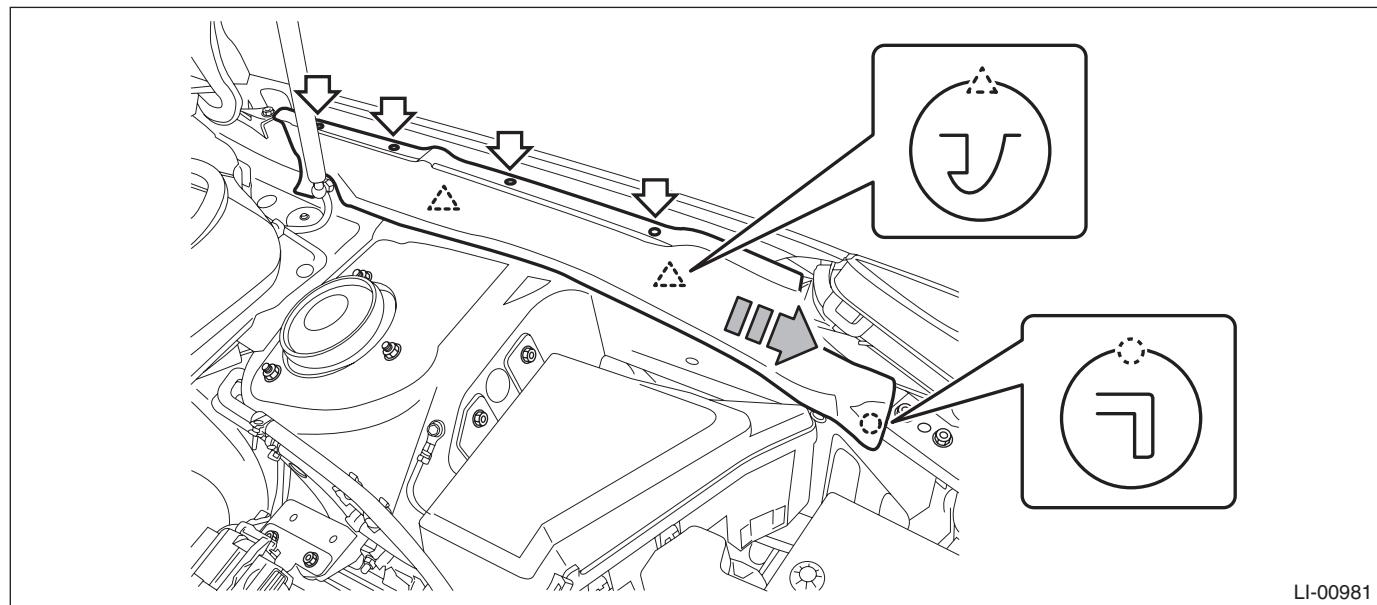

4) Remove the bulb socket and turn signal light bulb.

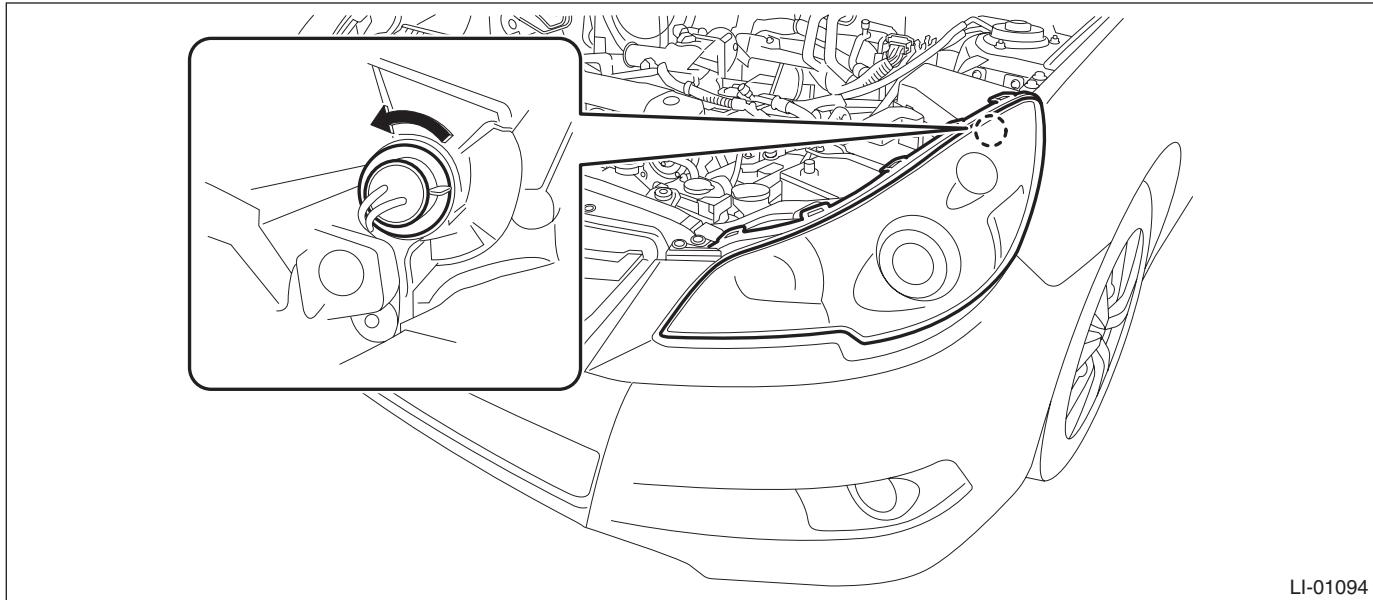

## B: INSTALLATION

Install each part in the reverse order of removal.

## C: INSPECTION

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATION, General Description.>
- 3) Replace the bulb if it is found defective.