



17. Front Side Marker Light Bulb

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the clips and remove the air intake duct. (When removing the front turn signal light bulb RH)

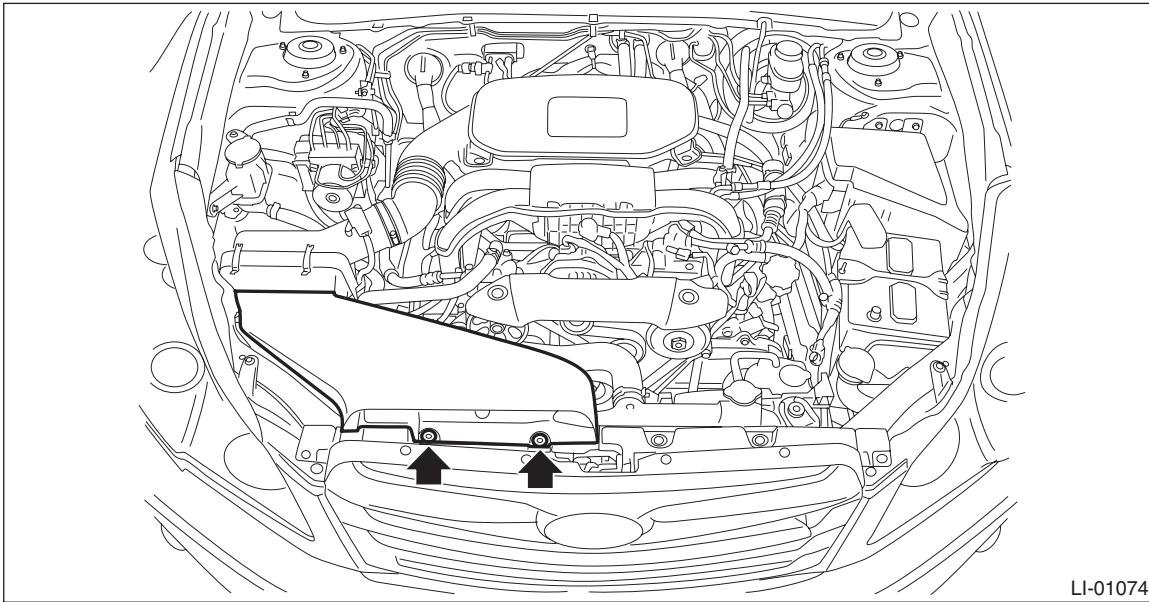


- 3) Turn the steering wheel in the opposite direction to the headlight to be removed. Then remove the clips and turn over the mud guard.

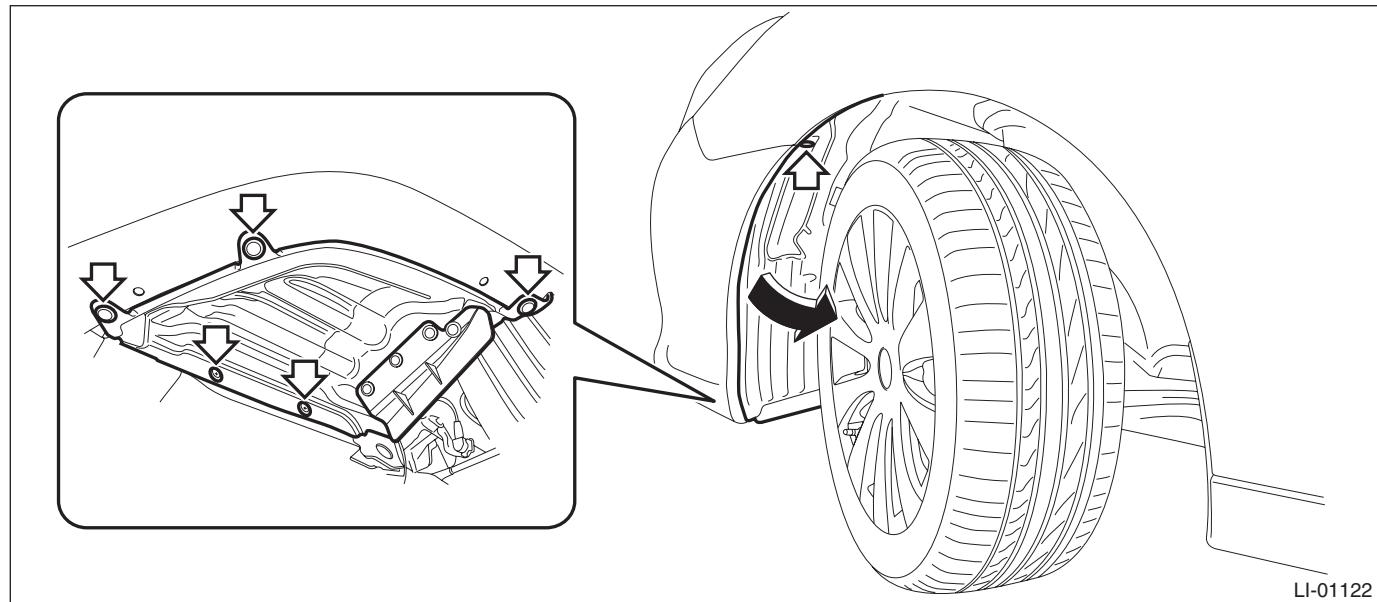

Front Side Marker Light Bulb

LIGHTING SYSTEM

- 4) Remove the bulb socket and turn signal light bulb.

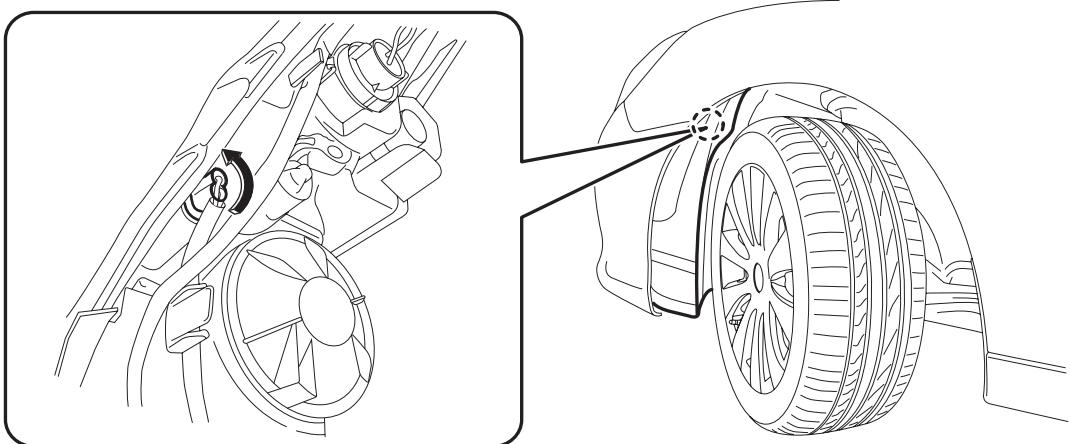

LI-01091

B: INSTALLATION

Install each part in the reverse order of removal.

C: INSPECTION

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATION, General Description.>
- 3) Replace the bulb if it is found defective.