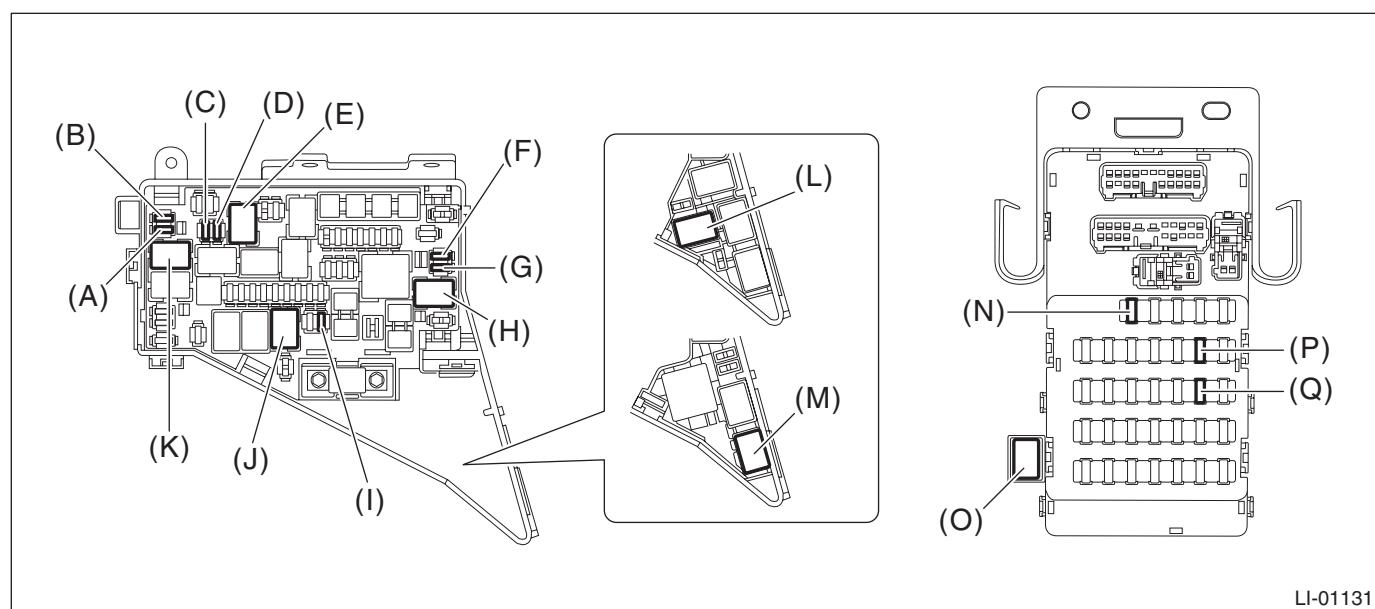


2. Relay and Fuse

A: LOCATION



LI-01131

Main fuse box	Fuse 15A (front combination light RH)	(A)
	Fuse 15A (front combination light LH)	(B)
	Fuse 10A (front combination light LH)	(C)
	Fuse 10A (front combination light RH)	(D)
	Headlight relay (Hi)	(E)
	Fuse 10A (front fog light LH)	(F)
	Fuse 10A (front fog light RH)	(G)
	Front fog light relay	(H)
	Fuse 10A (rear combination light)	(I)
	Tail & Illumination relay	(J)
	Headlight relay (Lo)	(K)
	Daytime running light relay (H4 model)	(L)
A/C relay holder (in main fuse box)	Daytime running light relay (H6 model)	(M)
	Fuse 15A (trailer connector)	(N)
	Back-up light relay	(O)
	Fuse 7.5A (turn signal & hazard unit)	(P)
Relay & fuse box	Fuse 7.5A (inhibitor switch, back-up light relay)	(Q)

NOTE:

For other related fuses, refer to the wiring diagram. <Ref. to WI-15, Power Supply Circuit.>

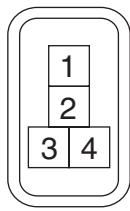
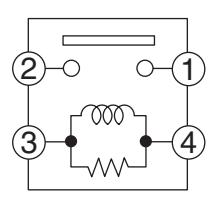
B: INSPECTION

1. CHECK FUSE.

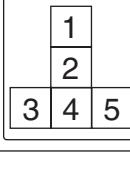
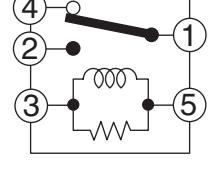
- 1) Remove the fuse and check visually.
- 2) If the fuse is blown out, replace the fuse.

2. CHECK RELAY

- 1) Check the resistance between relay terminals.

Terminal No.	Inspection conditions	Specification	Circuit
1 — 2	Always	1 MΩ or more	 
1 — 2	Apply battery voltage between 4 — 3 terminals.	Less than 1 Ω	

SR-00180

Terminal No.	Inspection conditions	Specification	Circuit
1 — 2	Always	1 MΩ or more	 
1 — 4	Always	Less than 1 Ω	
1 — 2	Apply battery voltage between 3 — 5 terminals.	Less than 1 Ω	

SL-01085

- 2) Replace the relay if the inspection result is not within the standard value.