

# Rear Combination Light Assembly

## LIGHTING SYSTEM

### 21. Rear Combination Light Assembly


#### A: REMOVAL

##### 1. SEDAN MODEL

- 1) Disconnect the ground cable from battery.
- 2) Remove the trunk room trim. <Ref. to EI-127, REMOVAL, Trunk Room Trim.>
- 3) Remove the rear combination light assembly.
  - (1) Disconnect the connector.
  - (2) Release the nuts and clips, then remove the rear combination light assembly.

##### CAUTION:


Be careful not to damage the clips.

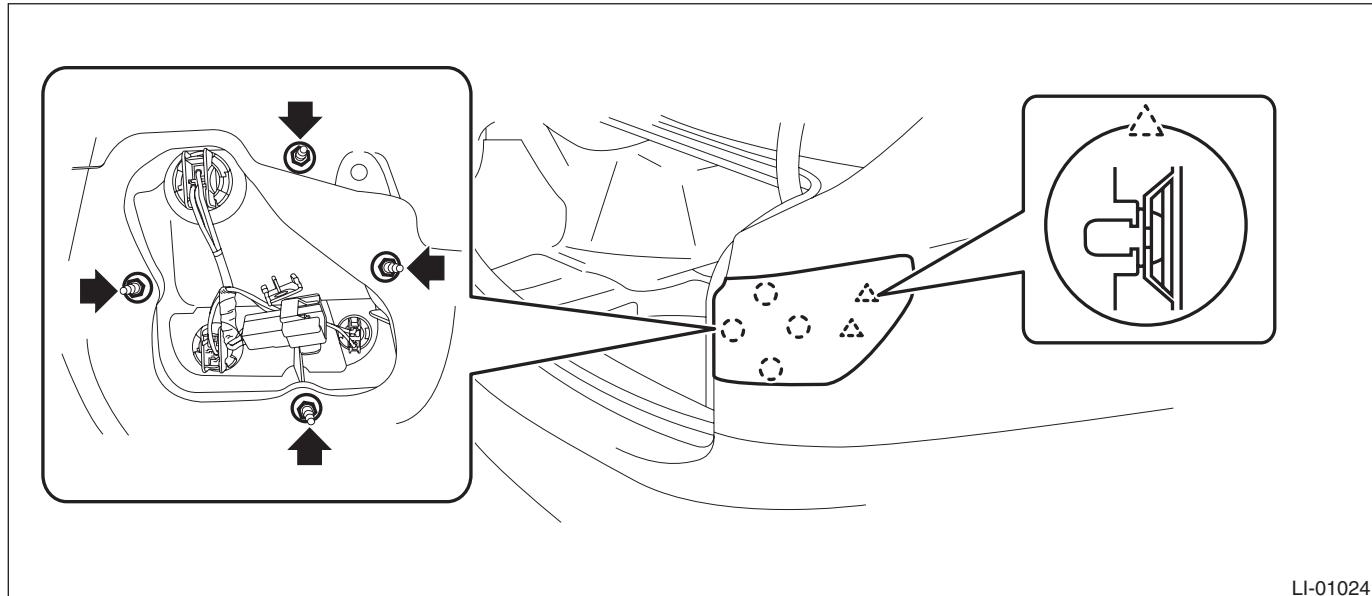

LI-01024

##### 2. OUTBACK MODEL

- 1) Disconnect the ground cable from battery.
- 2) Remove the clips and detach the rear combination light covers.

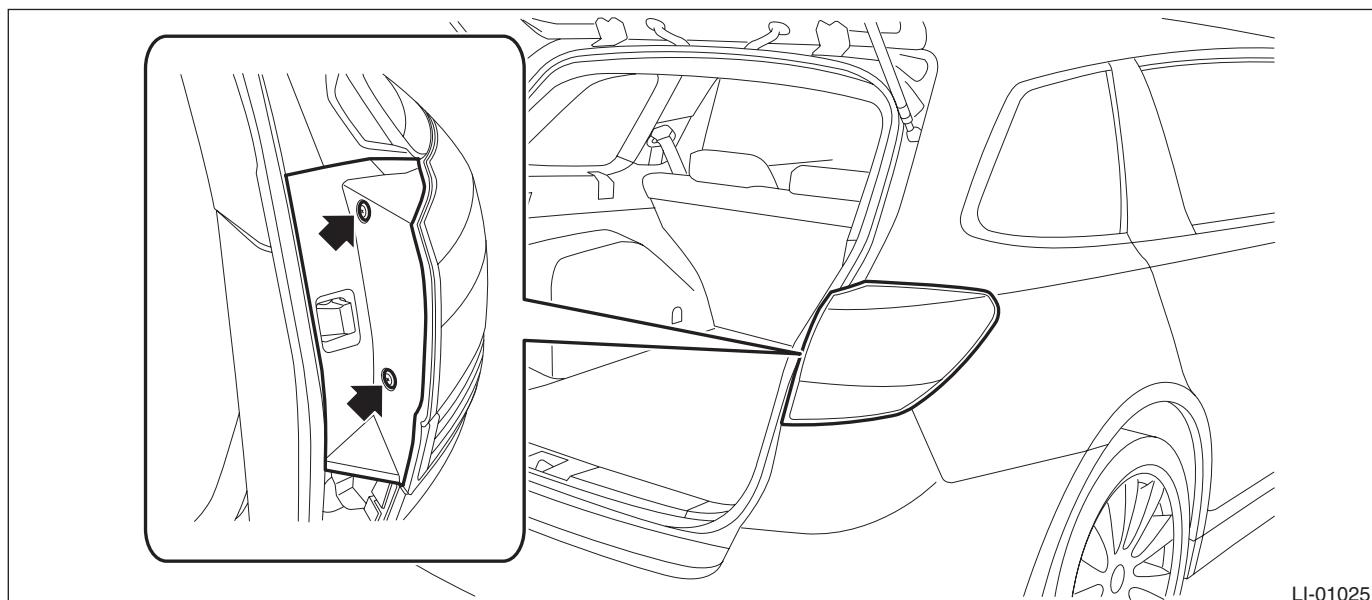


LI-01025

3) Remove the rear combination light assembly.

**CAUTION:**

**Be careful not to damage the clips.**

- (1) Release the bolts and clips, then pull out the rear combination light assembly to the vehicle rear.
- (2) Disconnect the connector and remove the rear combination light assembly.

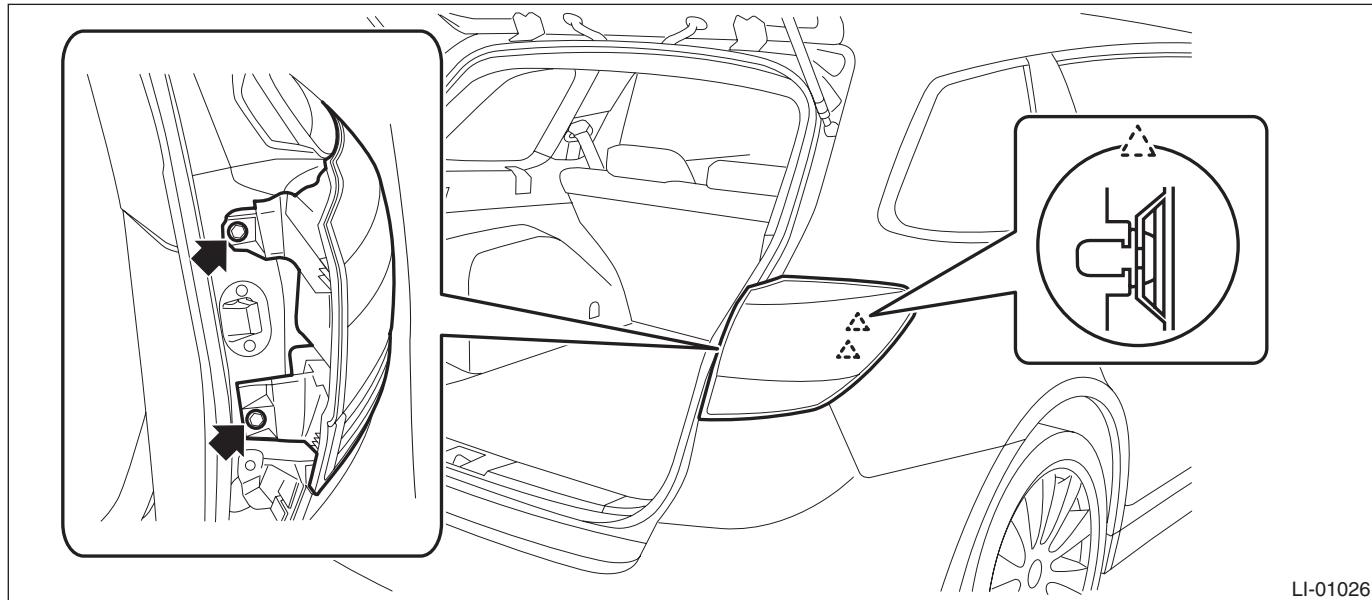

## B: INSTALLATION

Install each part in the reverse order of removal.

**Tightening torque:**

**Rear combination light ASSY: 7.5 N·m (0.76 kgf-m, 5.5 ft-lb)**

## C: INSPECTION

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATION, General Description.>
- 3) Replace the bulb if it is found defective.