


## 22. Tail/Stop Light Bulb

### A: REMOVAL


#### 1. SEDAN MODEL

##### • Rear combination light side

- 1) Disconnect the ground cable from battery.
- 2) Release the lock and remove the bulb inspection cover of trunk room trim.

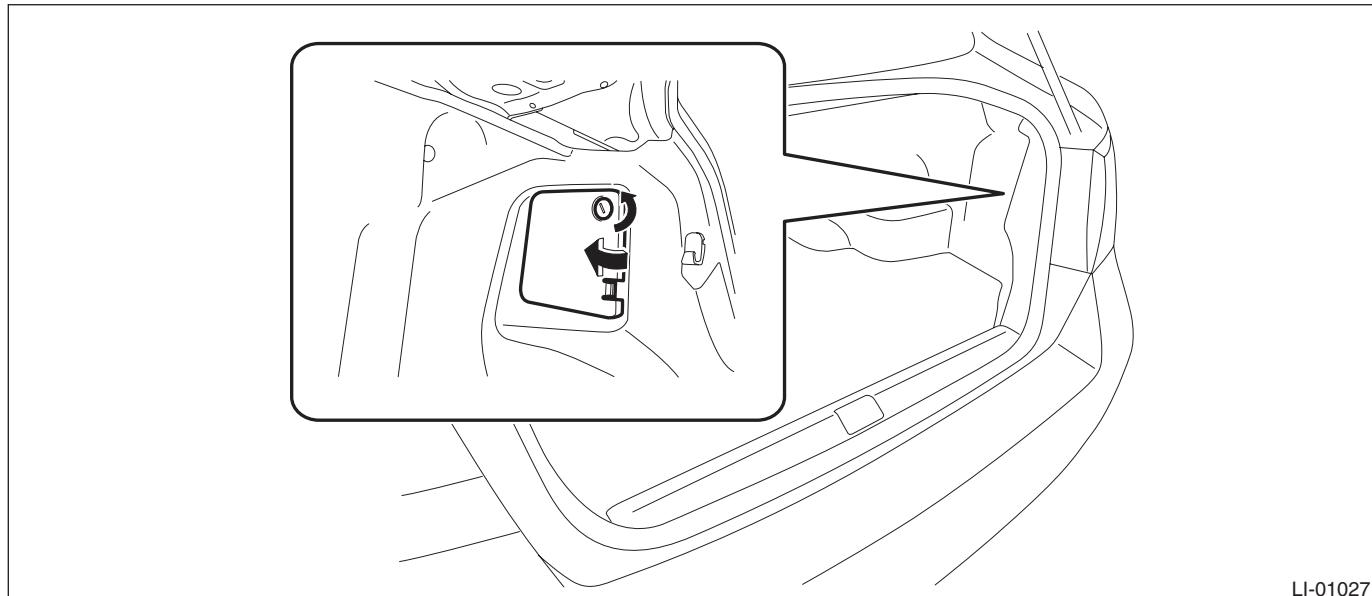


- 3) Remove the bulb socket and tail light/stop light bulb.

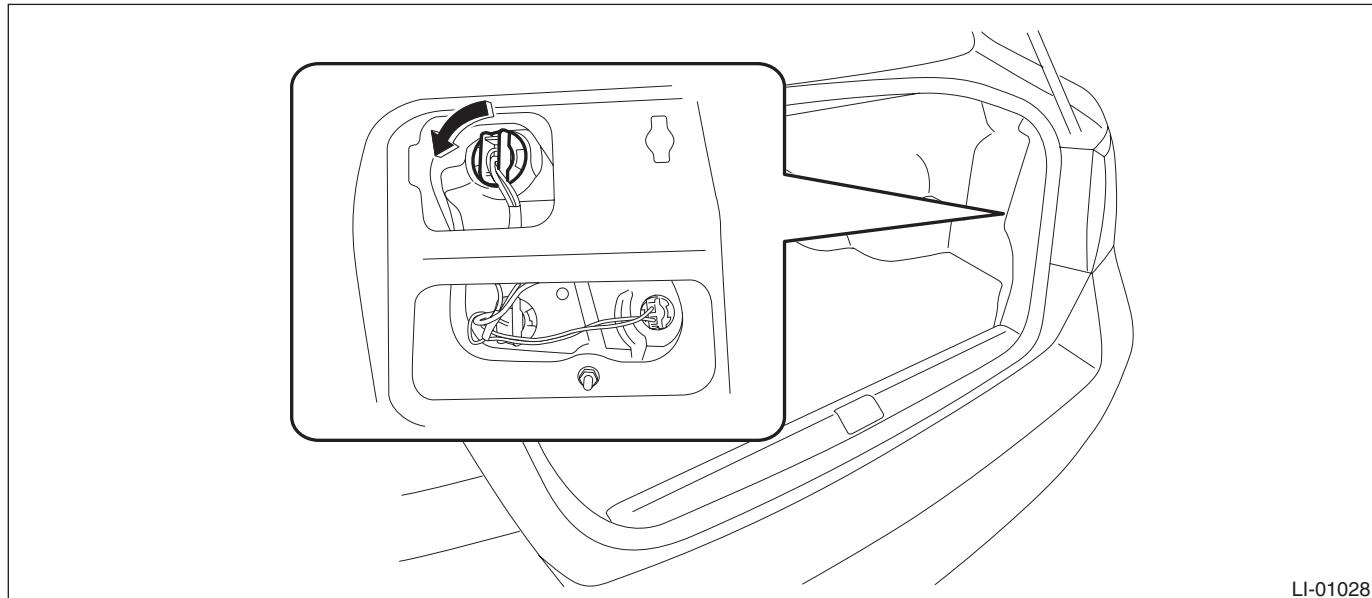

##### • Rear finisher light side

- 1) Disconnect the ground cable from battery.
- 2) Remove the trunk lid trim. <Ref. to EI-127, TRUNK LID TRIM, REMOVAL, Trunk Room Trim.>


3) Remove the bulb socket and tail light bulb.

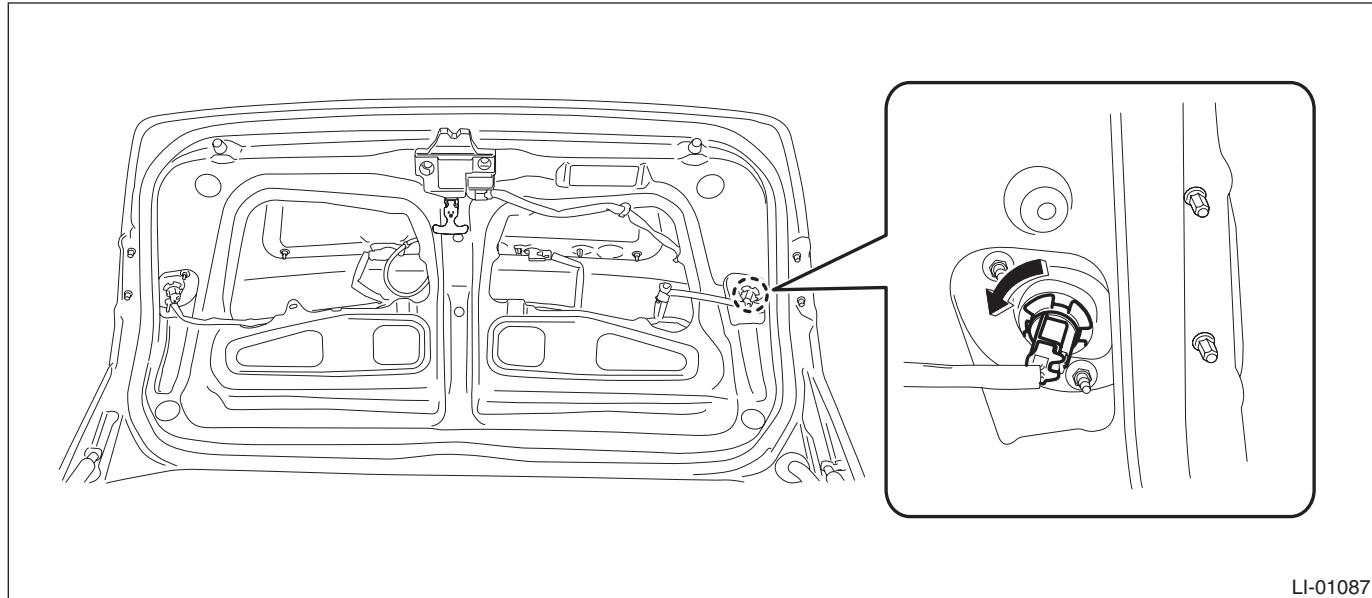

## 2. OUTBACK MODEL

### • Rear combination light side

- 1) Disconnect the ground cable from battery.
- 2) Remove the clips and detach the rear combination light covers.

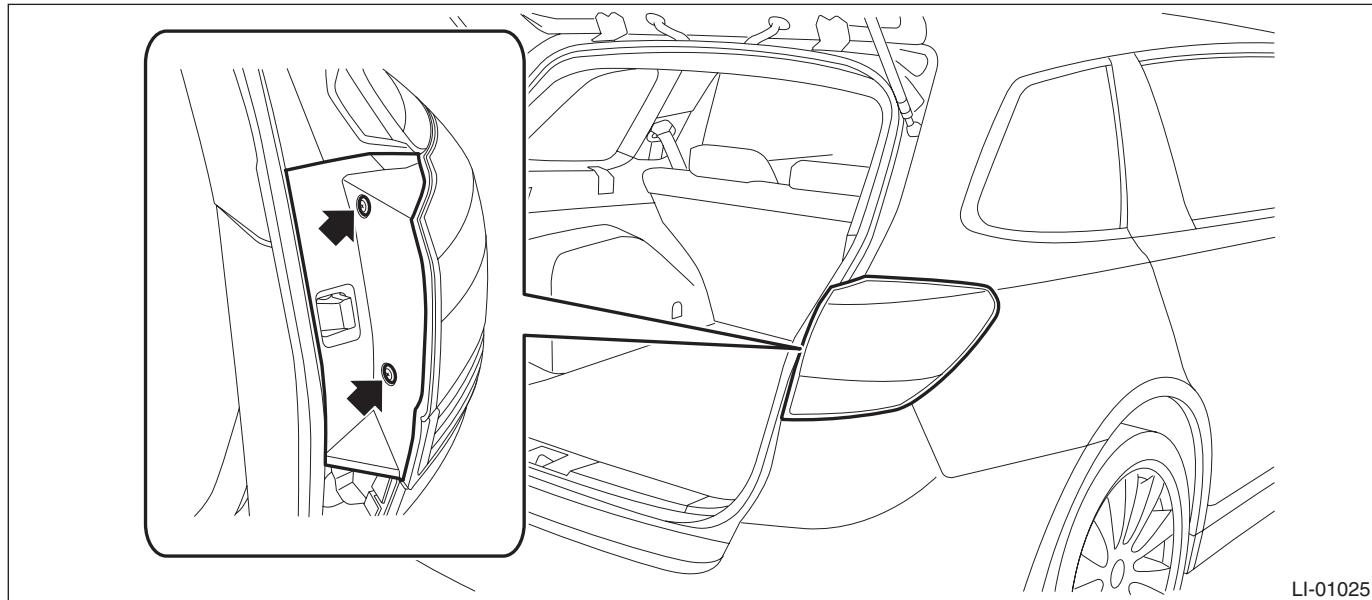

## Tail/Stop Light Bulb


### LIGHTING SYSTEM

3) Remove the rear combination light assembly.


**CAUTION:**

**Be careful not to damage the clips.**

- (1) Release the bolts and clips, then pull out the rear combination light assembly to the vehicle rear.
- (2) Disconnect the connector and remove the rear combination light assembly.

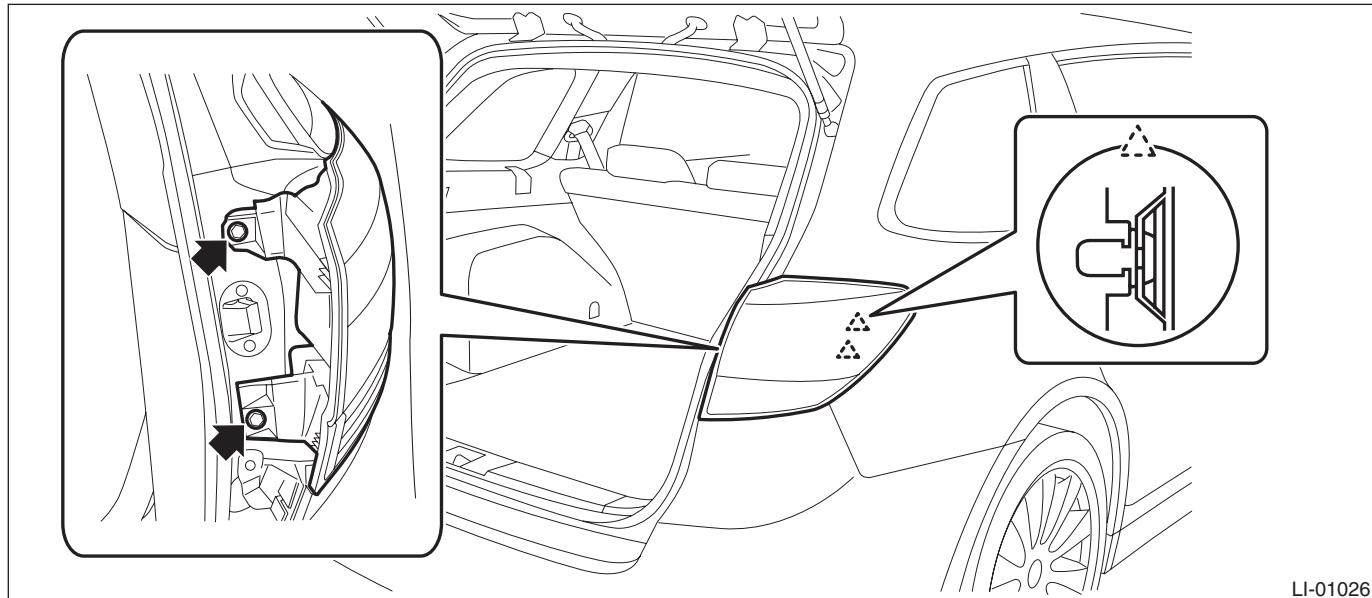

4) Remove the bulb sockets and bulbs.

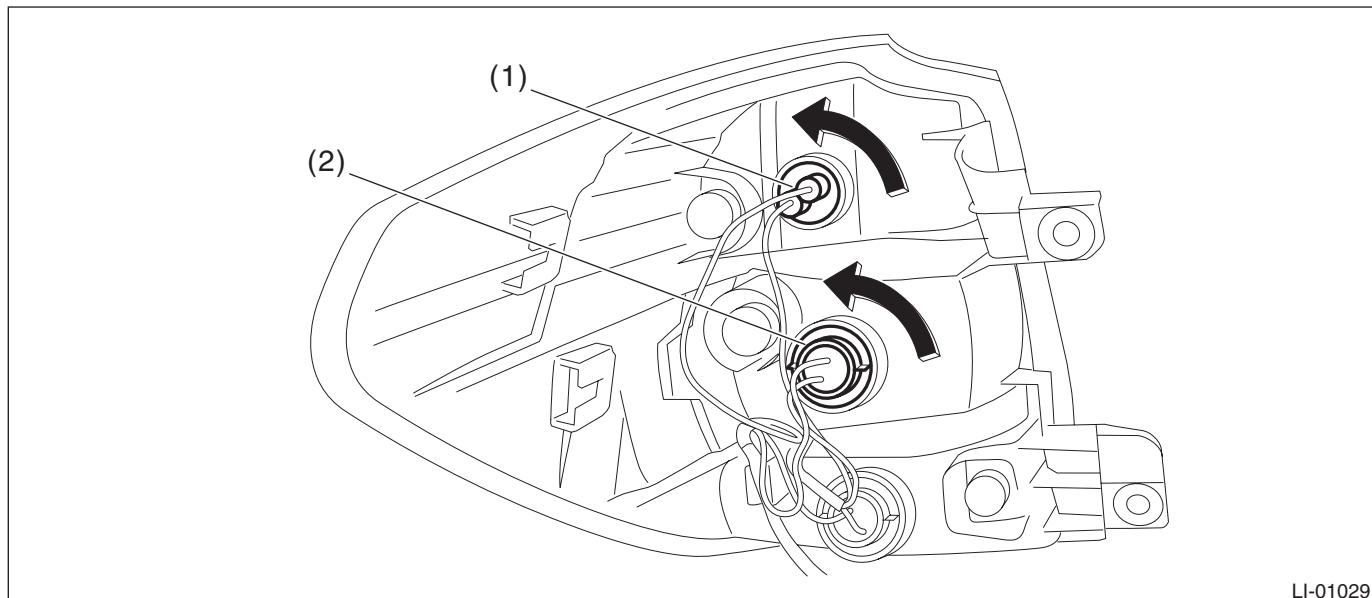


(1) Tail light bulb


(2) Stop light bulb

- **Rear finisher light side**

- 1) Release the claws and remove the bulb inspection cover of rear gate trim

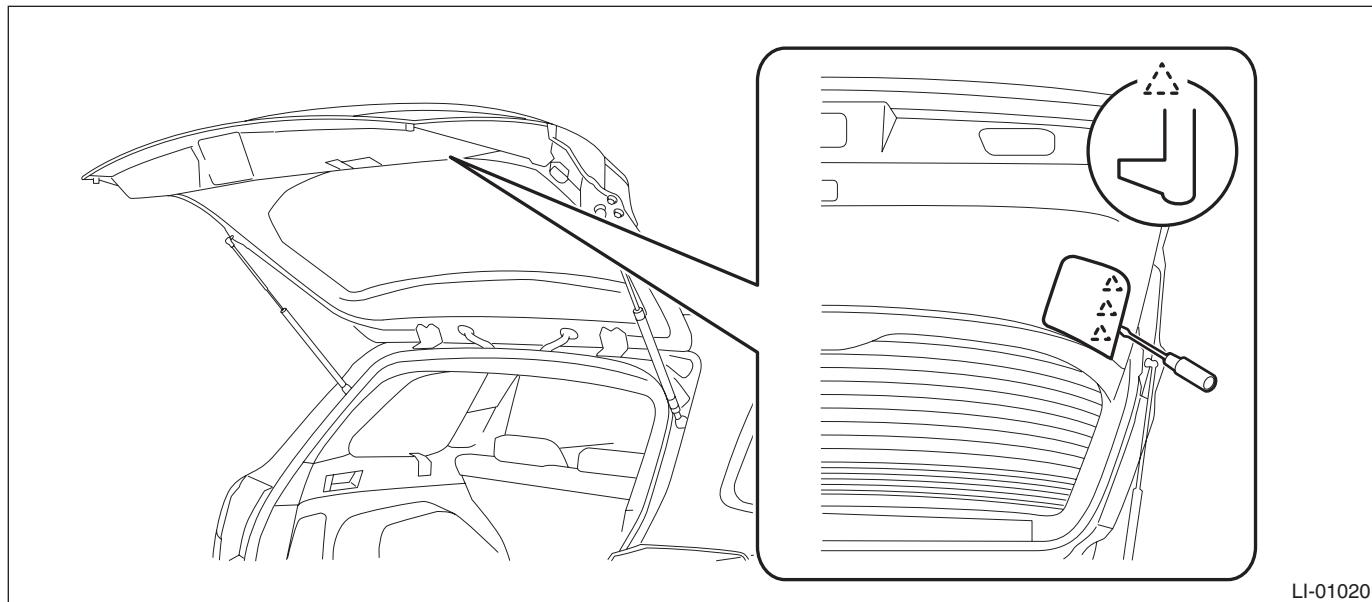

- 2) Remove the bulb socket and tail light bulb.

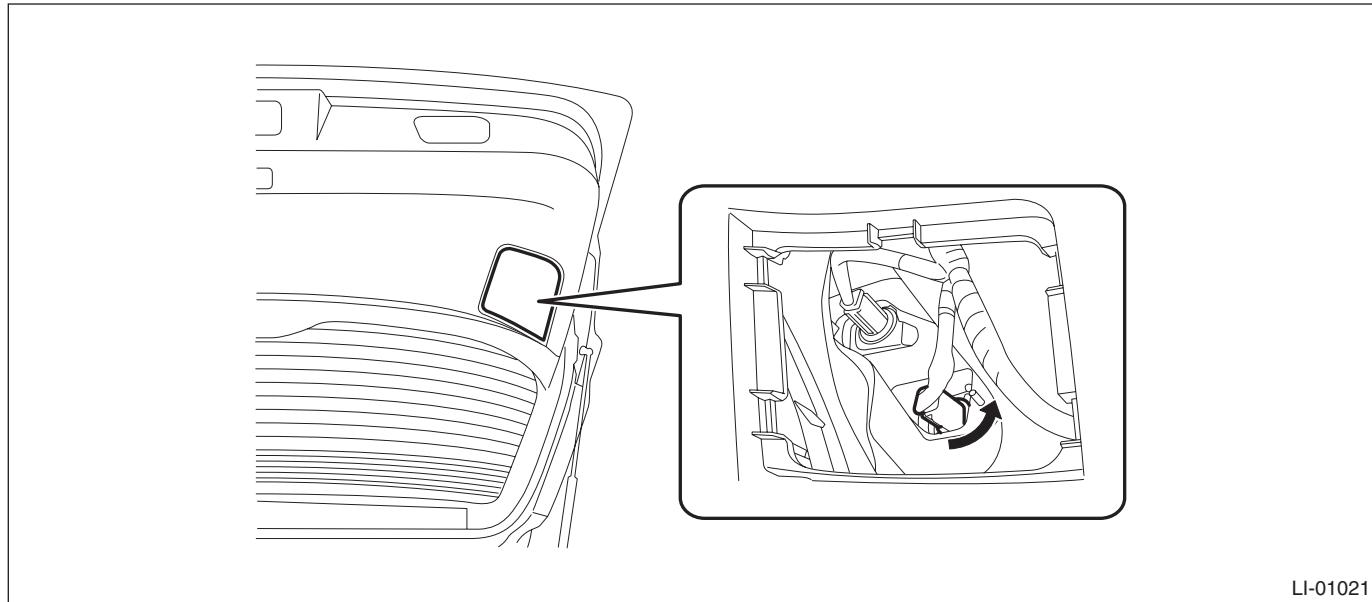

## B: INSTALLATION

Install each part in the reverse order of removal.

### ***Tightening torque:***

***Rear combination light ASSY: 7.5 N·m (0.76 kgf-m, 5.5 ft-lb)***

## C: INSPECTION

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATION, General Description.>
- 3) Replace the bulb if it is found defective.