


## 24. Rear Finisher Light Assembly

### A: REMOVAL

#### 1. SEDAN MODEL


- 1) Disconnect the ground cable from battery.
- 2) Remove the trunk lid trim. <Ref. to EI-127, REMOVAL, Trunk Room Trim.>
- 3) Remove the rear finisher light assembly.
  - (1) Disconnect the connector.
  - (2) Remove the nuts and bolts and remove the rear finisher light assembly.

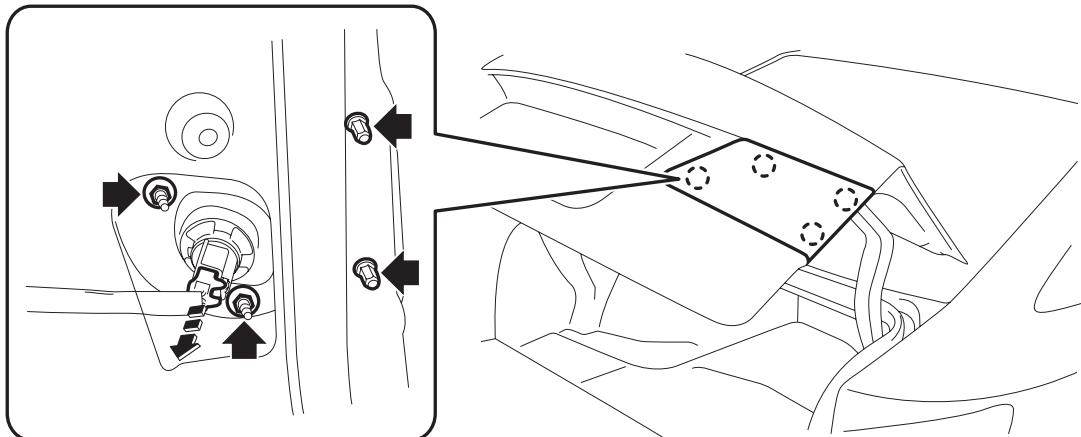

LI-01015

#### 2. OUTBACK MODEL

- 1) Disconnect the ground cable from battery.
- 2) Remove the rear gate trim. <Ref. to EI-160, REMOVAL, Rear Gate Trim.>
- 3) Remove the rear gate garnish. <Ref. to EI-164, REMOVAL, Rear Gate Garnish.>
- 4) Release the clips and claws, then detach the rear finisher light side cover.

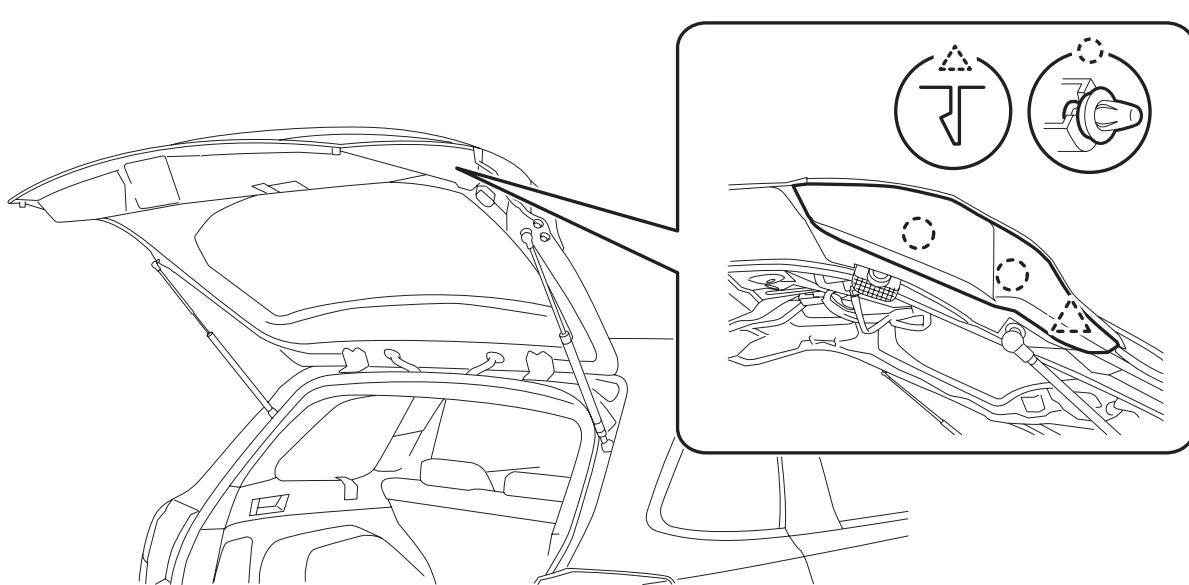

LI-01016


# Rear Finisher Light Assembly

## LIGHTING SYSTEM

5) Remove the rear finisher light assembly.

(1) Disconnect the connector.

(2) Remove the nuts and release the pin, then remove the rear finisher light assembly.

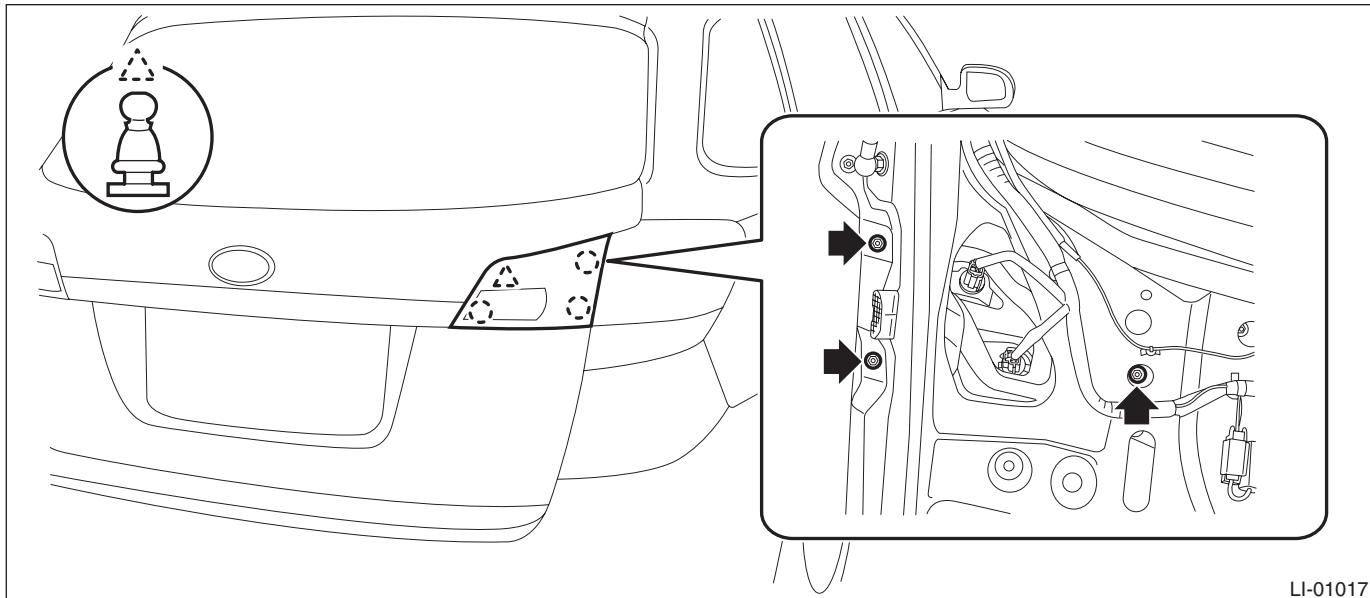

LI-01017

## B: INSTALLATION

### CAUTION:

Replace the body seal gasket with a new part.

Install each part in the reverse order of removal.

### Tightening torque:

*Rear finisher light assembly: 4.5 N·m (0.45 kgf·m, 3.3 ft-lb)*