

Display of Status Information

OCCUPANT DETECTION SYSTEM (DIAGNOSTICS)

11. Display of Status Information

A: OPERATION

Check the operating condition of each sensor in the event of malfunction in seat belt buckle switch and seat position sensor, or when the seat belt buckle switch and seat position sensor has been replaced.

- 1) On «Main Menu» display, select {Each System Check}.
- 2) On «System Selection Menu» display, select {Airbag System}.
- 3) On «Airbag System» display, select {Status Data}.

The following table is for support data.

Items	Display
Seat position sensor LH	— ^{*2}
Seat position sensor RH	— ^{*2}
Seat belt buckle switch LH	— ^{*6}
Seat belt buckle switch RH	Fastened ^{*3} /Not fastened ^{*4} /Other ^{*5} /Initial setting ^{*1} /— ^{*6}
Passenger's airbag control status	ON ^{*7} /OFF ^{*8} /Initial setting ^{*1}

*1: Displayed when it is initial

*2: Seat position sensor not supported

*3: Seat belt fastened

*4: Seat belt not fastened

*5: Displayed when data other than belt fastened or not fastened, such as breakdown, is input

*6: Seat belt buckle switch not supported

*7: Passenger's airbag operating state

*8: Passenger's airbag non-operating state

NOTE:

For detailed operation procedures, refer to “PC application help for Subaru Select Monitor”.