


General Description

SECURITY AND LOCKS

1. General Description

A: COMPONENT

1. DOOR LOCK ASSEMBLY

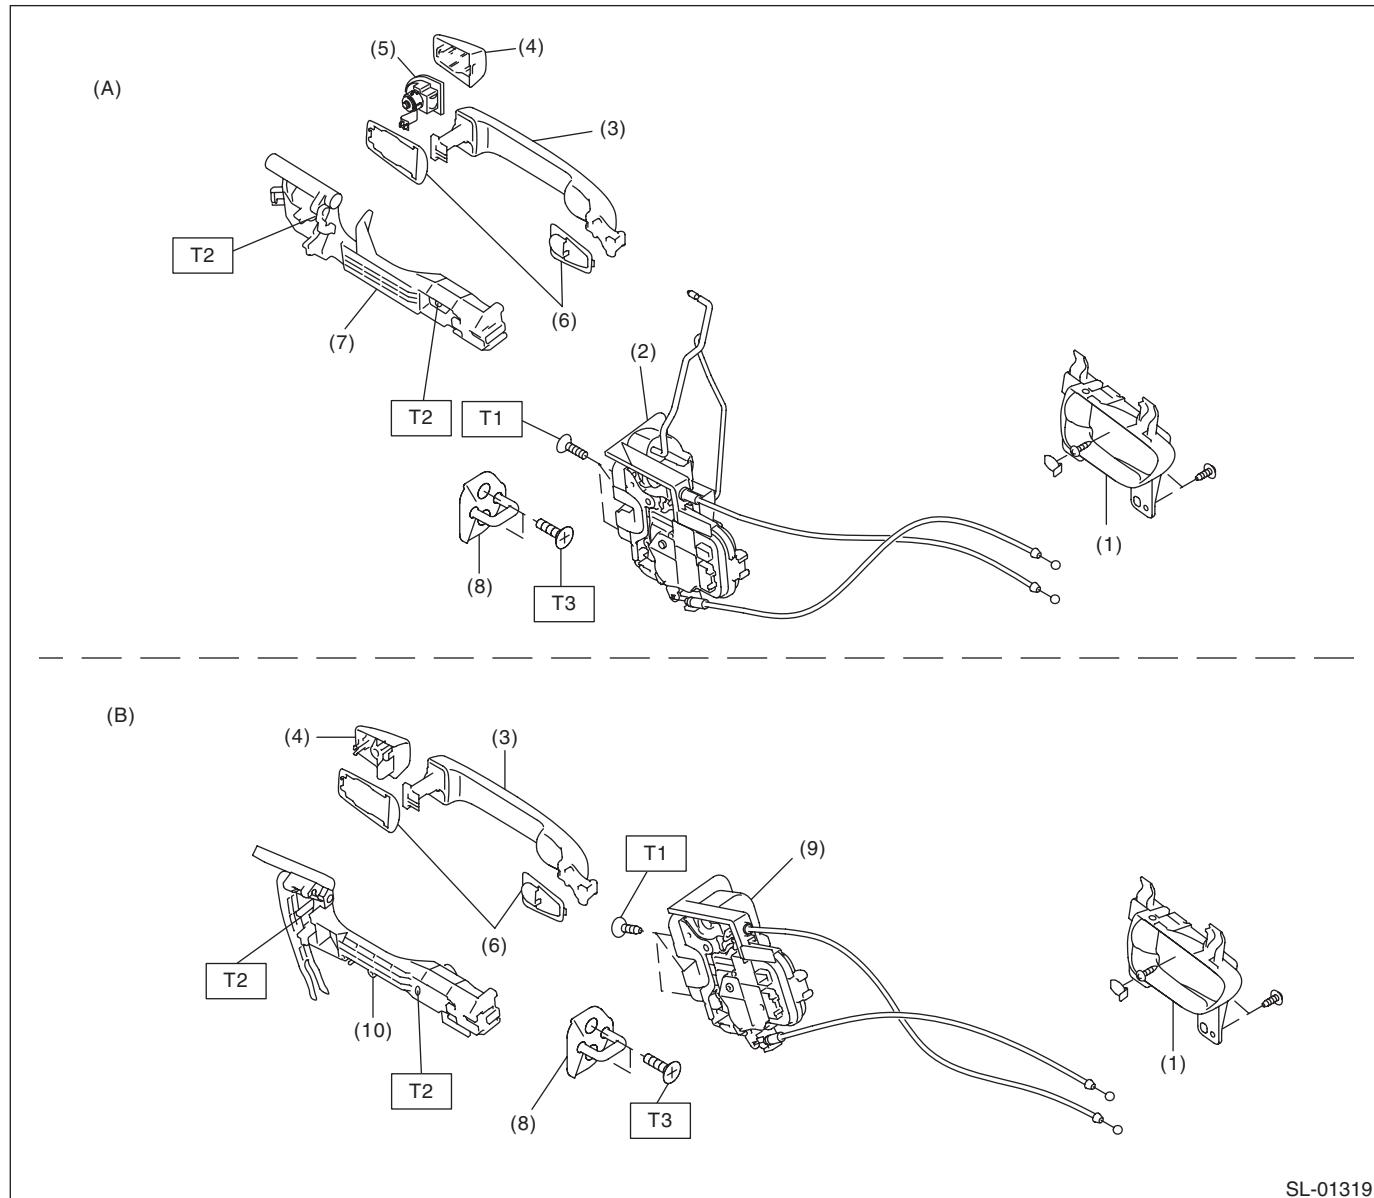

SL-01319

(A) Front

- (1) Inner remote ASSY
- (2) Front door latch and door lock actuator ASSY
- (3) Door outer handle
- (4) Door outer handle cover
- (5) Key cylinder (driver's side only)

(B) Rear

- (6) Door outer handle spacer
- (7) Front door outer handle frame ASSY
- (8) Striker
- (9) Rear door latch and door lock actuator ASSY
- (10) Rear door outer handle frame ASSY


Tightening torque:N·m (kgf·m, ft·lb)

T1: 6.5 (0.66, 4.8)

T2: 7.5 (0.76, 5.5)

T3: 18 (1.84, 13.3)

2. REAR GATE LOCK AND TRUNK LID LOCK

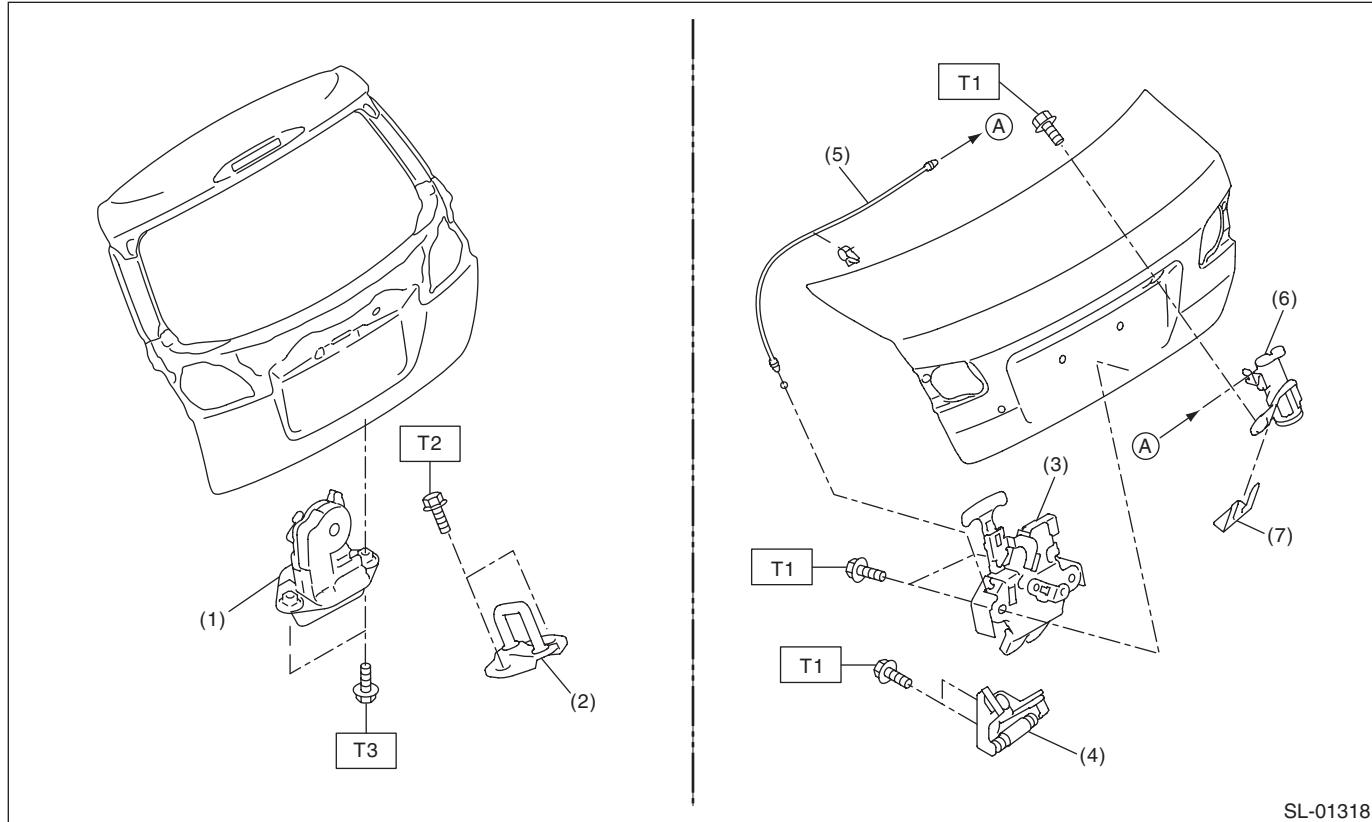

SL-01318

(1) Rear gate latch and actuator ASSY
(2) Rear gate striker
(3) Trunk lid latch and actuator ASSY
(4) Trunk lid striker

(5) Cable
(6) Key cylinder (trunk lid only)
(7) Clip


Tightening torque:N·m (kgf·m, ft·lb)

T1: 7.5 (0.76, 5.5)
T2: 25 (2.55, 18.4)
T3: 28 (2.86, 20.7)

General Description

SECURITY AND LOCKS

3. FRONT HOOD LOCK AND REMOTE OPENERS

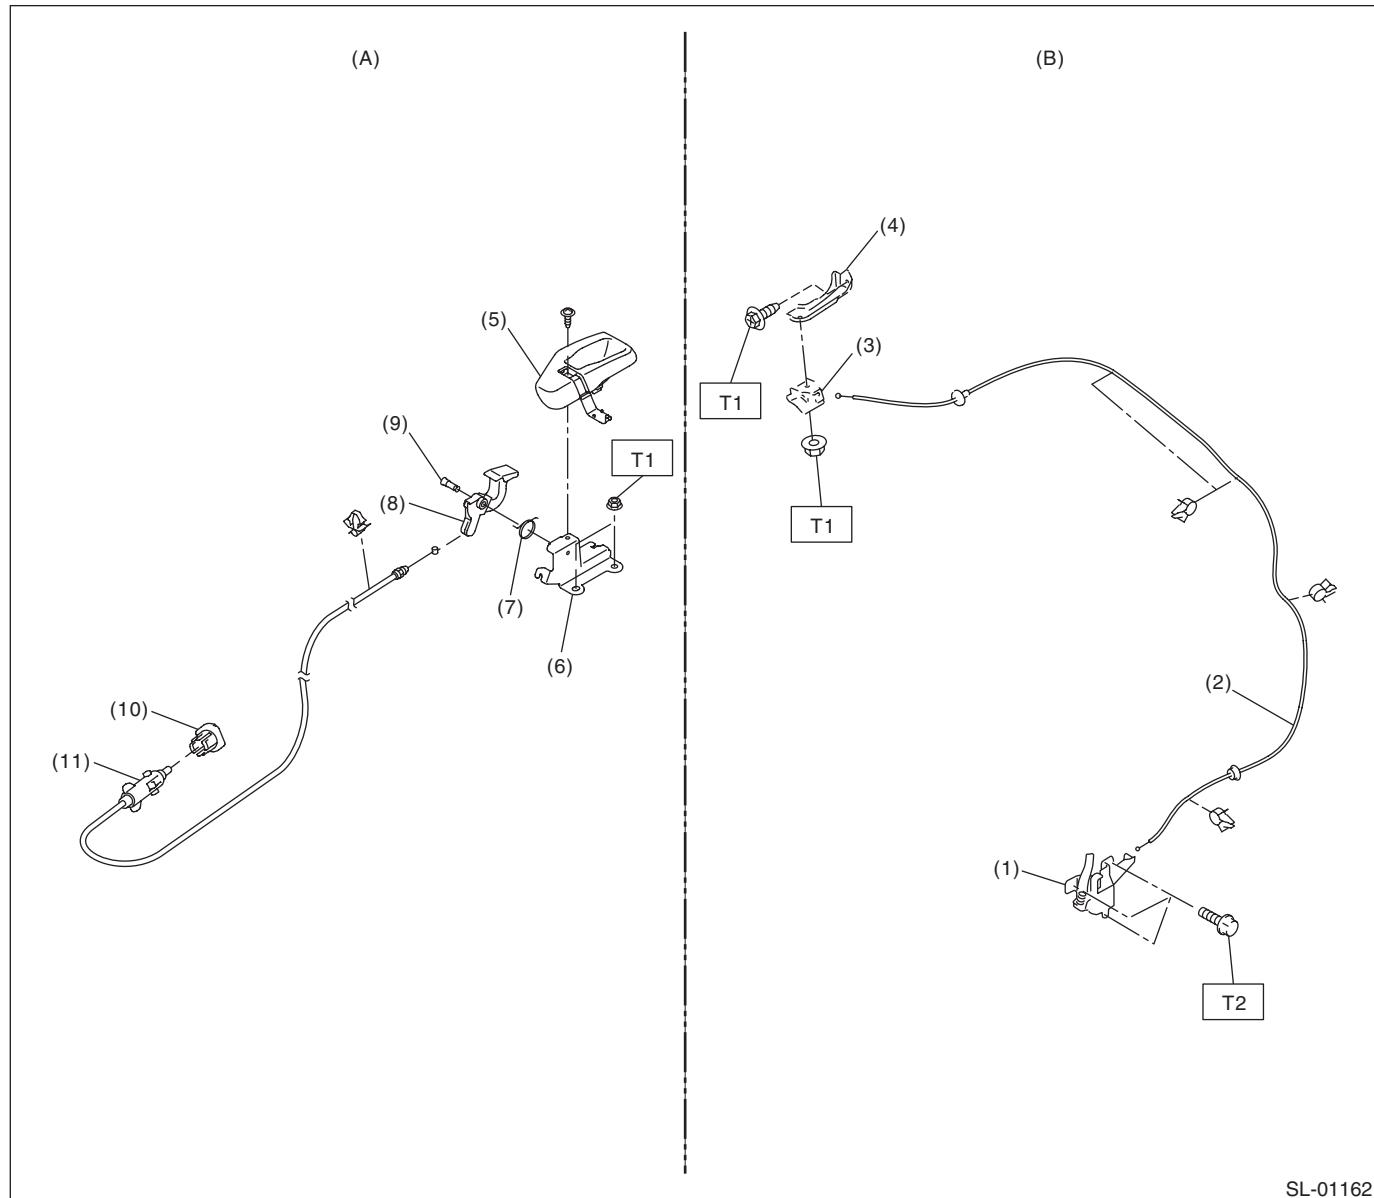

SL-01162

(A) Fuel lock release

(B) Hood lock release

- (1) Front hood lock ASSY
- (2) Cable
- (3) Lever ASSY
- (4) Bracket
- (5) Cover

- (6) Bracket
- (7) Spring
- (8) Pull handle ASSY
- (9) Pin
- (10) Holder


- (11) Fuel lock

Tightening torque:N·m (kgf·m, ft·lb)

T1: 7.5 (0.76, 5.5)

T2: 33 (3.36, 24.3)

4. KEYLESS ENTRY SYSTEM

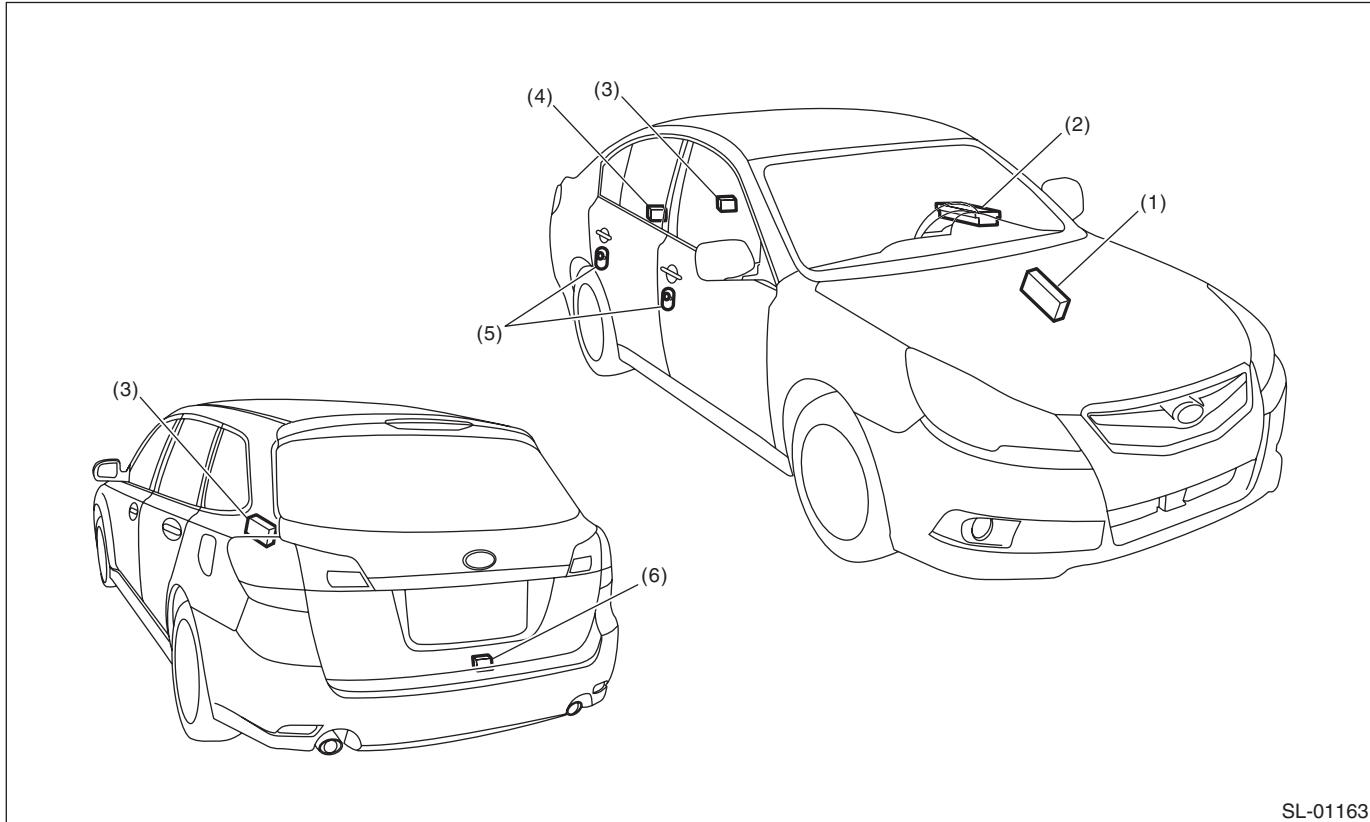


SL-01163

(1) Body integrated unit	(3) Keyless entry control module	(5) Door switch
(2) Power window main switch	(4) Trunk lid latch switch (Sedan model)	(6) Rear gate latch switch (OUTBACK model)

General Description

SECURITY AND LOCKS

5. SECURITY SYSTEM

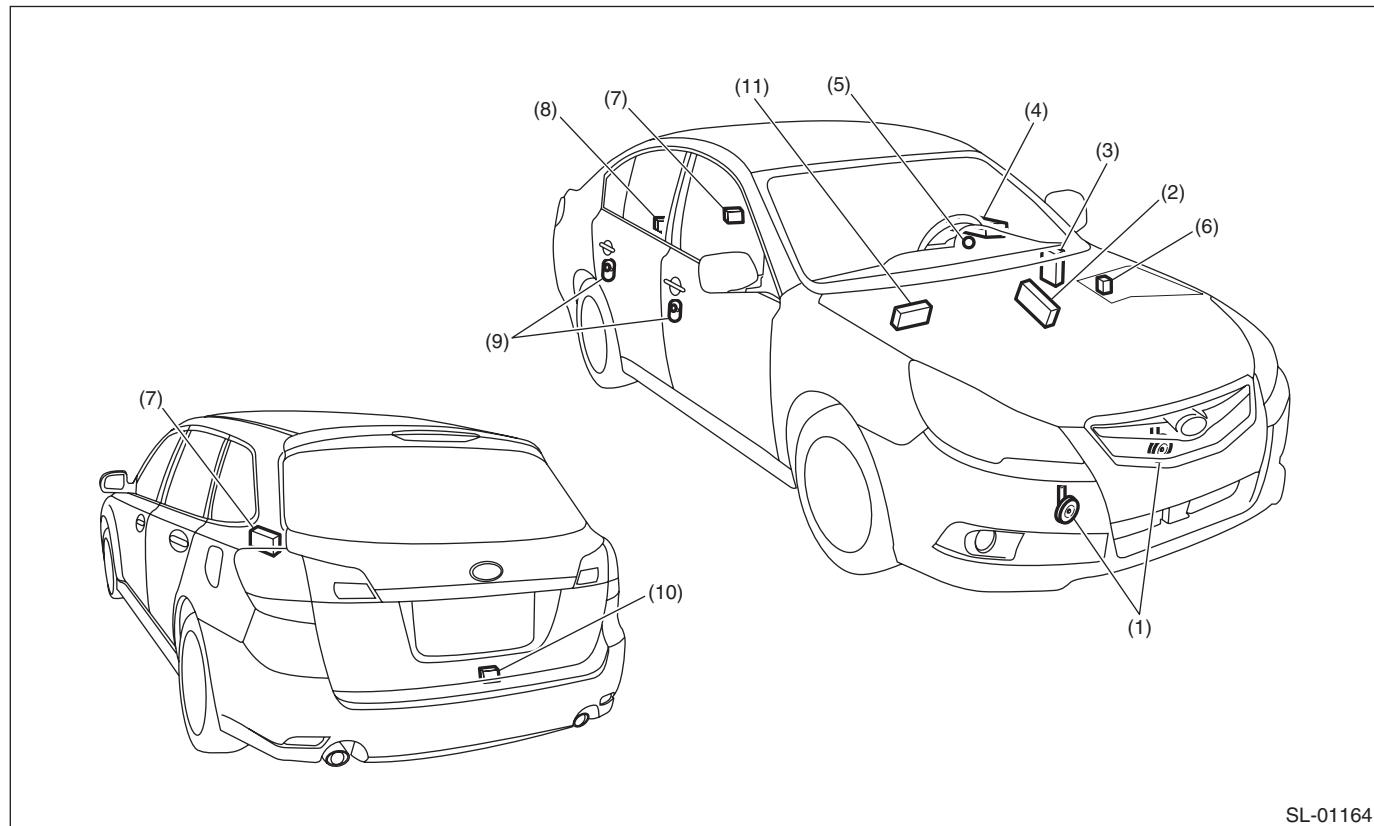


(1) Horn	(5) Security indicator light (in combination meter)	(9) Door switch
(2) Body integrated unit	(6) Horn relay (in man fuse box)	(10) Rear gate latch switch (OUTBACK model)
(3) Impact sensor (Instrument panel side end on driver's side) (dealer option)	(7) Keyless entry control module	(11) Security control module (C0, C5 model)
(4) Power window main switch	(8) Trunk lid latch switch (Sedan model)	

B: CAUTION

- Before disassembling or reassembling parts, always disconnect the battery ground cable from battery. When replacing the audio, control module and other parts provided with memory functions, record the memory contents before disconnecting the battery ground cable. Otherwise, the memory is cleared.
- Reassemble the parts in the reverse order of disassembly procedure unless otherwise indicated.
- Connect the connectors securely during reassembly.
- After reassembly, make sure that the functional parts operate normally.
- If any immobilizer related part has been replaced, make sure to register the immobilizer.
- Do not use any electrical test equipment on the airbag system wiring harnesses and connector circuits.
- Be careful not to damage the airbag system wiring harness when servicing the ignition key cylinder.

C: PREPARATION TOOL

1. SPECIAL TOOL

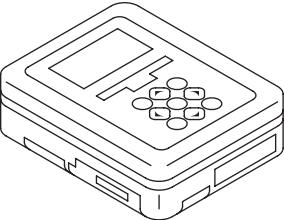ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST1B022XU0	1B022XU0	SUBARU SELECT MONITOR III KIT	Used for troubleshooting the electrical system.

2. GENERAL TOOL

TOOL NAME	REMARKS
Circuit tester	Used for measuring resistance and voltage.
Drill	Used for replacing ignition key lock.
TORX® T30	Used for removing and installing the door outer handle.
Clip remover	Used for removing trim clip.