


23. Keyless Buzzer

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the front bumper face. <Ref. to EI-39, REMOVAL, Front Bumper.>
- 3) Remove the keyless buzzer.
 - (1) Disconnect the connector.
 - (2) Remove the clip, and remove the keyless buzzer.

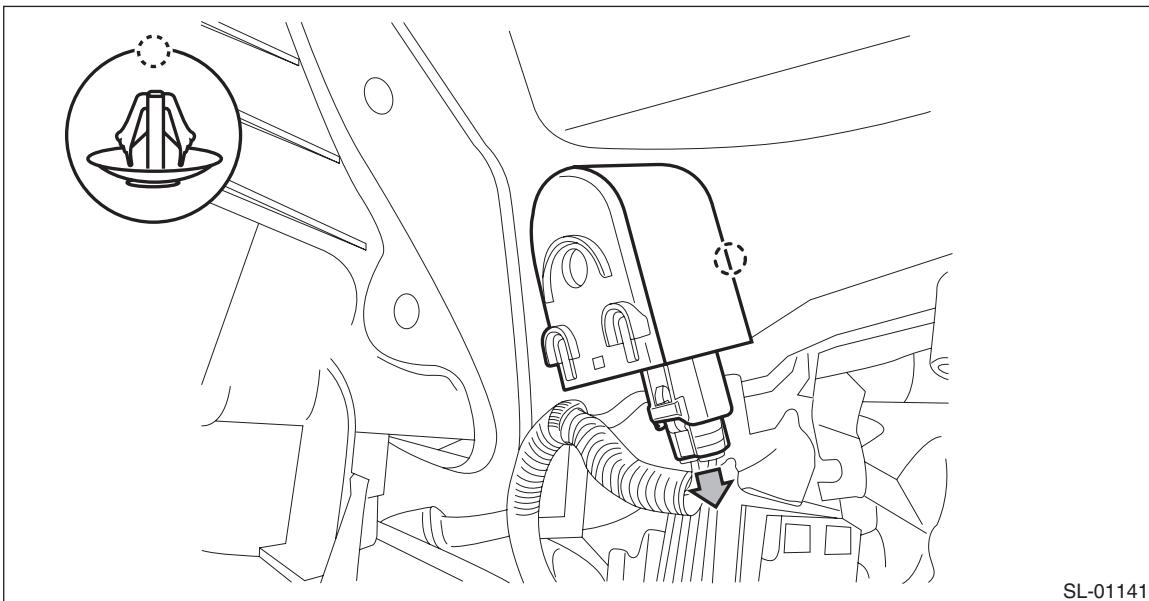

B: INSTALLATION

Install each part in the reverse order of removal.

C: INSPECTION

Using the Subaru Select Monitor, perform forced operation of the keyless buzzer. <Ref. to BC(diag)-17, OPERATION, User Customizing.>

NOTE:

If the buzzer does not sound, replace the keyless buzzer.