



28. Immobilizer Antenna

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the steering column cover.
 - (1) Remove the screws by turning the steering wheel to right and left.

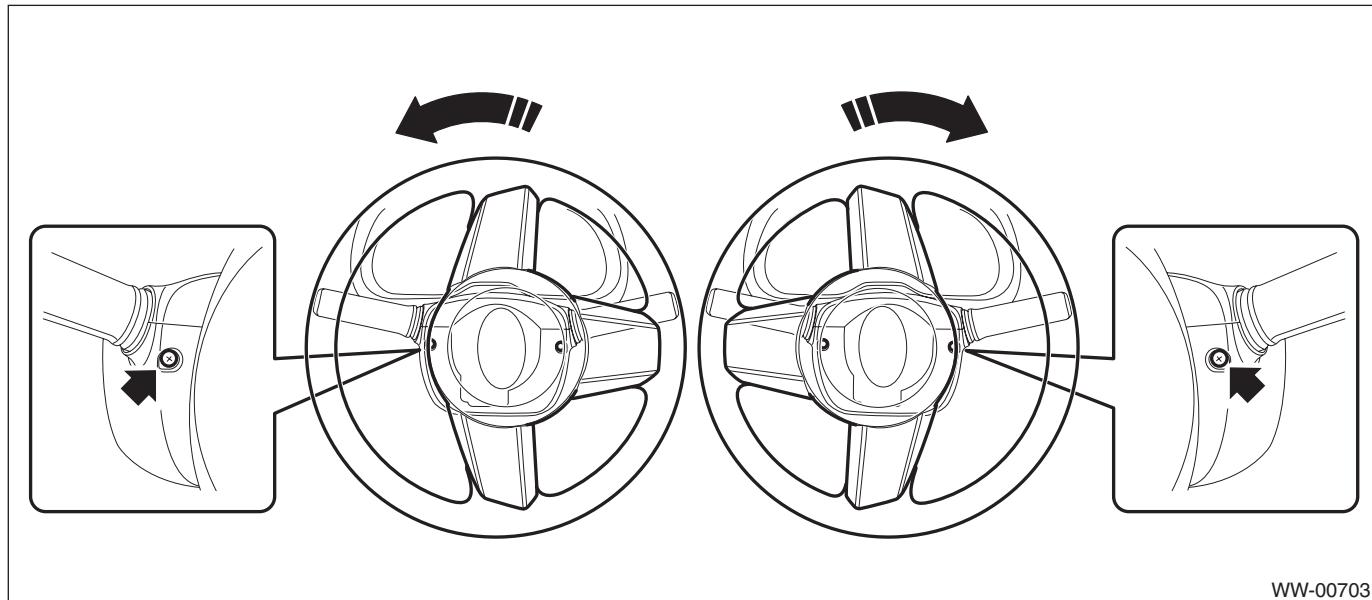


- (2) Release the claws and remove the steering column lower cover.

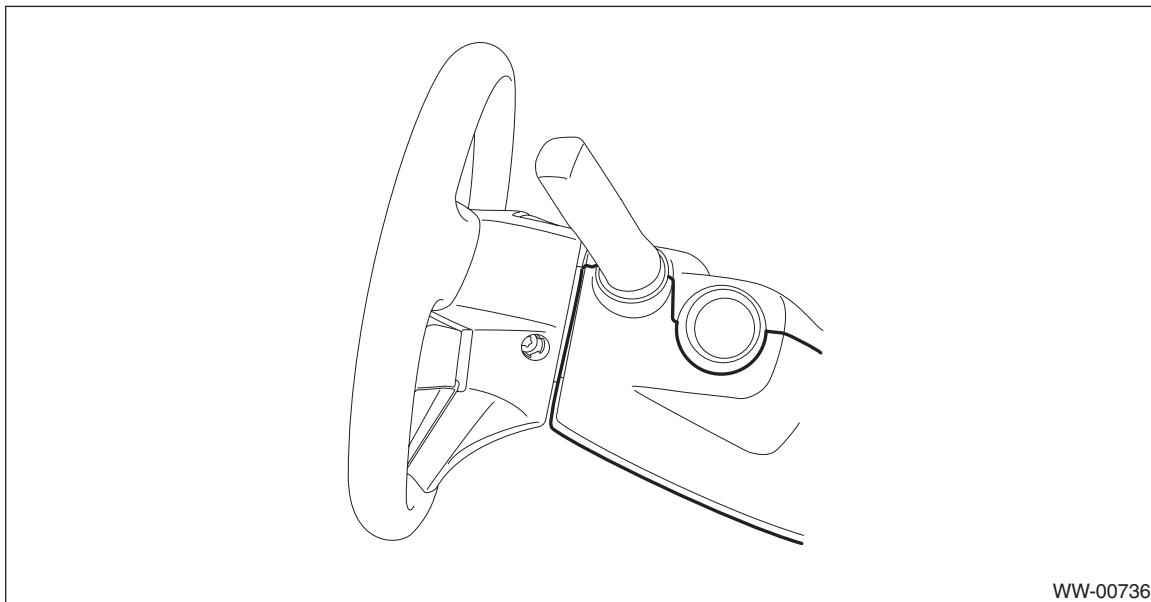

Immobilizer Antenna

SECURITY AND LOCKS

(3) Separate the steering column upper cover and steering upper cover, and remove the steering column upper cover.

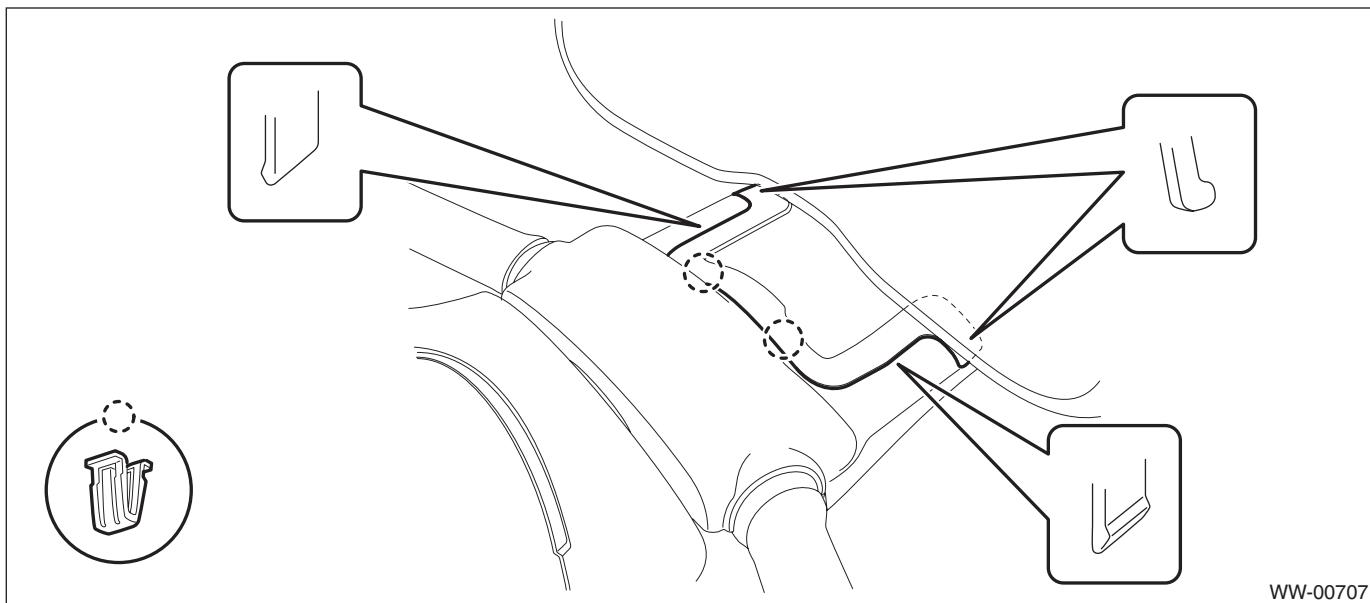


3) Remove the immobilizer antenna.

CAUTION:

Do not apply excessive force to remove the immobilizer antenna and lock. Otherwise they may be broken because those parts are the products made of a plastic.

(1) Disconnect the connector and remove the screw.

(2) Remove the ignition illumination light and release the claws, then detach the immobilizer antenna.

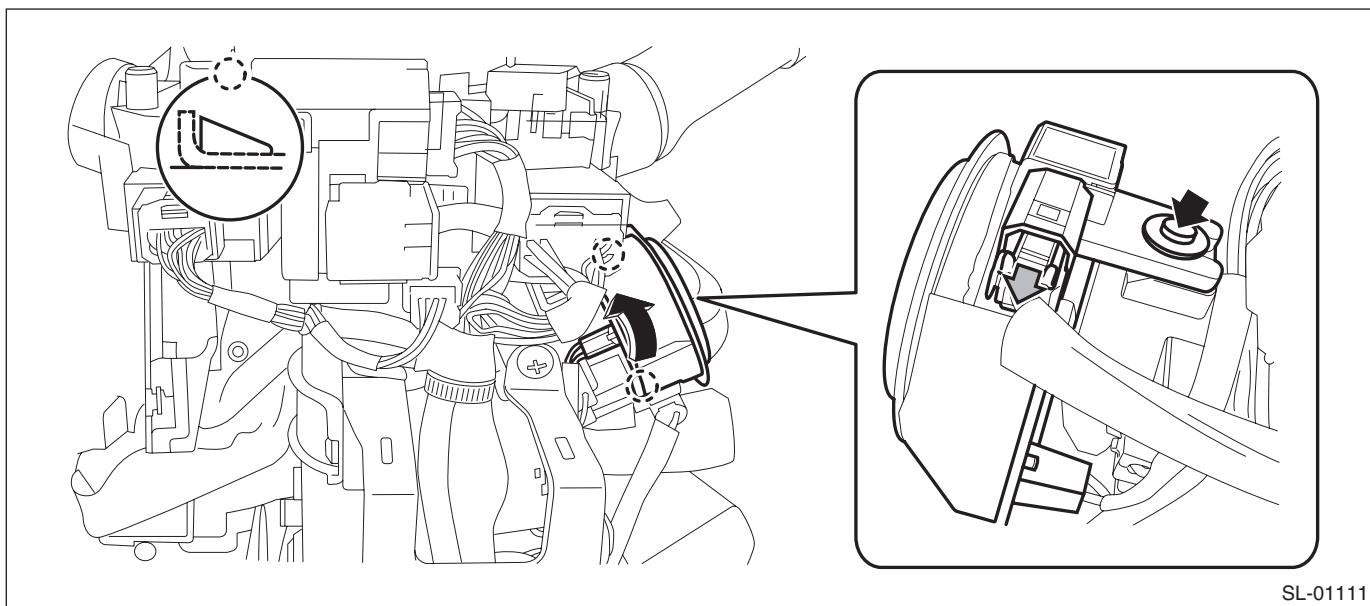

B: INSTALLATION

Install each part in the reverse order of removal.

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)

SR

	Page
1. General Description	2
2. Relay and Fuse	4
3. Sunroof Control System	5
4. Glass Lid	6
5. Sunroof Assembly	9
6. Sunroof Motor	15
7. Sunroof Switch	17
8. Sunshade	19