

5. Sunroof Assembly


A: REMOVAL

CAUTION:

When removing the clip, use great care not to damage the roof trim.

1) Remove the glass lid.


- (1) Completely close the glass lid, and then open the sunshade.
- (2) Disconnect the claws and then remove the lid cover.

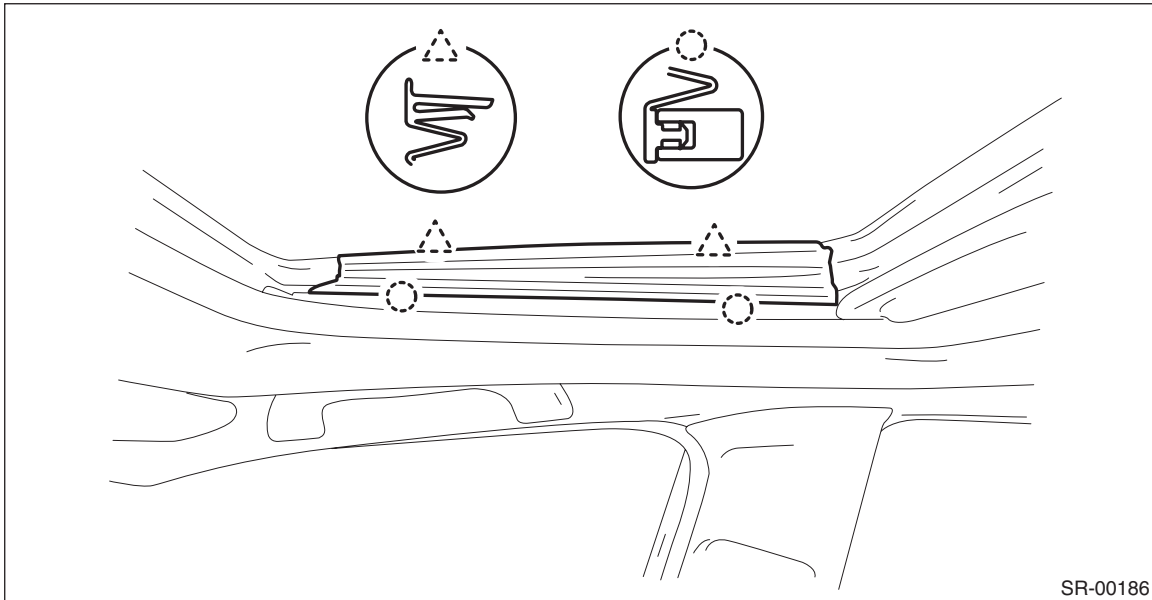

(3) Remove the bolts, then remove the glass lid.

CAUTION:

Be careful not to damage the glass lid.

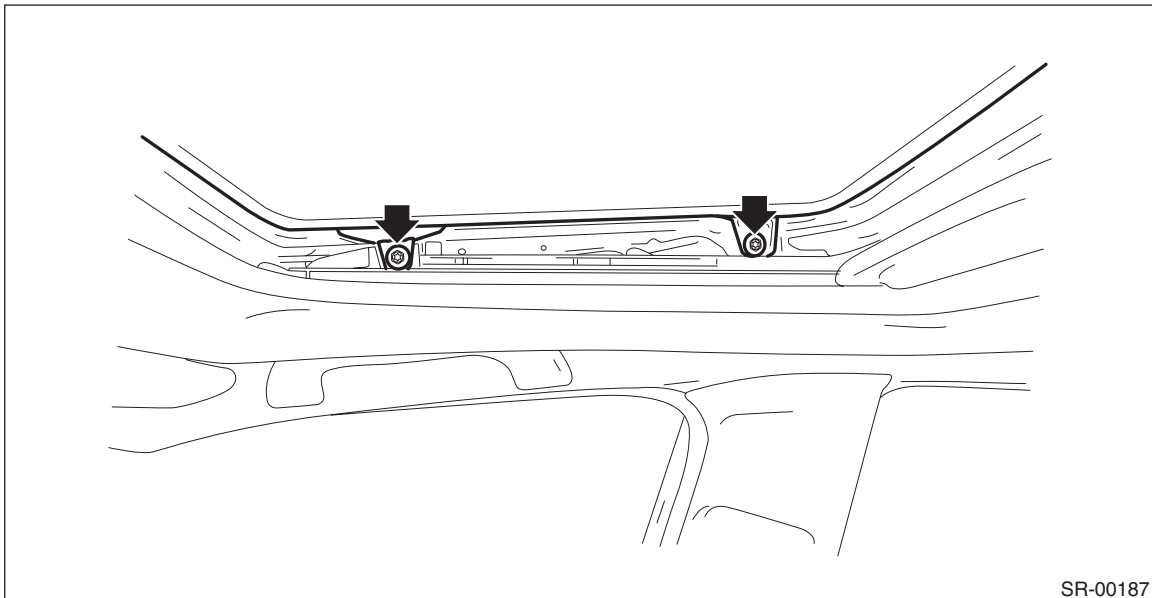


2) Remove the roof trim. <Ref. to EI-131, REMOVAL, Roof Trim.>

3) Disconnect the sunroof motor connector.

Sunroof Assembly


SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)

- 4) Remove the frame assembly.
(1) Remove the drain tube.

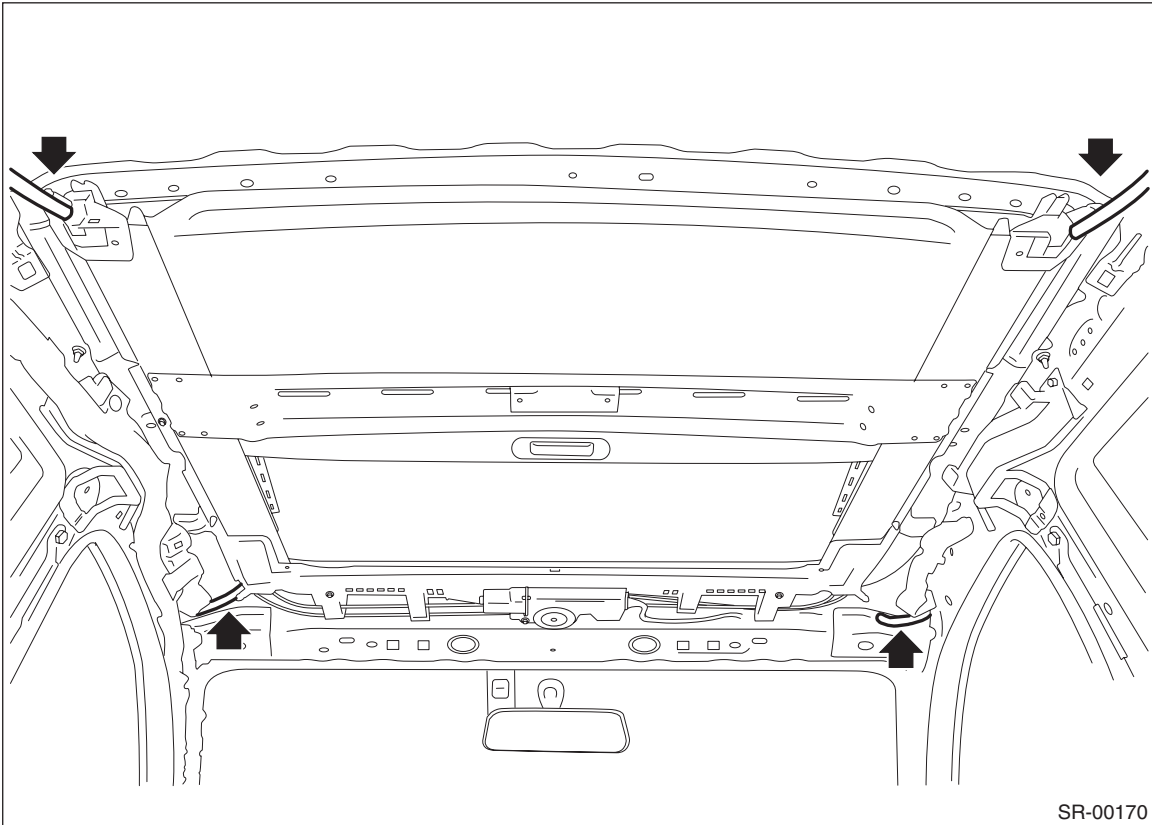

SR-00170

- (2) Remove the bolts and then remove the sunroof bracket.

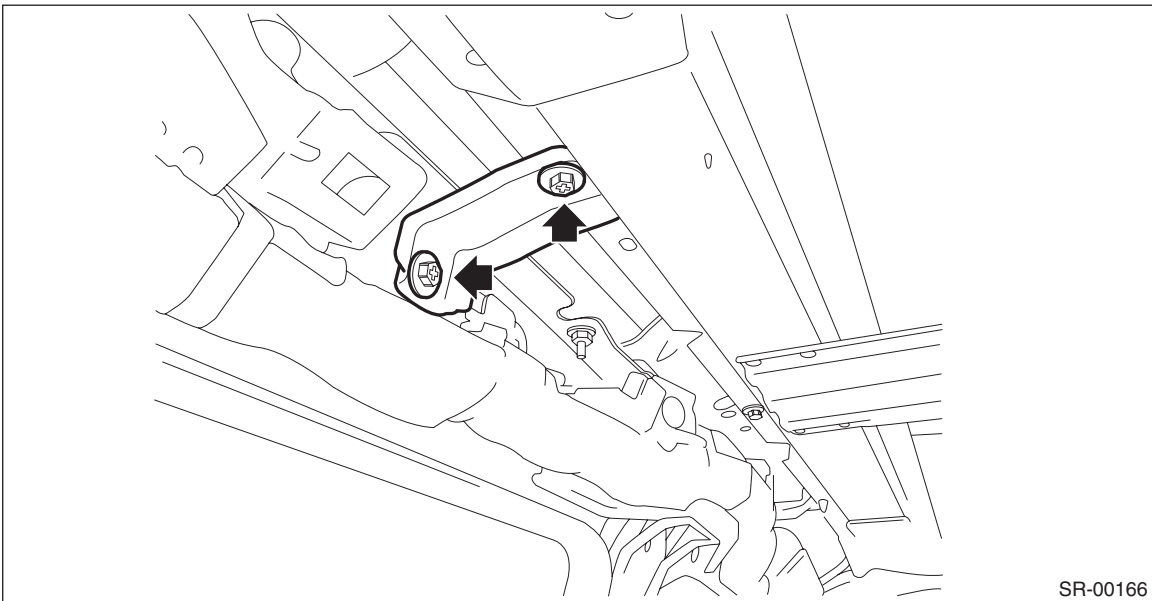


SR-00166

Sunroof Assembly

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)

(3) Remove the bolts, then remove the frame assembly.

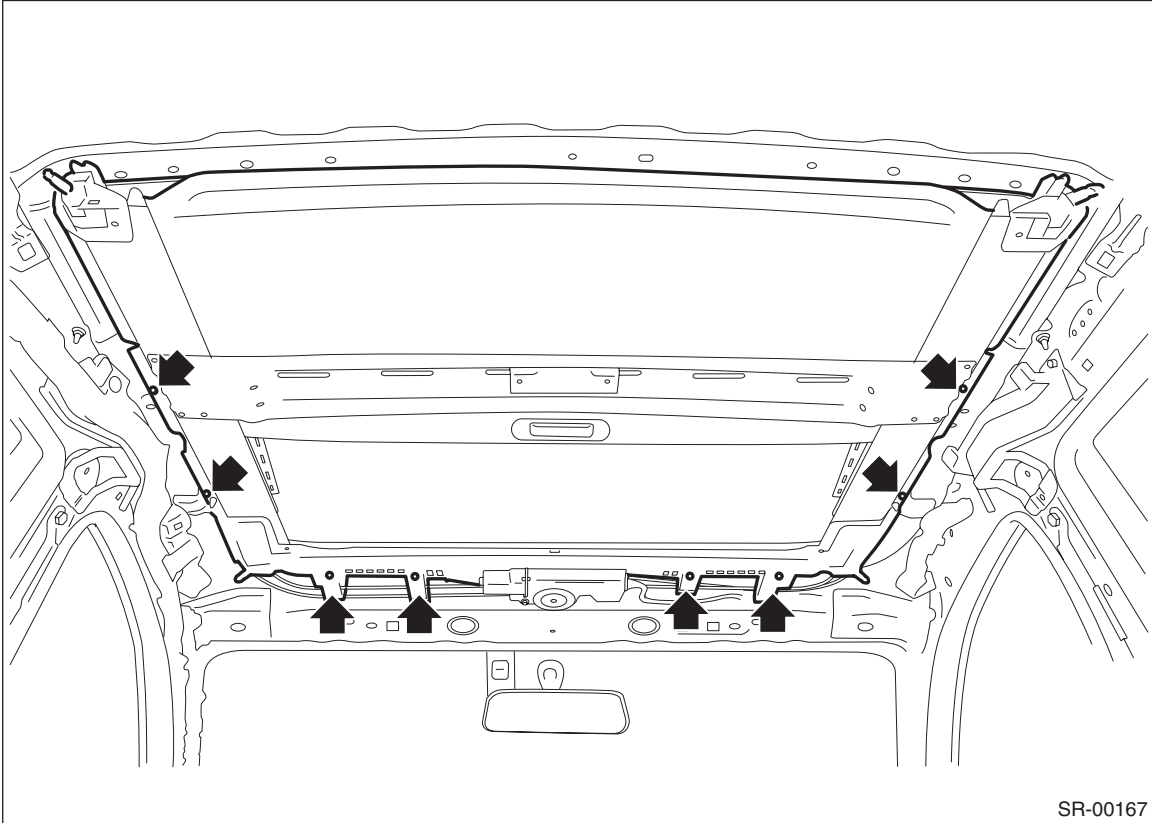

Sunroof Assembly

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)

B: INSTALLATION

CAUTION:

Be careful not to snag the harness.

Install each part in the reverse order of removal.

Tightening torque:


Refer to “COMPONENT” of “General Description”. <Ref. to SR-2, COMPONENT, General Description.>

NOTE:

- Be sure to connect the harness connector.
- When installing the drain tube, insert it securely into drain pipe.

Length A:


15 mm (0.59 in) or more

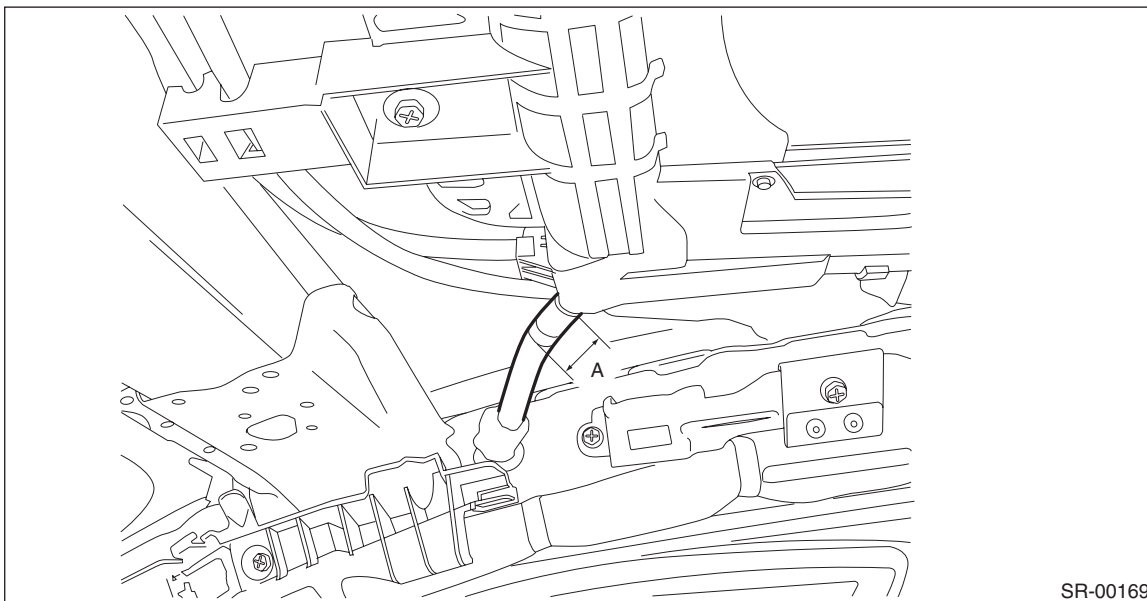

SR-00169

C: DISASSEMBLY

- 1) Remove the bolts and then remove the sunroof motor.

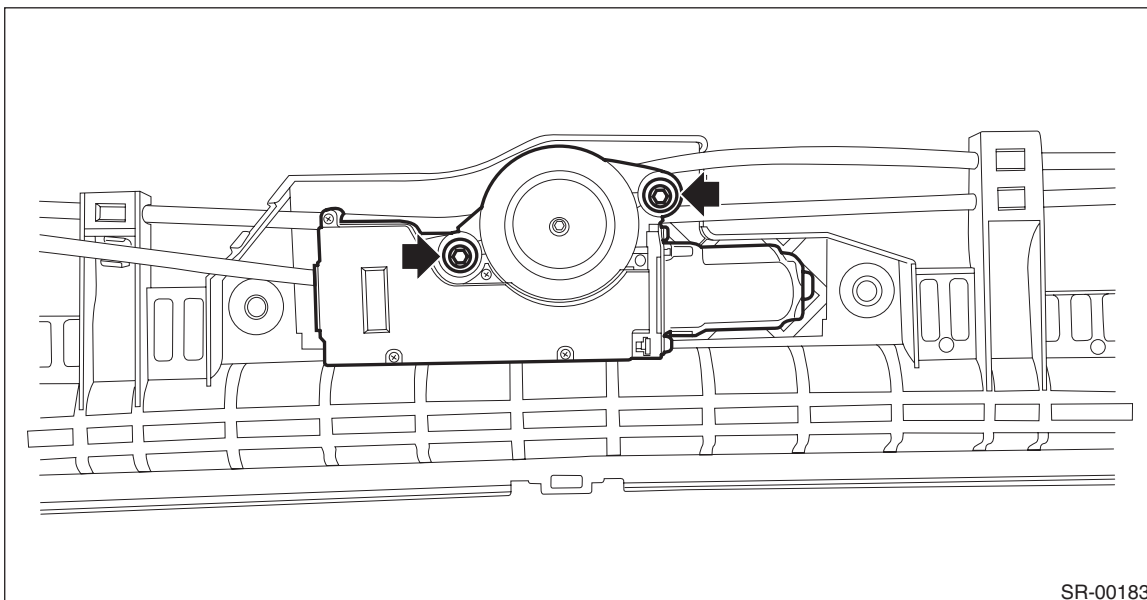


SR-00183


Sunroof Assembly

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)

- 2) Remove the stopper rubber and pull out the sunshade from sunroof frame.

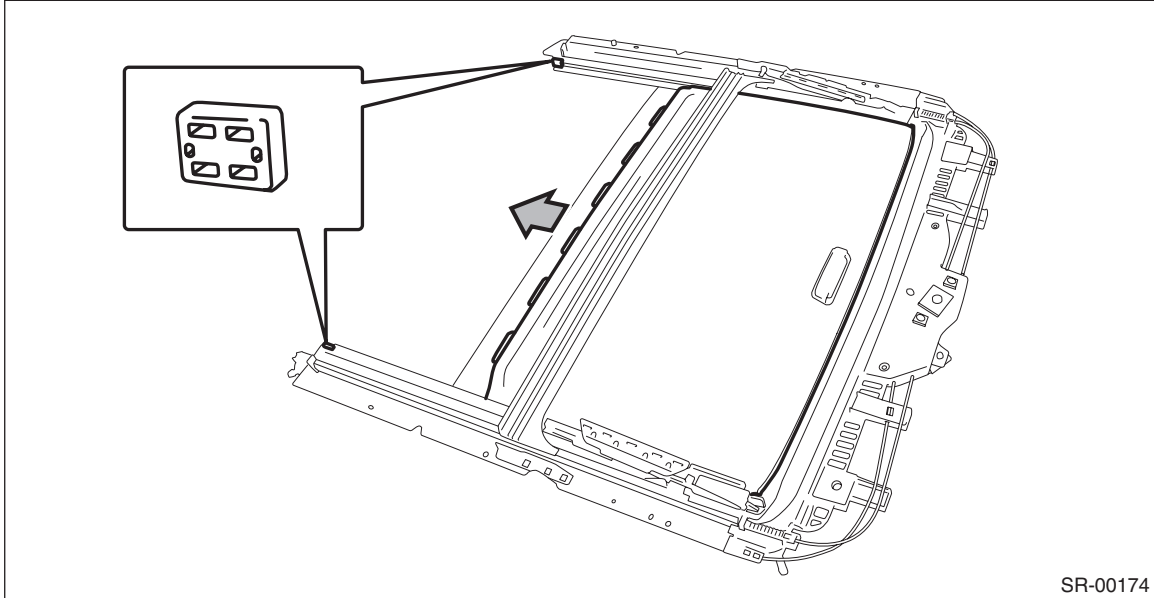


- 3) Remove the sunroof cable assembly.
(1) Remove the screw and remove the drain holder.

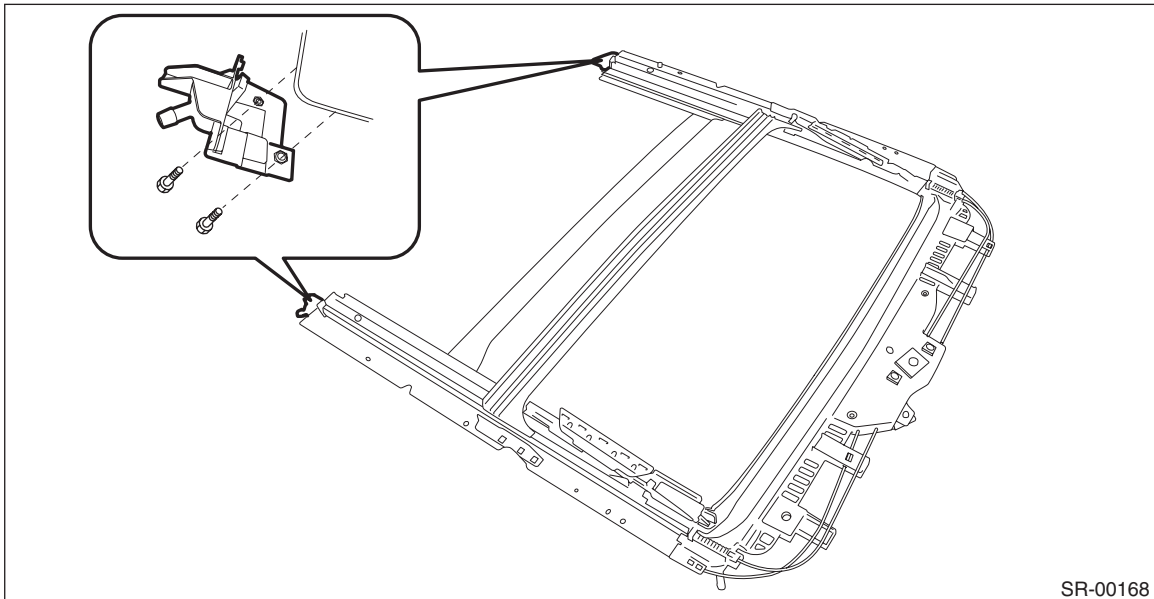

Sunroof Assembly

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)

- (2) Remove the screw and pull out the sunroof cable assembly from the frame roof assembly.

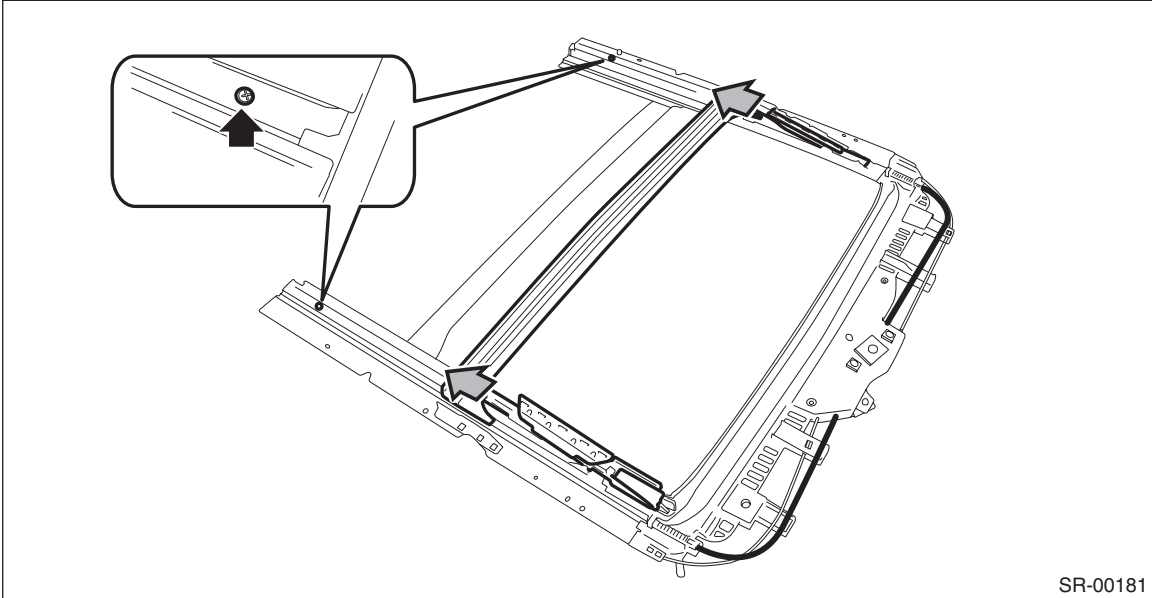

D: ASSEMBLY

Install each part in the reverse order of removal.