

8. Sunshade

A: REMOVAL


CAUTION:

When removing the clip, use great care not to damage the roof trim.

1) Remove the glass lid.

(1) Completely close the glass lid, and then open the sunshade.


(2) Disconnect the claws and then remove the lid cover.

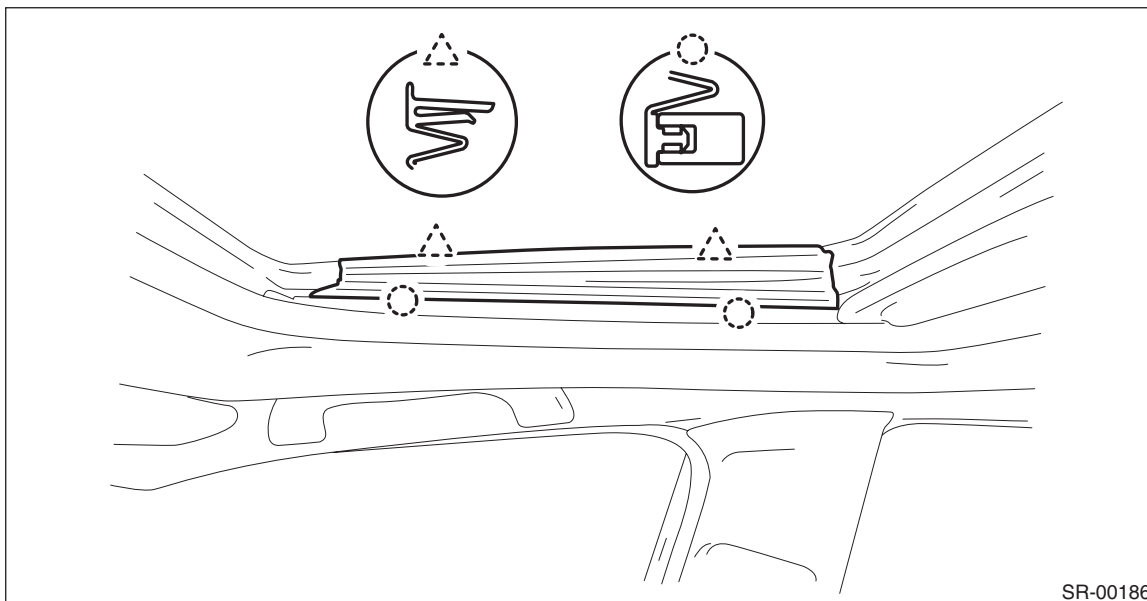

(3) Remove the bolts, then remove the glass lid.

CAUTION:

Be careful not to damage the glass lid.

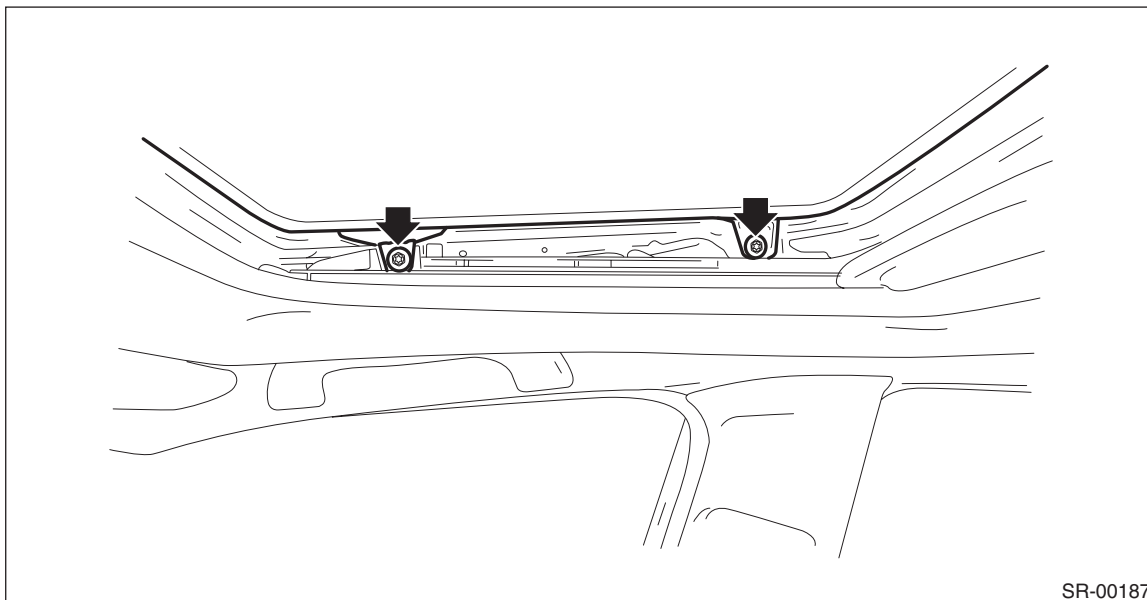


2) Remove the roof trim. <Ref. to EI-131, REMOVAL, Roof Trim.>

3) Disconnect the sunroof motor connector.

Sunshade


SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)

- 4) Remove the frame assembly.
(1) Remove the drain tube.

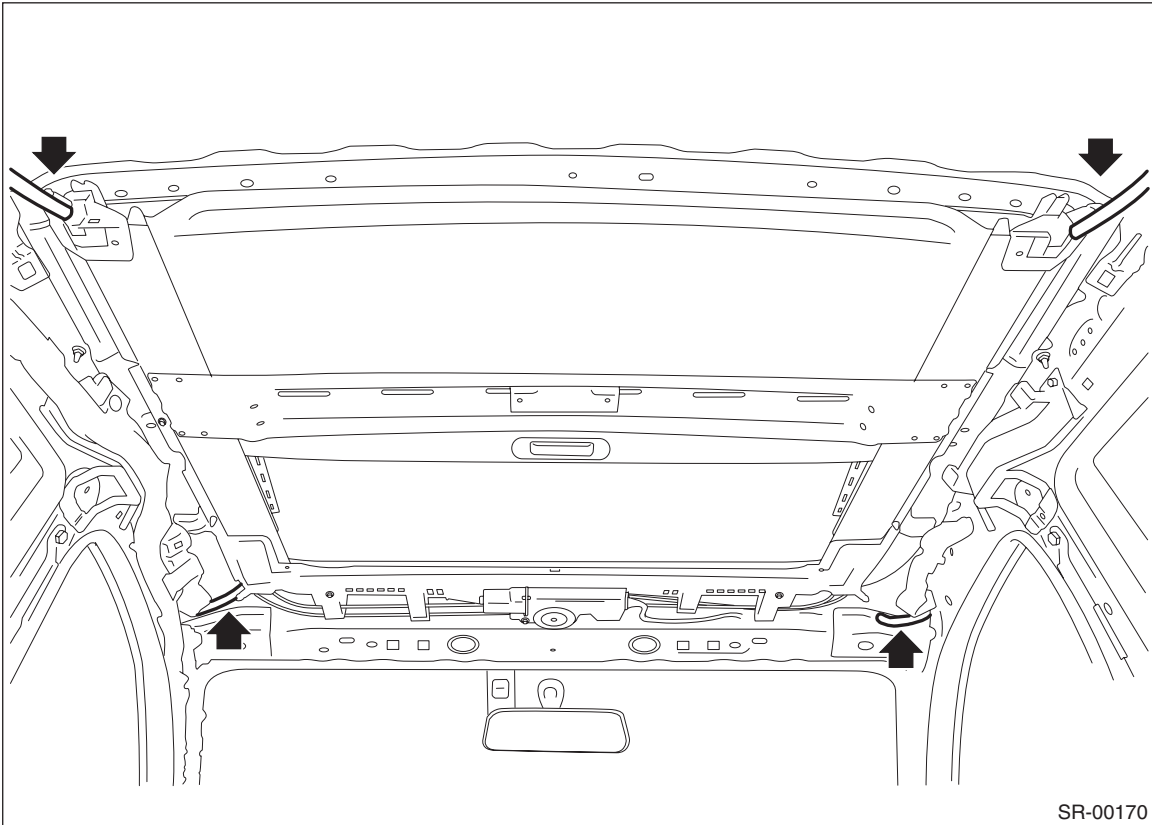

SR-00170

- (2) Remove the bolts and then remove the sunroof bracket.

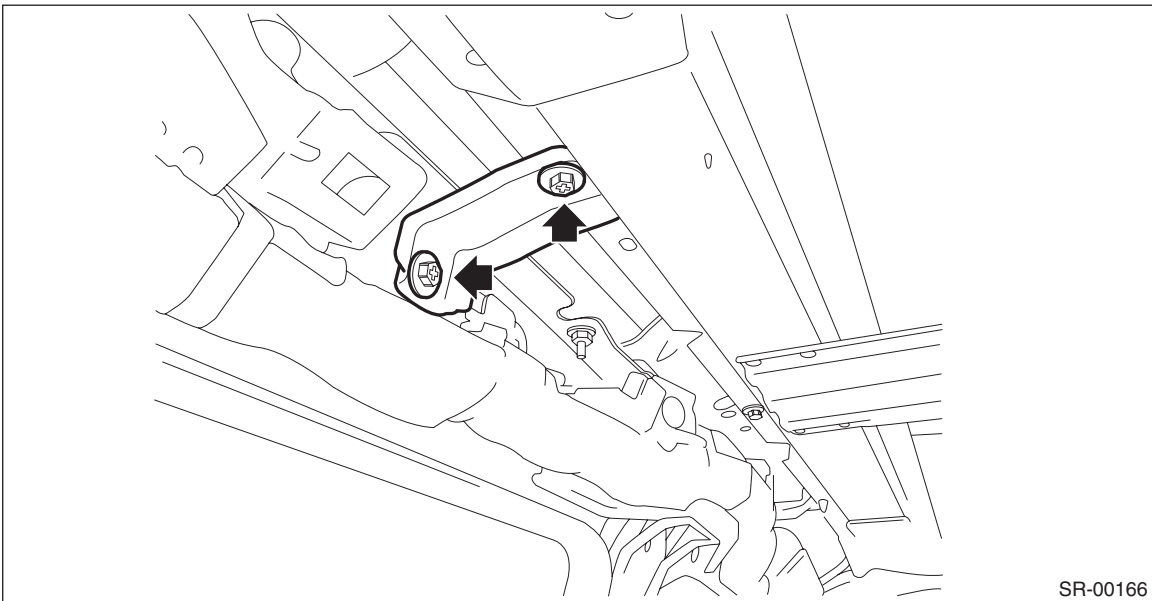


SR-00166


Sunshade

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)

(3) Remove the bolts, then remove the frame assembly.

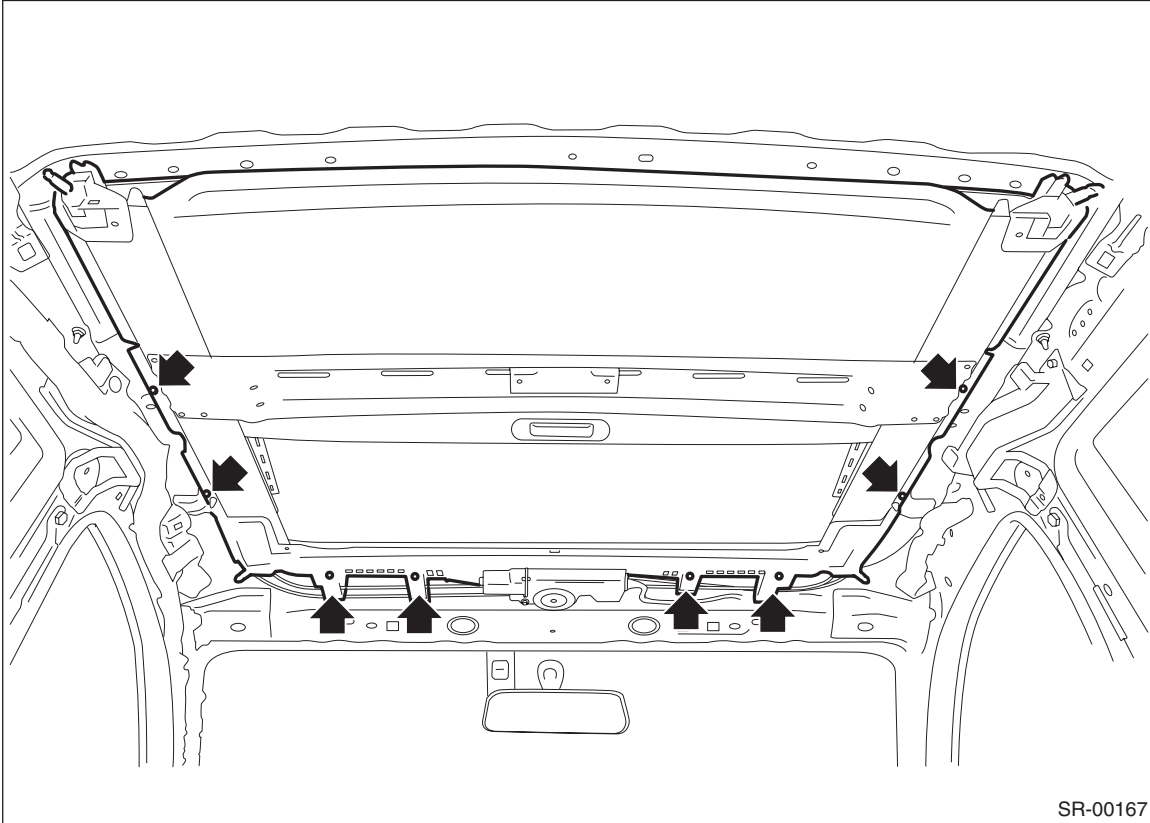

5) Remove the stopper rubber and pull out the sunshade from sunroof frame.

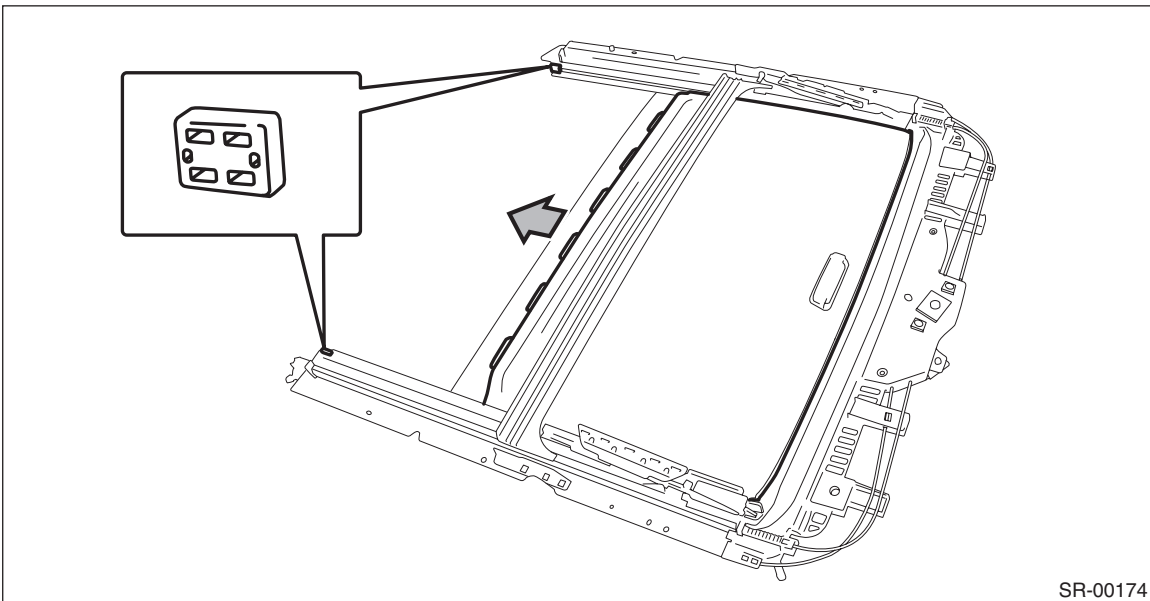

B: INSTALLATION

Install each part in the reverse order of removal.

Tightening torque:

Refer to “COMPONENT” of “General Description”. <Ref. to SR-2, COMPONENT, General Description.>

Sunshade

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)


C: INSPECTION

1. CHECK FOR MOVING LOAD OF SUNSHADE

- 1) Attach a spring scale to sunshade edge using a cloth.
- 2) Pull the spring scale to check the moving load of the sunshade.

Moving load of sunshade:

14 ± 6 N (1.43 kgf, 3.1 lbf $\pm$ 0.61 kgf, 1.3 lbf)

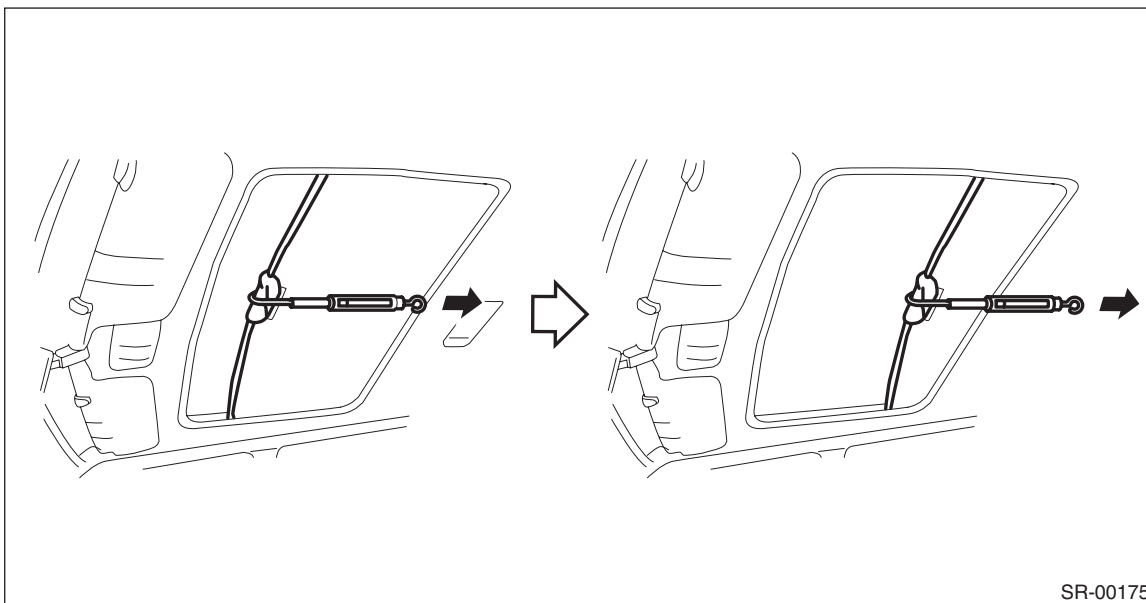

SR-00175

NOTE:

Moving load is larger at the beginning of pulling a spring scale, so take a spring scale reading while sunshade sliding smoothly.

- 3) If the inspection result exceeds the standard value, check if the installation to sunshade or frame assembly is sufficient, and replace if necessary.

EXTERIOR/INTERIOR TRIM



	Page
1. General Description	2
2. Front Grille	26
3. Front Hood Grille	30
4. Cowl Panel	32
5. Front Under Cover	35
6. Floor Under Protector	36
7. Fuel Tank Protector	37
8. Mud Guard	38
9. Front Bumper	39
10. Rear Bumper	50
11. Side Sill Spoiler	55
12. Roof Molding	56
13. Roof Rail	59
14. Door Trim	60
15. Instrument Panel Lower Cover	63
16. Glove Box	65
17. Center Console	68
18. Console Box	72
19. Instrument Panel Assembly	75
20. Lower Inner Trim	95
21. Upper Inner Trim	101
22. Rear Quarter Trim	109
23. Rear Shelf Trim	120
24. Trunk Room Trim	127
25. Sun Visor	129
26. Assist Grip	130
27. Roof Trim	131
28. Rear Gate Trim	160
29. Floor Mat	162
30. Trunk Lid Garnish	163
31. Rear Gate Garnish	164
32. Heat Shield Cover	167
33. Ornament	169