

## 14. Automatic Transmission Fluid

### A: INSPECTION

Refer to “5AT” section for ATF inspection. <Ref. to 5AT-28, INSPECTION, Automatic Transmission Fluid.>

### B: REPLACEMENT

Refer to “5AT” section for ATF replacement. <Ref. to 5AT-28, REPLACEMENT, Automatic Transmission Fluid.>