

3. Engine Oil

A: INSPECTION

Refer to "LU" section for engine oil inspection.
<Ref. to LU(H4DO)-8, INSPECTION, Engine Oil.>
<Ref. to LU(H6DO)-9, INSPECTION, Engine Oil.>

B: REPLACEMENT

Refer to "LU" section for engine oil replacement.
<Ref. to LU(H4DO)-9, REPLACEMENT, Engine Oil.> <Ref. to LU(H6DO)-9, REPLACEMENT, Engine Oil.>