



22. Fuel Pump Relay

A: REMOVAL

- 1) Disconnect the ground cable from battery.

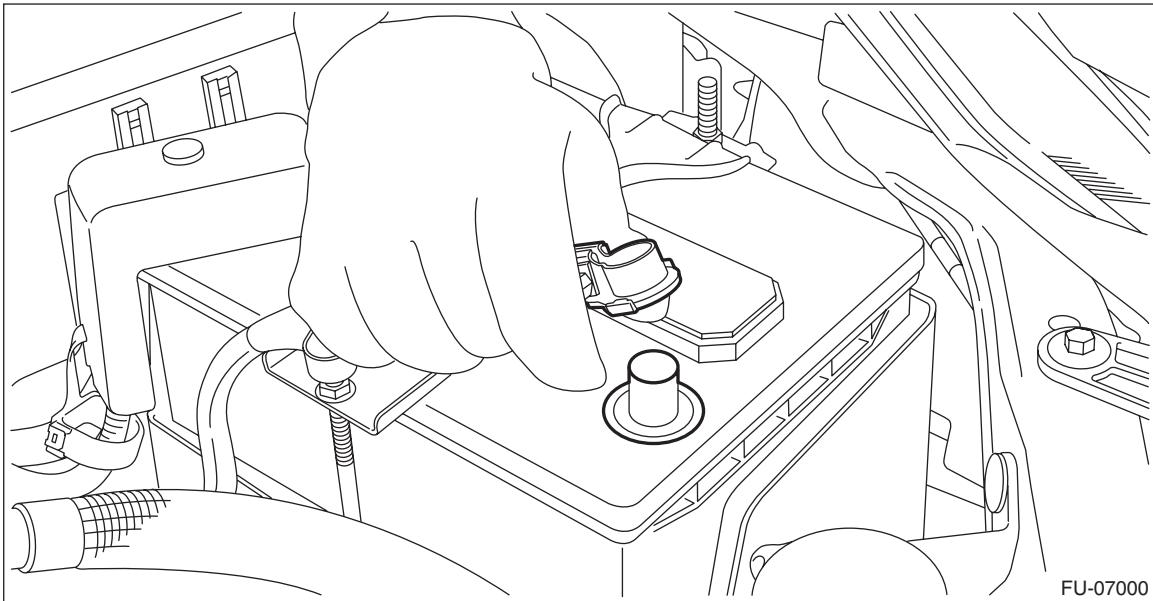

- 2) Remove the back panel - pocket. <Ref. to EI-63, REMOVAL, Glove Box.>
- 3) Remove the fuel pump relay from the relay block on the back side of the glove box.

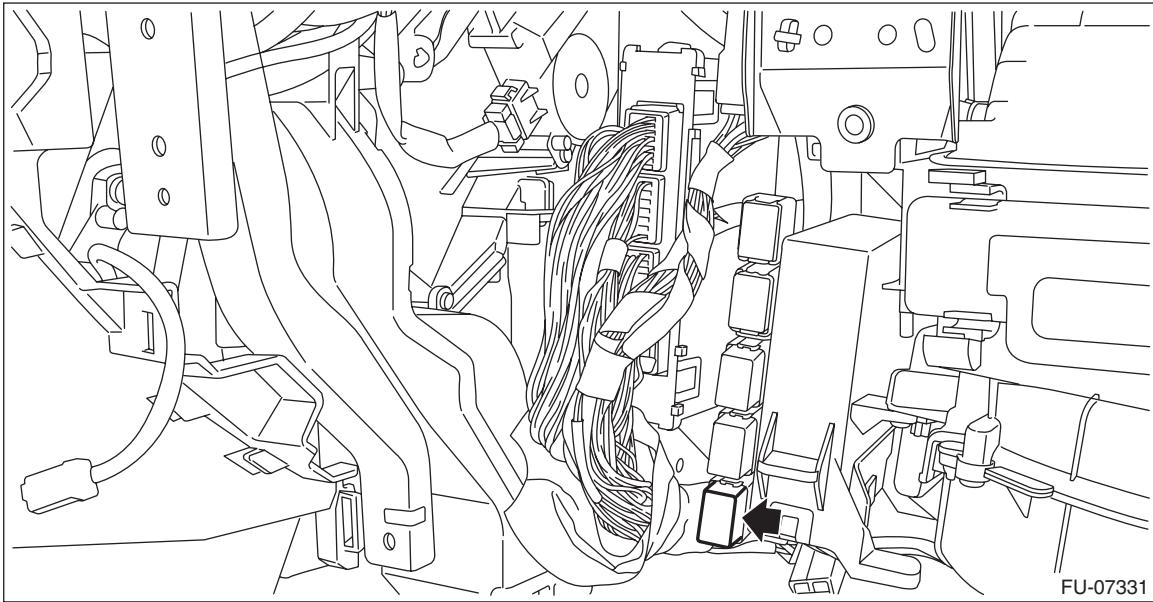

B: INSTALLATION


Install in the reverse order of removal.

Fuel Pump Relay

FUEL INJECTION (FUEL SYSTEMS)

C: INSPECTION


- 1) Check that the fuel pump relay has no deformation, cracks or other damages.
- 2) Measure the resistance between fuel pump relay terminals.

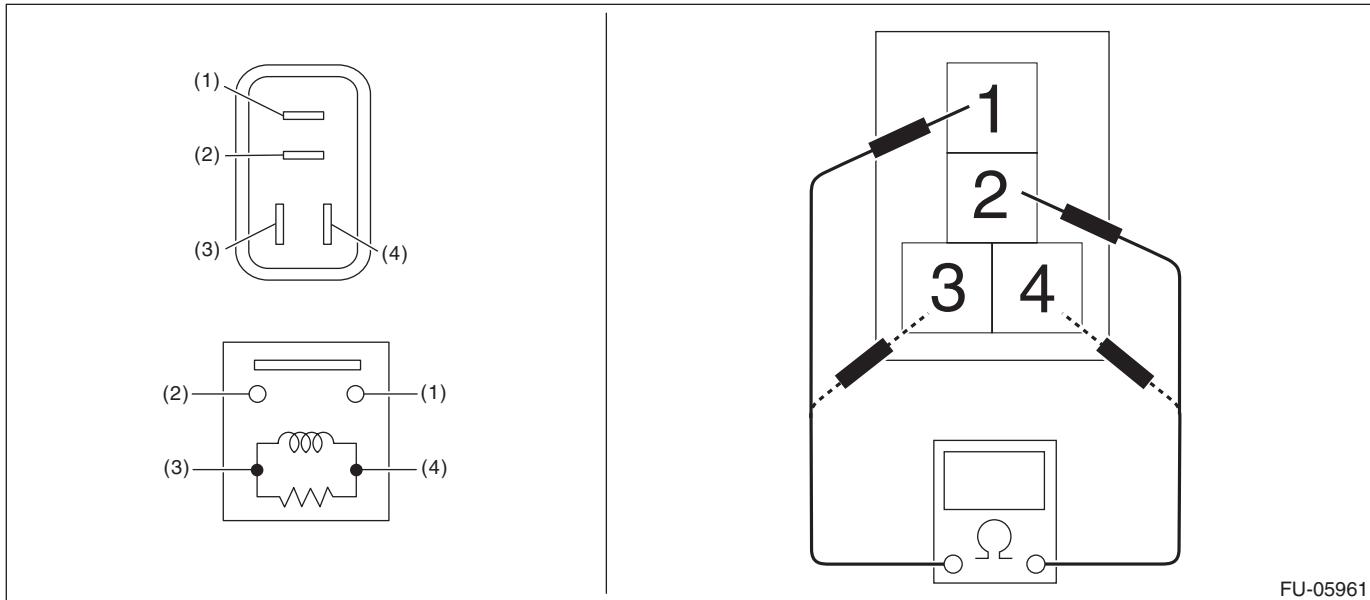

FU-05961

Terminal No.	Standard
1 and 2	1 MΩ or more
3 and 4	93.8 — 136.4 Ω (when 20°C (68°F))

- 3) Connect battery positive terminal to terminal No. 3 and battery ground terminal to terminal No. 4, and measure the resistance between the fuel pump relay terminals.

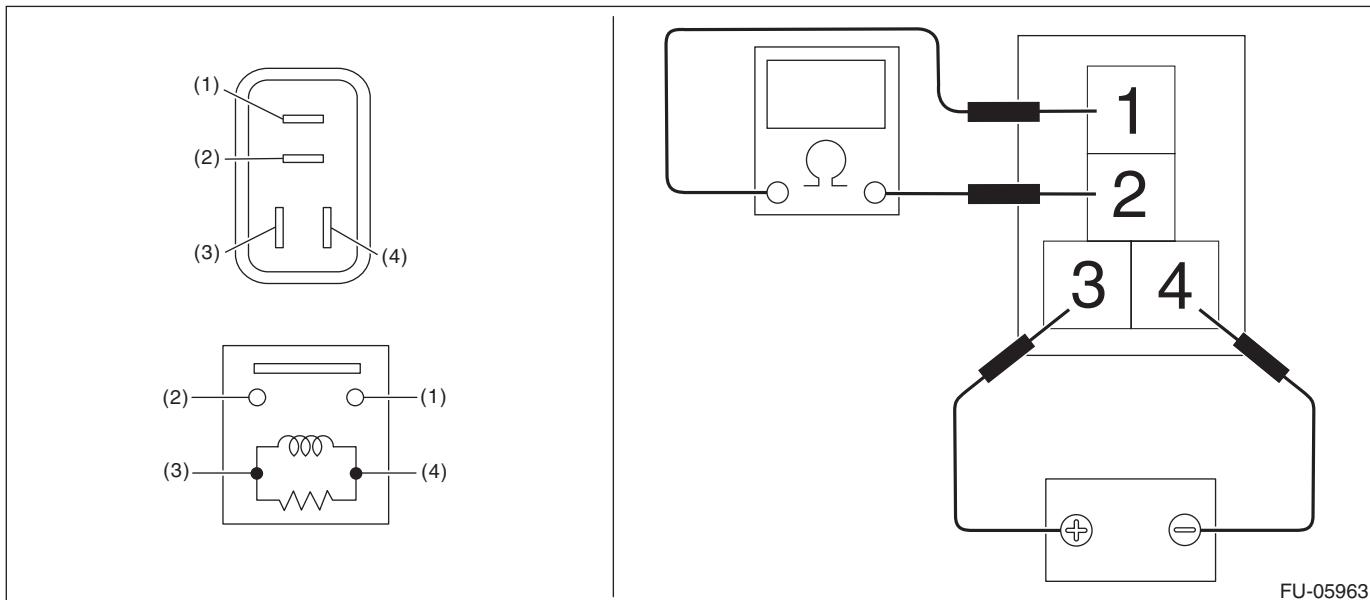

FU-05963

Terminal No.	Standard
1 and 2	Less than 1 Ω