

PCV Hose Assembly

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)


12. PCV Hose Assembly

A: REMOVAL

CAUTION:


Do not remove except when the PCV hose is broken.

- 1) Remove the intake manifold. <Ref. to FU(H4DO)-23, REMOVAL, Intake Manifold.>
- 2) Remove the PCV hose assembly from the PCV connector.

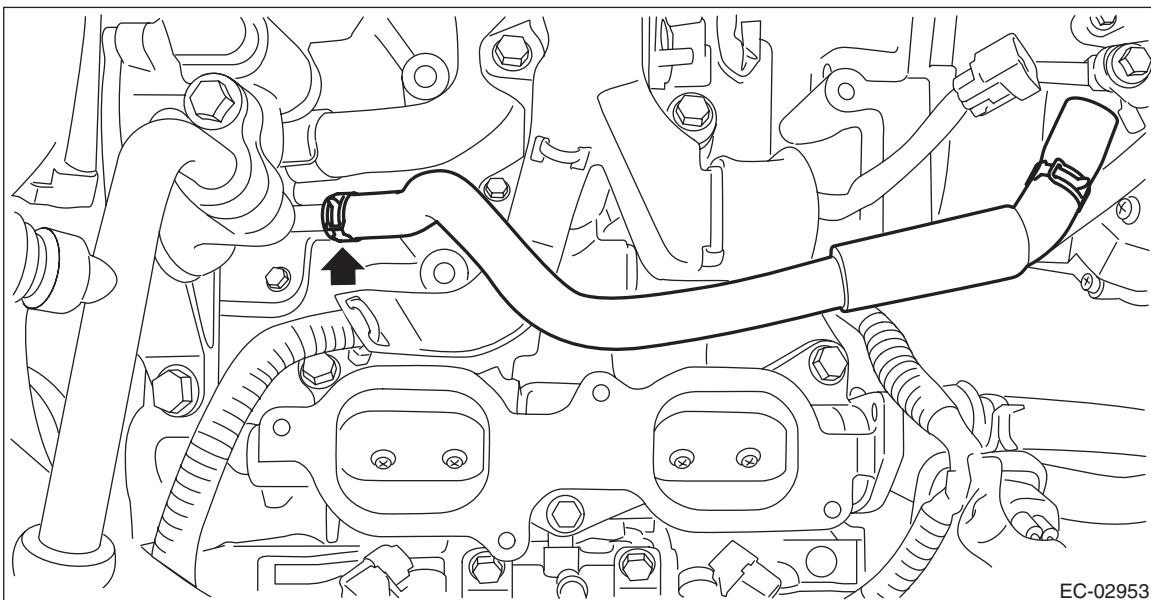

B: INSTALLATION

- 1) Attach the PCV hose assembly to the PCV connector.

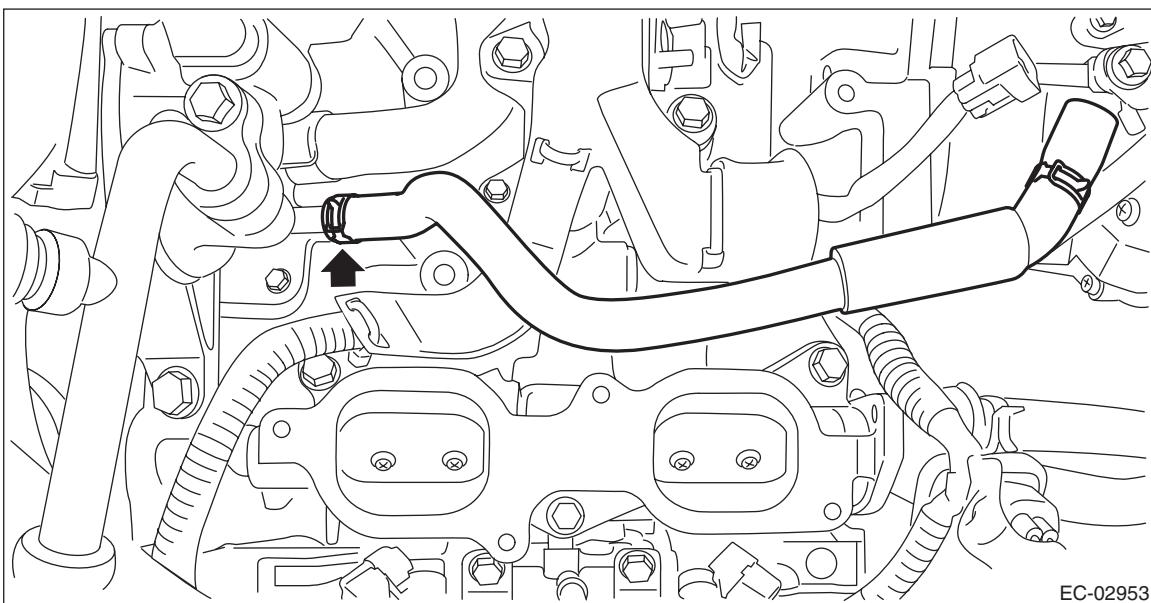

- 2) Install the intake manifold. <Ref. to FU(H4DO)-32, INSTALLATION, Intake Manifold.>

C: INSPECTION

Check the PCV hose assembly for cracks, damage or looseness.