

## 6. Resonator Chamber

### A: REMOVAL

The resonator chamber and air cleaner case are integrated into one unit; therefore, refer to "Air Cleaner Case" for removal procedure. <Ref. to IN(H4DO)-7, REMOVAL, Air Cleaner Case.>

### B: INSTALLATION

The resonator chamber and air cleaner case are integrated into one unit; therefore, refer to "Air Cleaner Case" for installation procedure. <Ref. to IN(H4DO)-10, INSTALLATION, Air Cleaner Case.>

### C: INSPECTION

Check that the resonator chamber has no deformation, cracks or other damages.

## **Resonator Chamber**

**INTAKE (INDUCTION)**

---

# MECHANICAL

# *ME(H4DO)*

---

	Page
1. General Description .....	2
2. Compression .....	25
3. Idle Speed .....	27
4. Ignition Timing .....	28
5. Intake Manifold Vacuum .....	29
6. Engine Oil Pressure .....	31
7. Fuel Pressure .....	33
8. Cam Clearance .....	35
9. Engine Assembly .....	46
10. Engine Mounting .....	71
11. Preparation for Overhaul .....	79
12. V-belt .....	80
13. Crank Pulley .....	87
14. Chain Cover .....	95
15. Timing Chain Assembly .....	110
16. Cam Sprocket .....	130
17. Crank Sprocket .....	137
18. Rocker Cover .....	139
19. Camshaft .....	152
20. Cam Carrier .....	153
21. Cylinder Head .....	197
22. Cylinder Block .....	238
23. Intake and Exhaust Valve .....	344
24. Piston .....	345
25. Connecting Rod .....	346
26. Crankshaft .....	347
27. Engine Trouble in General .....	348
28. Engine Noise .....	354