


5. Muffler

A: REMOVAL

CAUTION:

Vehicle components are extremely hot after driving. Be wary of receiving burns from heated parts.


- 1) Lift up the vehicle.
- 2) Remove the rear exhaust pipe from the muffler.

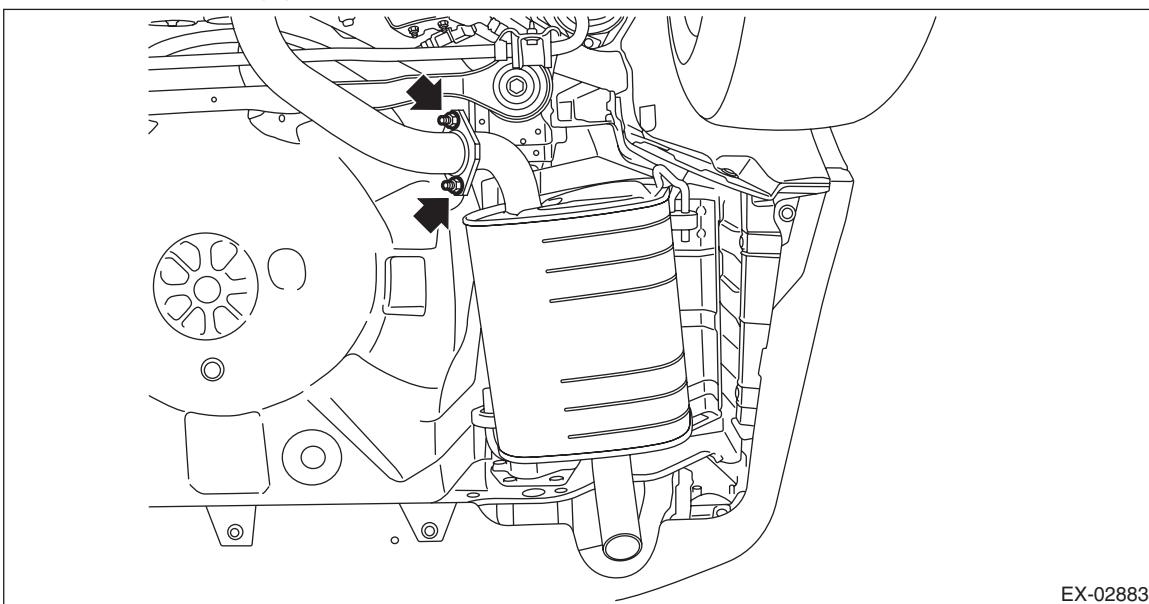

- 3) Apply a coat of spray type lubricant to the mating area of cushion rubber.
- 4) Remove the muffler from the cushion rubber.

CAUTION:


Be careful not to drop the muffler during removal.

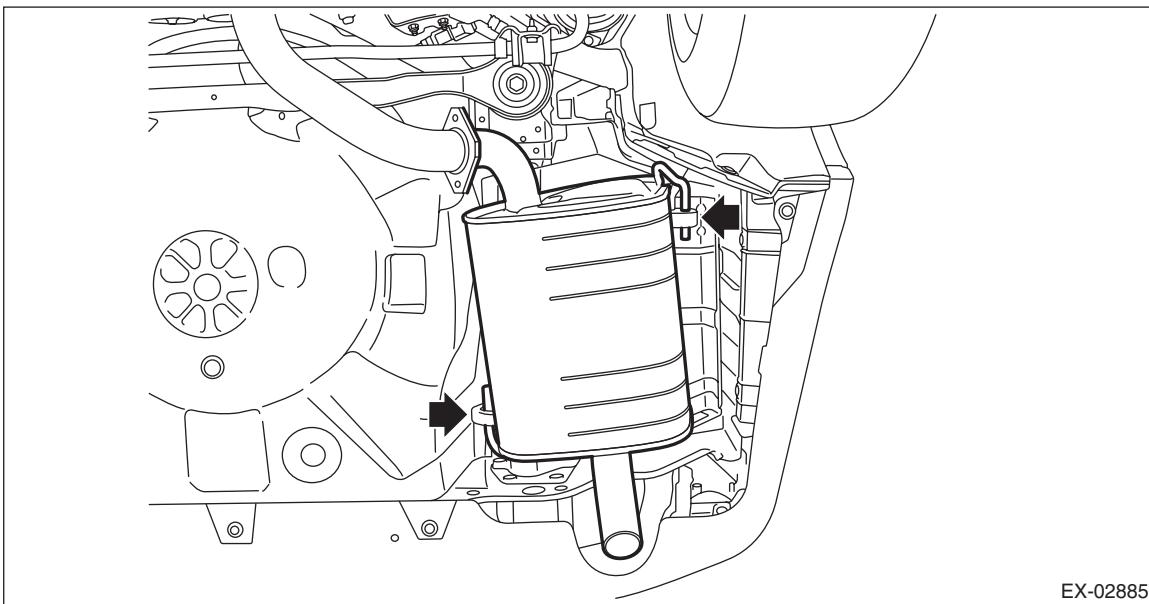

Muffler

EXHAUST

5) Remove the heat shield cover from the vehicle.

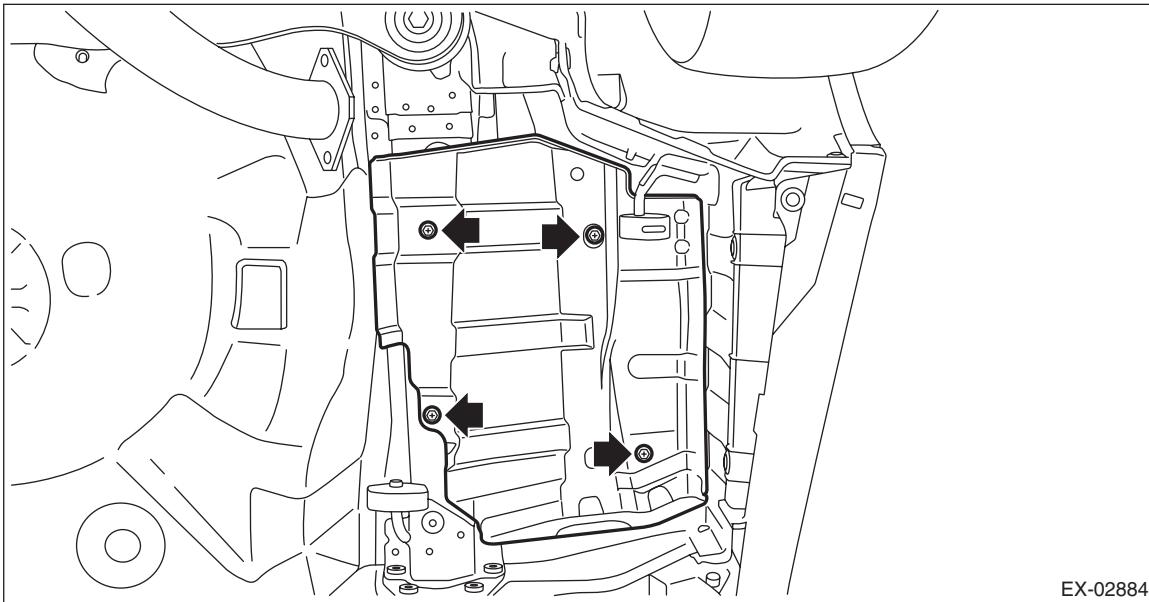

B: INSTALLATION


Install in the reverse order of removal.

NOTE:

- Use a new gasket and self-locking nut.
- After assembling, degrease the lubricant which was applied to the cushion rubber while removing/installing.


Tightening torque:

10 N·m (1.0 kgf·m, 7.4 ft-lb)

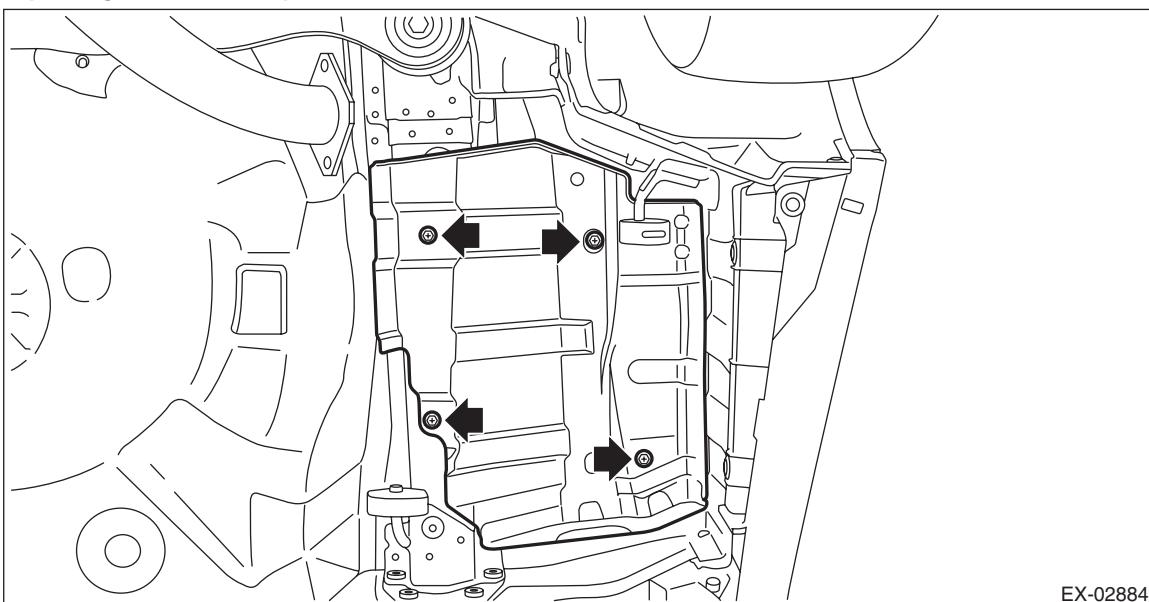

Tightening torque:

48 N·m (4.9 kgf·m, 35.4 ft-lb)

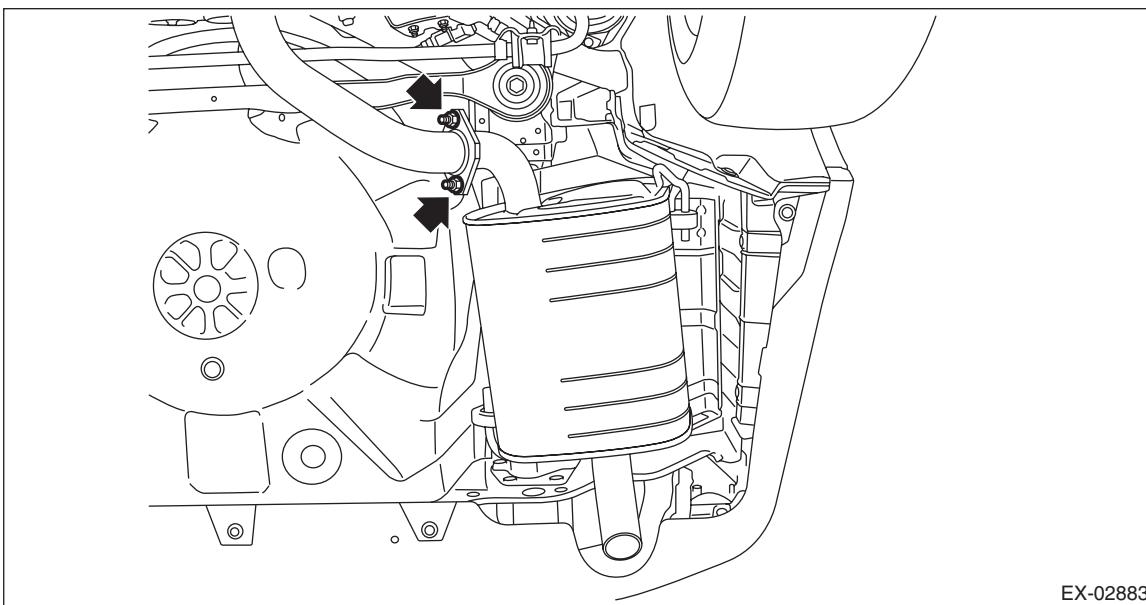

C: INSPECTION

- 1) Check the connections and welded parts for exhaust leaks.
- 2) Make sure there are no holes or rusting.
- 3) Check the cushion rubber for wear or crack.

Muffler

EXHAUST

COOLING

CO(H4DO)

	Page
1. General Description	2
2. Radiator Fan System	7
3. Engine Coolant	14
4. Water Pump	17
5. Thermostat	20
6. Radiator	24
7. Radiator Cap	34
8. Radiator Main Fan and Fan Motor	35
9. Radiator Sub Fan and Fan Motor	38
10. Reservoir Tank	41
11. Engine Cooling System Trouble in General	42