

## 4. Oil Pump

### A: SPECIFICATION

The oil pump cannot be disassembled.

Refer to "Chain Cover" for removal and installation procedures. <Ref. to ME(H4DO)-95, REMOVAL, Chain Cover.> <Ref. to ME(H4DO)-100, INSTALLATION, Chain Cover.>