

## 29. Fuel Damper

### A: REMOVAL

**WARNING:**


Place "NO OPEN FLAMES" signs near the working area.

**CAUTION:**

- Be careful not to spill fuel.
- Catch the fuel from hoses using a container or cloth.

1) Release the fuel pressure. <Ref. to FU(H6DO)-59, RELEASING OF FUEL PRESSURE, PROCEDURE, Fuel.>

2) Disconnect the fuel delivery hose (A) from fuel damper and remove the fuel damper.

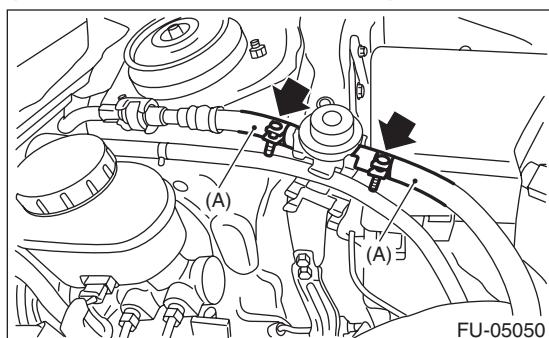

### B: INSTALLATION

Install in the reverse order of removal.

**NOTE:**

If fuel hoses or clamps are damaged, replace them with new parts.

***Tightening torque:***

1.25 N·m (0.1 kgf·m, 0.9 ft-lb)

### C: INSPECTION

- 1) Check that the fuel damper has no deformation, cracks or other damages.
- 2) Check the fuel delivery hose for cracks, damage or looseness.