

### 8. Fuel Sub Level Sensor

#### A: REMOVAL

For removal procedure, refer to “FU(H6DO)” section. <Ref. to FU(H6DO)-75, REMOVAL, Fuel Sub Level Sensor.>

#### B: INSTALLATION

For installation procedure, refer to “FU(H6DO)” section. <Ref. to FU(H6DO)-76, INSTALLATION, Fuel Sub Level Sensor.>

#### C: INSPECTION

For inspection procedures, refer to the “FU(H6DO)” section. <Ref. to FU(H6DO)-76, INSPECTION, Fuel Sub Level Sensor.>