


## 10. Reservoir Tank

### A: REMOVAL

- 1) Pull out the over flow hose.
- 2) Remove bolts which secure the reservoir tank, and remove the reservoir tank.

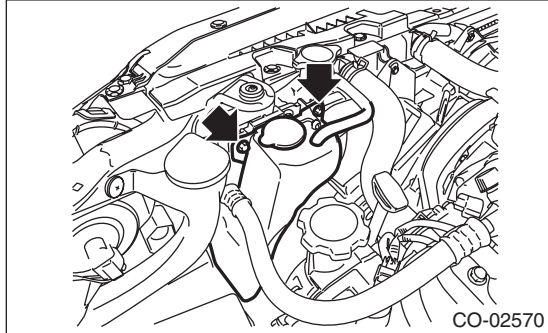

### B: INSTALLATION

Install in the reverse order of removal.

#### ***Tightening torque:***

***7.5 N·m (0.8 kgf-m, 5.5 ft-lb)***

### C: INSPECTION

- 1) Check that the reservoir tank does not have deformation, cracks or damage.
- 2) Check the over flow hose for cracks or damage.
- 3) Make sure the engine coolant level is between "FULL" and "LOW".