

General Description

LUBRICATION

1. General Description

A: SPECIFICATION

Lubrication method				Forced lubrication	
Oil pump				Trochoid type	
Number of teeth	Inner rotor		7		
	Outer rotor		8		
Outer rotor diameter × thickness			mm (in) 76 × 30.2 (2.99 × 1.19)		
Performance (Oil temperature 80°C (176°F))	600 rpm	Discharge pressure	kPa (kgf/cm ² , psi) 98 (1.0, 14)		
		Discharge rate	L (US qt, Imp qt)/min. 5.0 (5.3, 4.4) or more		
	6,000 rpm	Discharge pressure	kPa (kgf/cm ² , psi) 392 (4.0, 57)		
	Discharge rate	L (US qt, Imp qt)/min. 82.8 (87.5, 72.9) or more			
	Oil filter				Full-flow filter type
					Filtration area cm ² (sq in) 1,300 (201.5)
					By-pass valve opening pressure kPa (kgf/cm ² , psi) 160 (1.63, 23.2)
					Outer diameter × width mm (in) 80 × 75 (3.15 × 2.95)
					Installation screw specifications M 20 × 1.5
	Oil pressure switch				Immersed contact point type
					Operating voltage — power consumption 12 V — 3.4 W or less
					Warning light operating pressure kPa (kgf/cm ² , psi) 14.7 (0.15, 2.1)
					Proof pressure kPa (kgf/cm ² , psi) 980 (10.0, 142) or more
	Engine oil				Total capacity (at overhaul) L (US qt, Imp qt) 7.8 (8.2, 6.9)
					When replacing engine oil and oil filter L (US qt, Imp qt) 6.5 (6.9, 5.7)
					When replacing engine oil only L (US qt, Imp qt) 6.3 (6.7, 5.5)

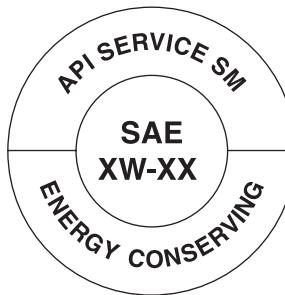
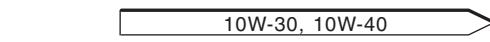
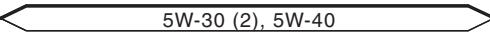
General Description

LUBRICATION

Recommended oil:

CAUTION:

It is acceptable to fill an engine with oil of another brand when replacing the oil, but make sure to use the following engine oil specified by Subaru.

Engine oil standard	 RM-00076 Those with the API standard SM "Energy Conserving" or SN "Resource Conserving" logo.	 RM-00002 Those with the ILSAC standard GF-4 or GF-5 "starburst mark" displayed on top of the container.			
SAE viscosity No.	<table border="1"><tr><td>SAE (1)</td></tr><tr><td>(°C) -30 -20 -15 0 15 30 40</td></tr><tr><td>(°F) -22 -4 5 32 59 86 104</td></tr></table>   LU-03021	SAE (1)	(°C) -30 -20 -15 0 15 30 40	(°F) -22 -4 5 32 59 86 104	(1) SAE viscosity No. and applicable temperature (2) Recommended
SAE (1)					
(°C) -30 -20 -15 0 15 30 40					
(°F) -22 -4 5 32 59 86 104					

NOTE:

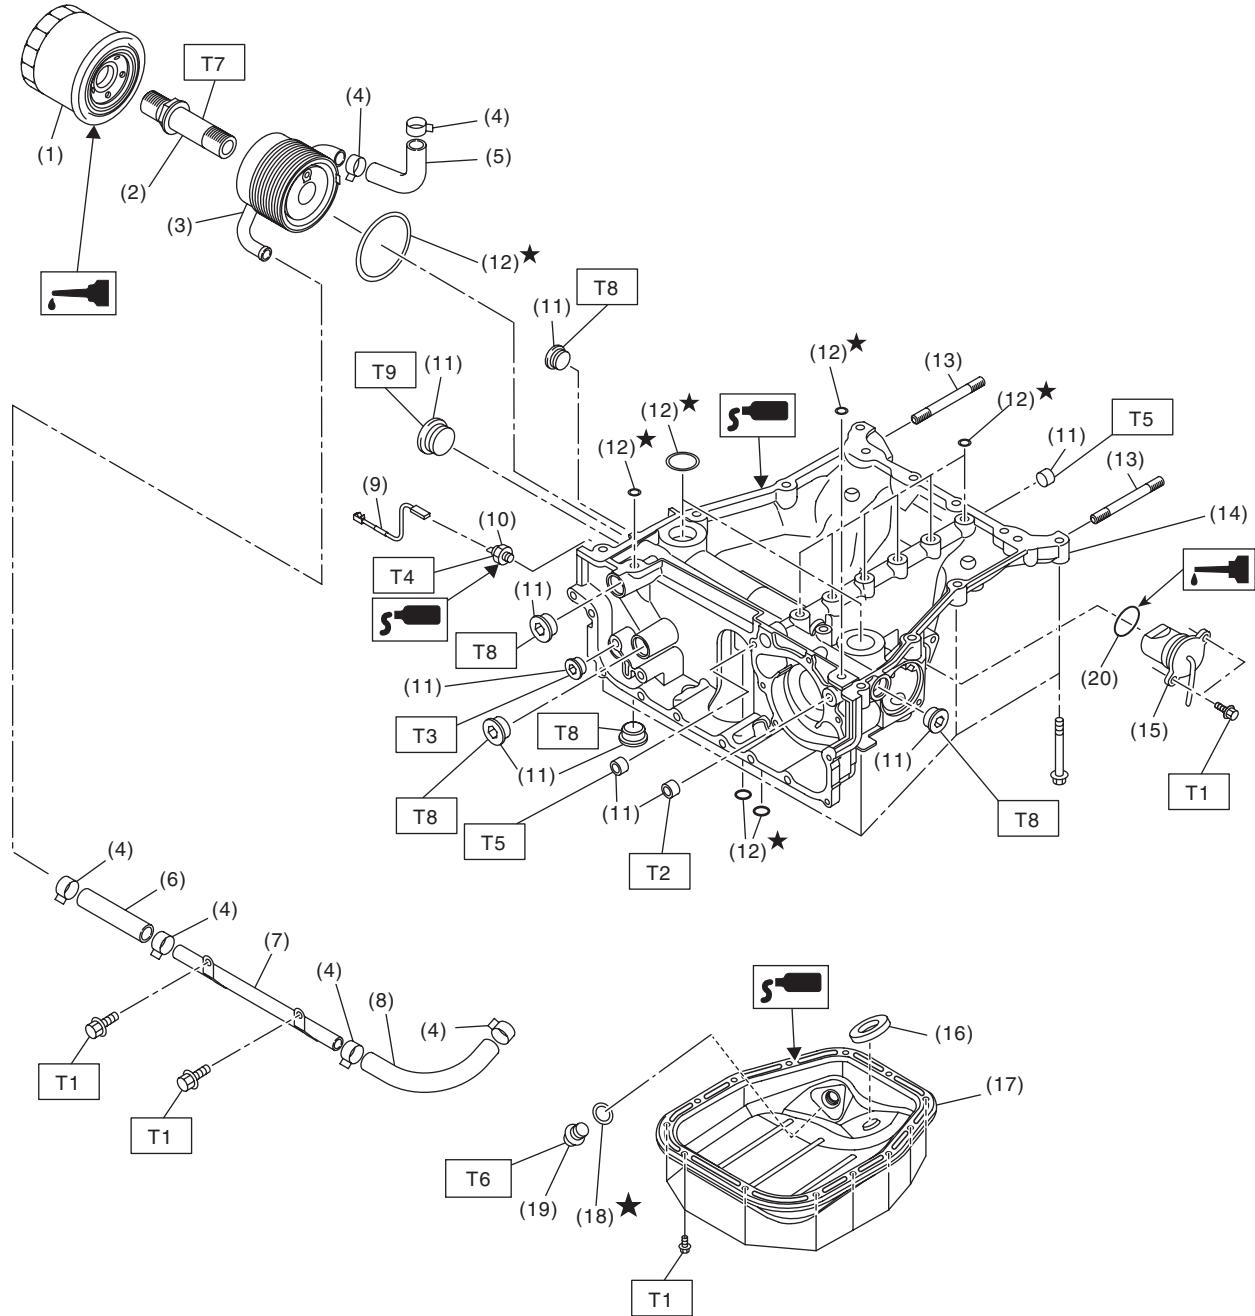
The proper viscosity oil helps the engine maintain its ideal temperature, and cranking speed increased by reducing viscosity friction in hot condition.

General Description

LUBRICATION

B: COMPONENT

1. OIL PAN UPPER, OIL COOLER, AND OIL FILTER



LU-02804

General Description

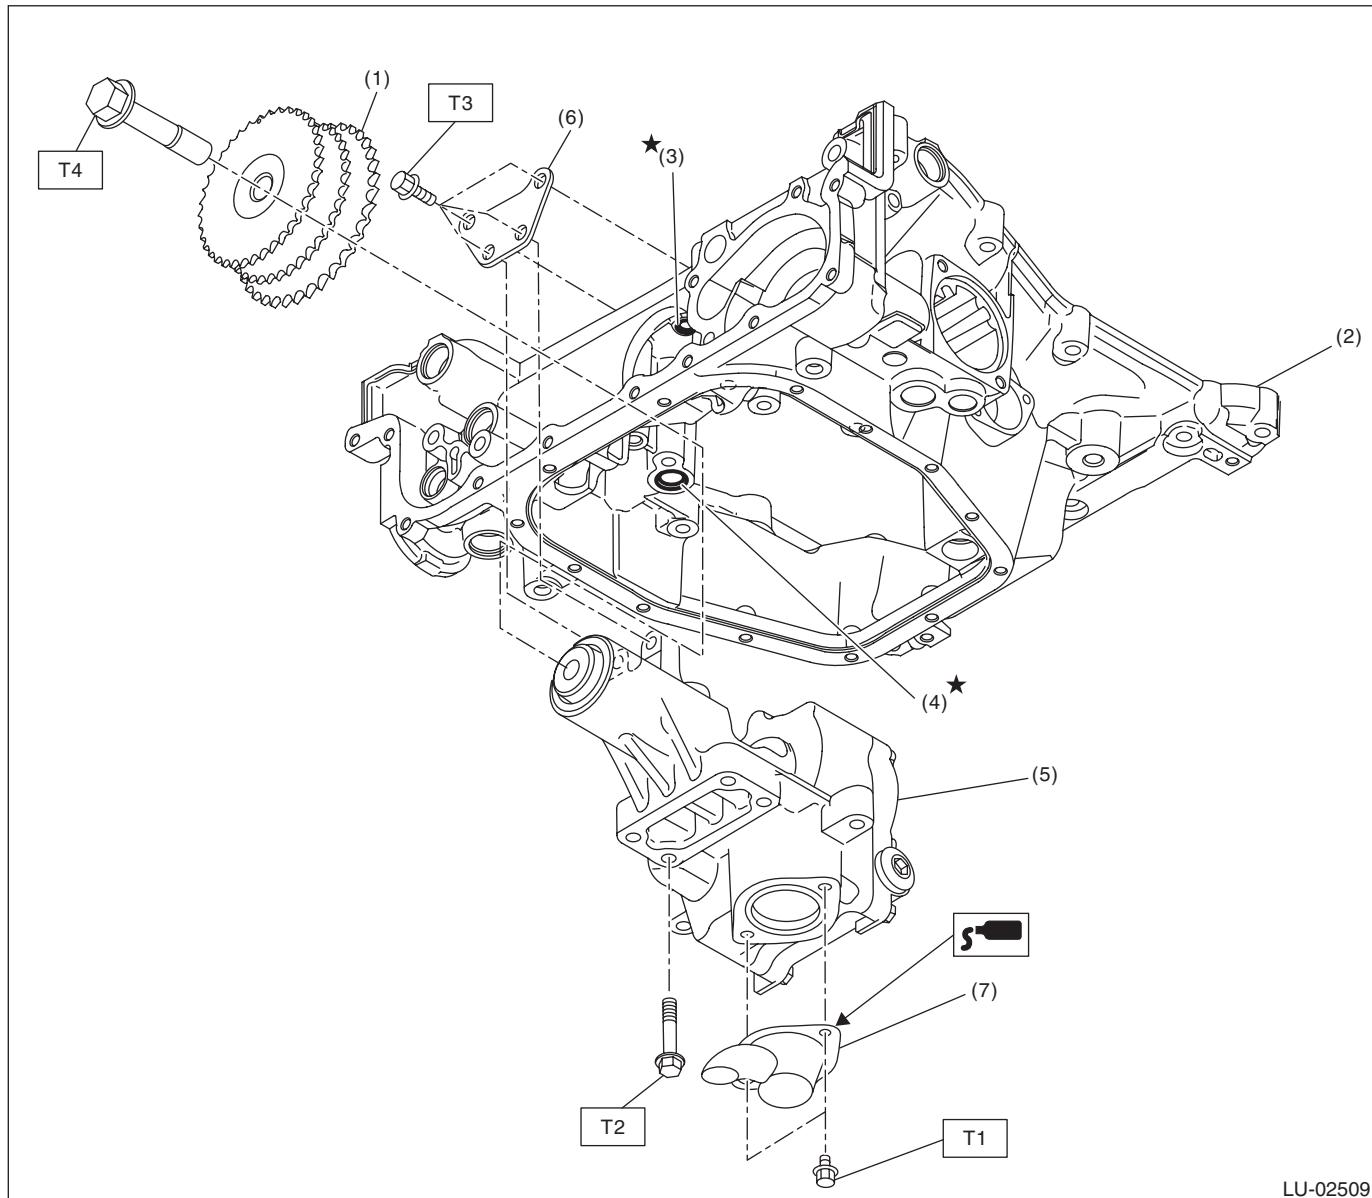
LUBRICATION

(1) Oil filter	(11) Plug
(2) Oil cooler connector	(12) O-ring
(3) Oil cooler	(13) Stud bolt
(4) Clamp	(14) Oil pan upper
(5) Water hose	(15) Oil level switch
(6) Water hose	(16) Oil pan magnet
(7) Engine oil cooler water pipe	(17) Oil pan lower
(8) Water hose	(18) Gasket
(9) Oil pressure switch harness	(19) Drain plug
(10) Oil pressure switch	(20) O-ring

Tightening torque: N·m (kgf-m, ft-lb)

T1: 6.4 (0.7, 4.7)
T2: 17 (1.7, 12.5)
T3: 23 (2.3, 17.0)
T4: 25 (2.5, 18.4)
T5: 34 (3.5, 25.1)
T6: 44 (4.5, 32.5)
T7: 54 (5.5, 39.8)
T8: 60 (6.1, 44.3)
T9: 90 (9.2, 66.4)

2. OIL PUMP



(1) Idler sprocket	(5) Oil pump
(2) Oil pan upper	(6) Stiffener
(3) O-ring	(7) Strainer
(4) O-ring	

Tightening torque: N·m (kgf-m, ft-lb)

T1: 6.4 (0.7, 4.7)
T2: 13 (1.3, 9.6)
T3: 24 (2.4, 17.7)
T4: 120 (12.2, 88.5)

General Description

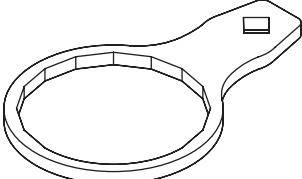
LUBRICATION

C: CAUTION

- Prior to starting work, pay special attention to the following:
 1. Always wear work clothes, a safety cap, protective shoes. Additionally, wear a helmet, protective goggles, etc. if necessary.
 2. Protect the vehicle using a seat cover, fender cover, etc.
 3. Prepare the service tools, clean cloth, containers to catch grease and oil, etc.
- Prepare a container and cloth when performing work which oil possibly spills. If oil spills, wipe it off immediately to prevent from penetrating into floor or flowing out for environmental protection.
- Vehicle components are extremely hot immediately after driving. Be wary of receiving burns from heated parts.
- When performing a repair, identify the cause of trouble and avoid unnecessary removal, disassembly and replacement.
- Before disconnecting connectors of sensors or units, be sure to disconnect the ground cable from battery.
- Always use the jack-up point when the shop jacks or rigid racks are used to support the vehicle.
- Remove contamination including dirt and corrosion before removal, installation, disassembly or assembly.
- Keep the removed parts in order and protect them from dust and dirt.
- All removed parts, if to be reused, should be reinstalled in the original positions with attention to the correct directions, etc.
- Bolts, nuts and washers should be replaced with new parts as required.
- Be sure to tighten the fasteners including bolts and nuts to the specified torque.
- If the engine oil is spilt over exhaust pipe or the under cover, wipe it off with cloth to avoid emitting smoke or causing a fire.
- Follow all government and local regulations concerning disposal of refuse when disposing of oil.

D: PREPARATION TOOL

1. SPECIAL TOOL

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST18332AA020	18332AA020	OIL FILTER WRENCH	Used for removing and installing oil filter.

2. GENERAL TOOL

TOOL NAME	REMARKS
Circuit tester	Used for measuring resistance and voltage.