

## 3. Ignition Coil

### A: REMOVAL

Direct ignition type has been adopted. Refer to “Spark Plug” for removal procedure. <Ref. to IG(H6DO)-4, REMOVAL, Spark Plug.>

### B: INSTALLATION

Install in the reverse order of removal.

***Tightening torque:***

**16 N·m (1.6 kgf·m, 11.8 ft-lb)**

### C: INSPECTION

For inspection procedure, refer to “Diagnostics for Engine Starting Failure”. <Ref. to EN(H6DO)(diag)-89, IGNITION CONTROL SYSTEM, Diagnostics for Engine Starting Failure.>

# **Ignition Coil**

**IGNITION**

---

# STARTING/CHARGING SYSTEMS

# **SC(H6DO)**

---

	Page
1. General Description .....	2
2. Starter .....	7
3. Generator .....	14
4. Battery .....	20