


## 24. Air Breather Hose

### A: REMOVAL


#### 1. FRONT DIFFERENTIAL SIDE

- 1) Remove the air intake boot assembly. <Ref. to IN(H4DO)-13, REMOVAL, Air Intake Boot.>
- 2) Remove the air breather hose.

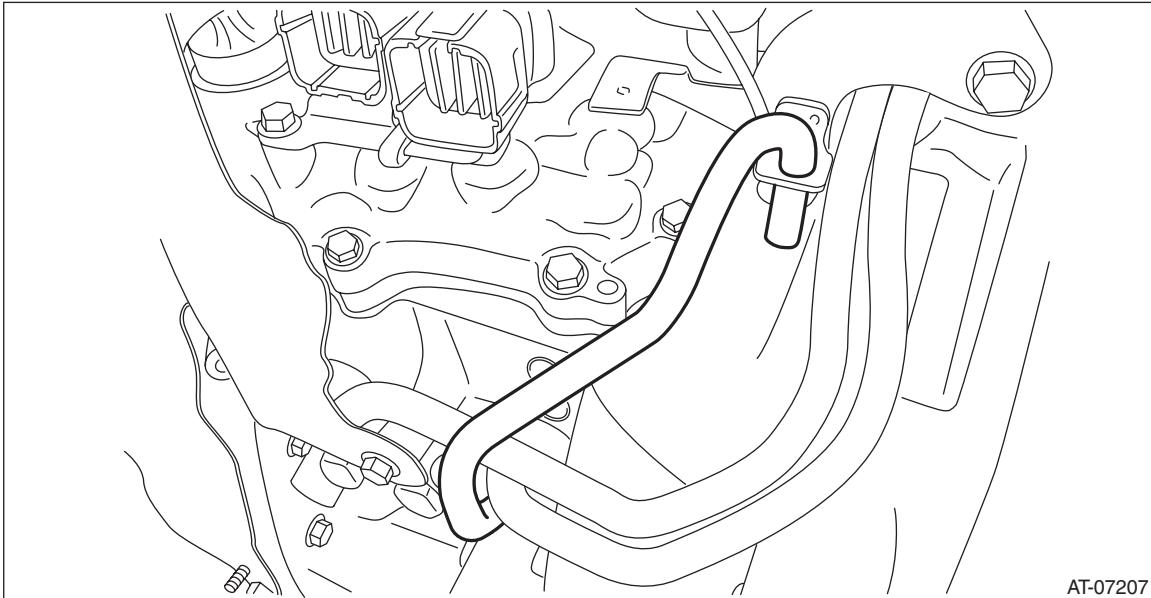


#### 2. TRANSMISSION CASE SIDE

- 1) Remove the transmission assembly. <Ref. to CVT-57, REMOVAL, Automatic Transmission Assembly.>
- 2) Remove the transmission case cover.

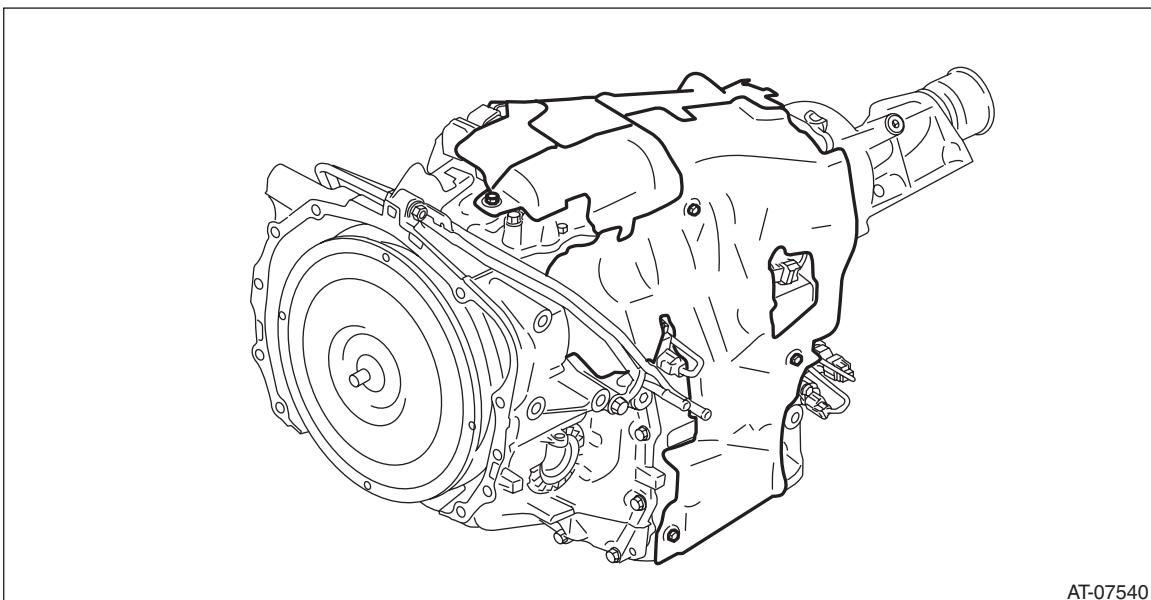

- 3) Remove the air breather hose.

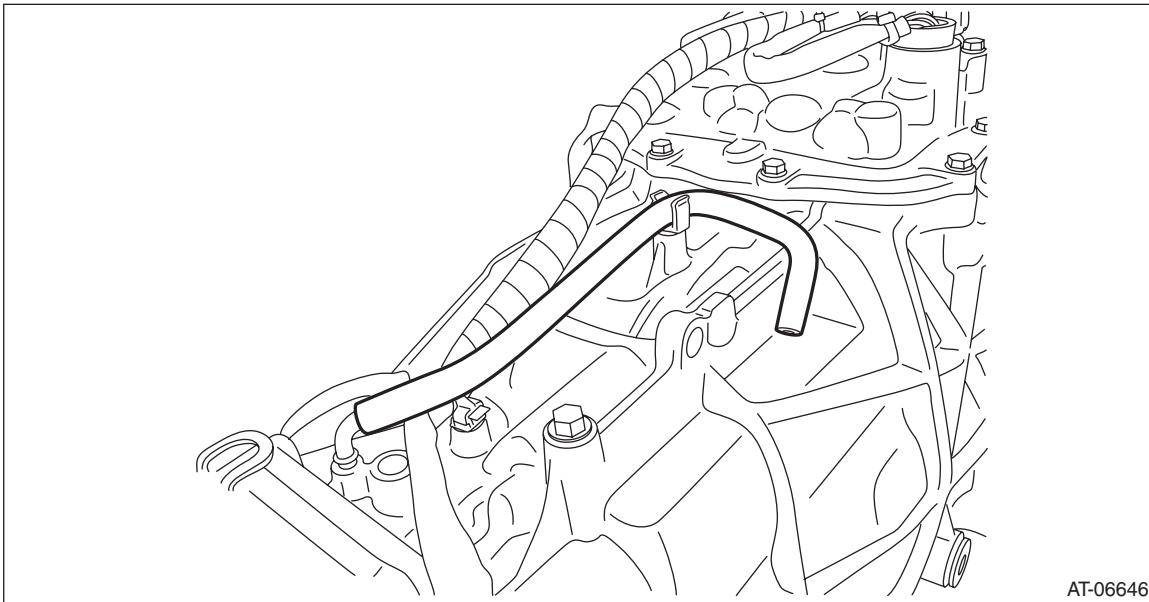


## B: INSTALLATION

### 1. FRONT DIFFERENTIAL SIDE

Install in the reverse order of removal.

**Insertion depth A:**

**16 — 36 mm (0.63 — 1.42 in)**

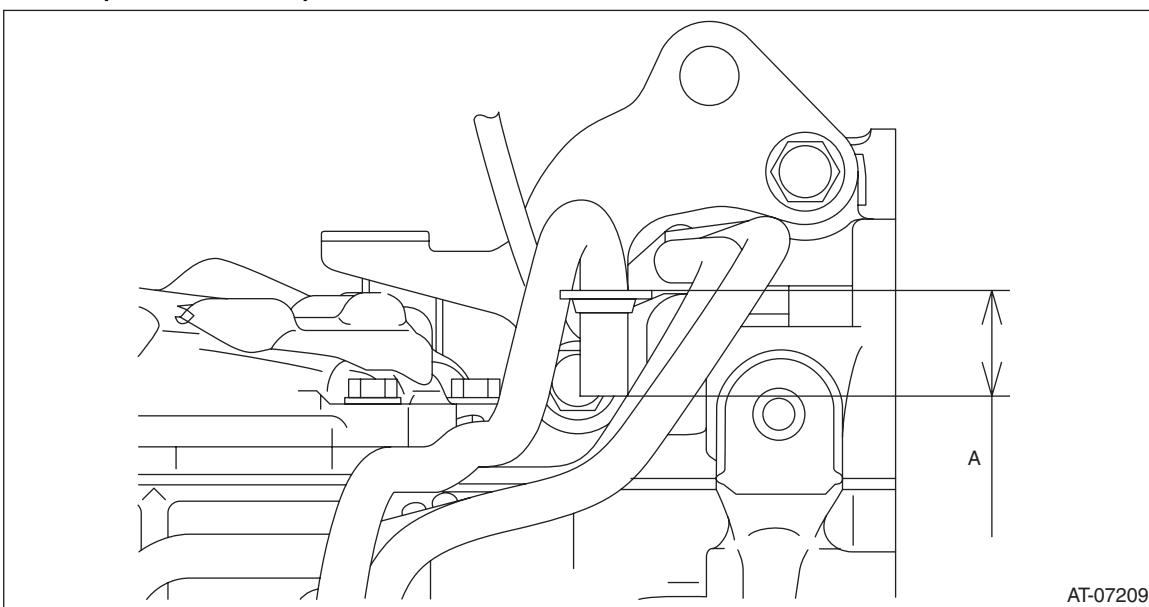

### 2. TRANSMISSION CASE SIDE

Install in the reverse order of removal.

**Tightening torque:**

**Transmission case cover:**

**8 N·m (0.8 kgf·m, 5.9 ft-lb)**

## C: INSPECTION

Check the hose for peeling, crack or clogging.