


# Rear Vehicle Speed Sensor

## AUTOMATIC TRANSMISSION


### 15. Rear Vehicle Speed Sensor

#### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Lift up the vehicle.
- 3) Clean the transmission exterior.
- 4) Remove the bolts which connect the front exhaust pipe and rear exhaust pipe.
- 5) Remove the bolts holding the heat shield cover, and move the heat shield cover to the rear.
- 6) Disconnect the rear vehicle speed sensor connector.

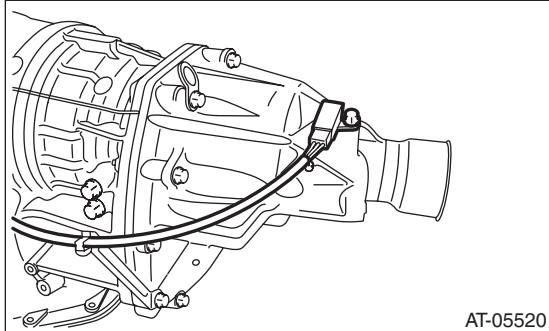

- 7) Remove the rear vehicle speed sensor.

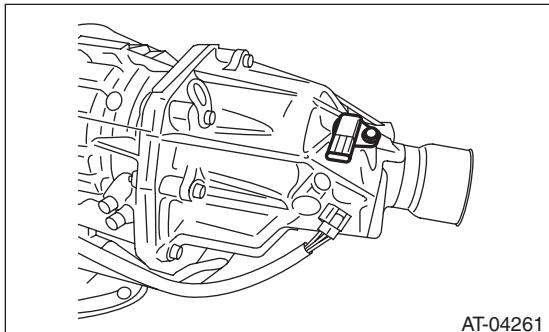

#### B: INSTALLATION


- 1) Install the rear vehicle speed sensor.

NOTE:


Use new O-rings.

**Tightening torque:**

**7 N·m (0.7 kgf-m, 5.2 ft-lb)**

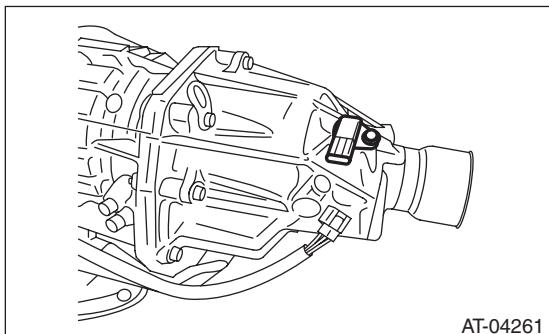

- 2) Connect the rear vehicle speed sensor connector.

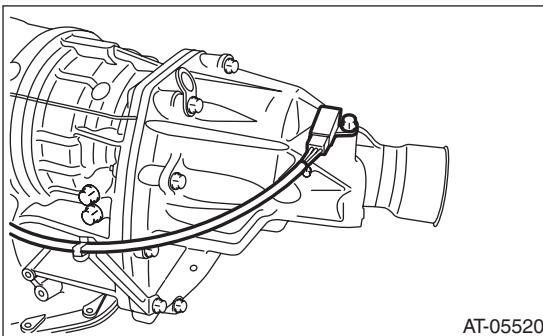

- 3) Install the heat shield cover. <Ref. to EI-172, INSTALLATION, Heat Shield Cover.>
- 4) Tighten the bolts which connect the front exhaust pipe and rear exhaust pipe.

**Tightening torque:**

**18 N·m (1.8 kgf-m, 13.3 ft-lb)**

- 5) Lower the vehicle.