


## 16. Turbine Speed Sensor 1

### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Lift up the vehicle.
- 3) Remove the front exhaust pipe. <Ref. to EX(H6DO)-4, REMOVAL, Front Exhaust Pipe.>
- 4) Disconnect the turbine speed sensor 1 connector.

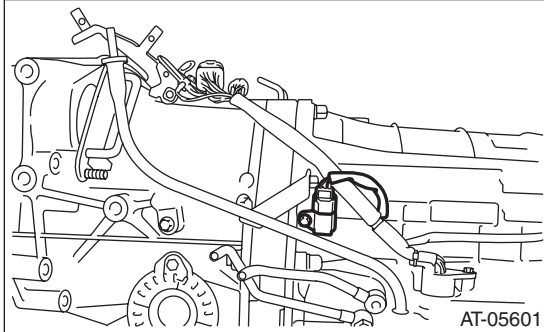

- 5) Remove the turbine speed sensor 1.

### B: INSTALLATION

- 1) Install the turbine speed sensor 1.


NOTE:

Use new O-rings.

**Tightening torque:**

**7 N·m (0.7 kgf-m, 5.2 ft-lb)**

- 2) Connect the turbine speed sensor 1 connector.

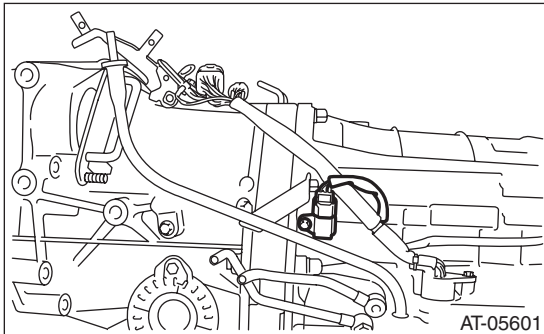

- 3) Install the front exhaust pipe. <Ref. to EX(H6DO)-5, INSTALLATION, Front Exhaust Pipe.>
- 4) Lower the vehicle.
- 5) Connect the battery ground terminal.