

### 10. Inspection Mode

#### A: PROCEDURE

**CAUTION:**

**Observe the traffic law when driving on public roads.**

- 1) Shift the select lever to “D” range, and then drive the vehicle with changing the gear from 1st to 5th.
- 2) When driving the vehicle at 5th speed of “D” range, set the gear to manual mode and drive the vehicle by downshifting using “-” of the paddle shift switch from 5th → 4th, 4th → 3rd, 3rd → 2nd, and 2nd → 1st.

**NOTE:**

At shifting down, drive the vehicle at least 10 seconds in each speed.

- 3) Shift the select lever to “R” range and drive the vehicle for 2 seconds or more.