

12. Center Differential

A: REMOVAL

- 1) Remove the manual transmission assembly from the vehicle. <Ref. to 6MT-25, REMOVAL, Manual Transmission Assembly.>
- 2) Remove the back-up light switch and the neutral position switch. <Ref. to 6MT-35, REMOVAL, Switches and Harness.>
- 3) Remove the transfer case together with the extension case assembly. <Ref. to 6MT-37, REMOVAL, Transfer Case and Extension Case Assembly.>
- 4) Remove the extension case assembly. <Ref. to 6MT-37, REMOVAL, Transfer Case and Extension Case Assembly.>
- 5) Remove the center differential and transfer driven gear as a unit. <Ref. to 6MT-44, REMOVAL, Transfer Driven Gear.>

B: INSTALLATION

- 1) Install the center differential and transfer driven gear into the transfer case as a unit. <Ref. to 6MT-44, INSTALLATION, Transfer Driven Gear.>
- 2) Select a thrust washer. <Ref. to 6MT-38, INSTALLATION, Transfer Case and Extension Case Assembly.>
- 3) Install the transfer driven gear. <Ref. to 6MT-44, INSTALLATION, Transfer Driven Gear.>
- 4) Install the extension case assembly. <Ref. to 6MT-38, INSTALLATION, Transfer Case and Extension Case Assembly.>
- 5) Install the transfer case together with the extension case assembly. <Ref. to 6MT-38, INSTALLATION, Transfer Case and Extension Case Assembly.>
- 6) Install the back-up light switch and the neutral position switch. <Ref. to 6MT-35, INSTALLATION, Switches and Harness.>
- 7) Install the manual transmission assembly to the vehicle. <Ref. to 6MT-28, INSTALLATION, Manual Transmission Assembly.>


C: DISASSEMBLY

Remove the ball bearing using ST.

NOTE:

- Center differential is a non-disassembled part which should not be disassembled.
- Do not reuse the ball bearing.

ST 498077600 CENTER DIFFERENTIAL BEARING REMOVER

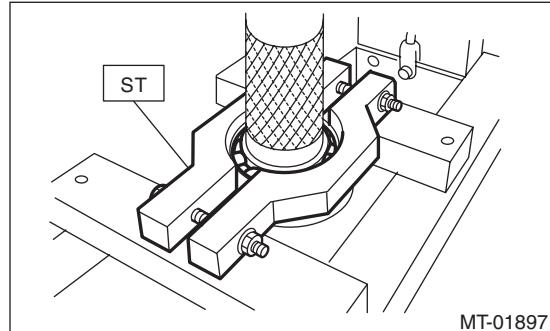

D: ASSEMBLY


Install the ball bearing to the center differential assembly.

CAUTION:

Do not apply a load in excess of 10 kN (1 ton, 1.1 US ton, 1.0 Imp ton).

NOTE:

Use a new ball bearing.

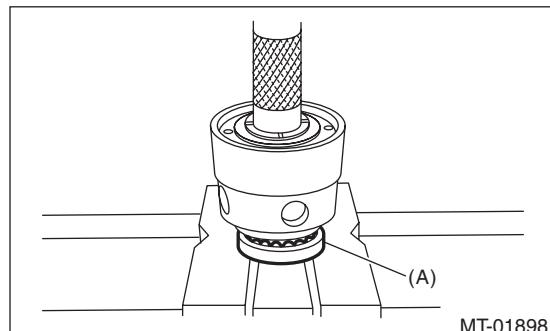

(A) Ball bearing

E: INSPECTION

1) Bearing

Replace the bearings in the following cases.

- In case of broken or rusty bearings
- In case of wear or damage
- When the bearings fail to turn smoothly or emit noise in rotation after gear oil lubrication.
- When bearing has other defects.

2) Center differential

If there is wear or damage, replace the center differential case assembly.