

Parking Brake Switch


PARKING BRAKE

6. Parking Brake Switch

A: REMOVAL


1. PARKING BRAKE SWITCH

- 1) Remove the instrument panel lower cover. <Ref. to EI-61, REMOVAL, Instrument Panel Lower Cover.>
- 2) Remove the screws and remove the parking brake switch.

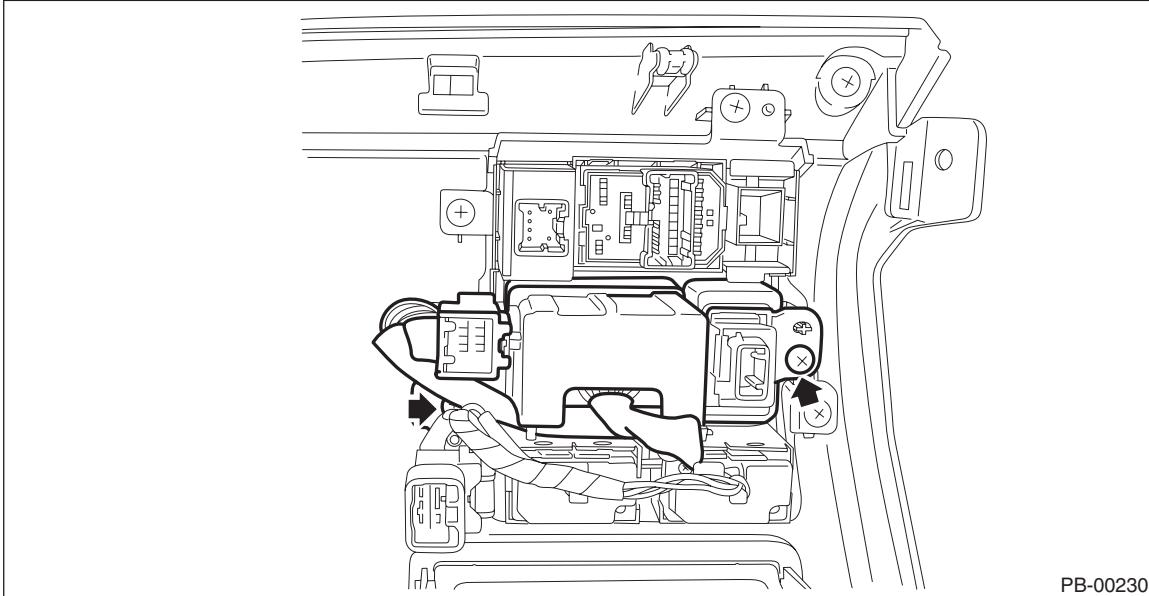

2. HILL HOLD SWITCH

- 1) Remove the instrument panel lower cover. <Ref. to EI-61, REMOVAL, Instrument Panel Lower Cover.>
- 2) Remove the screw and remove the hill hold switch.

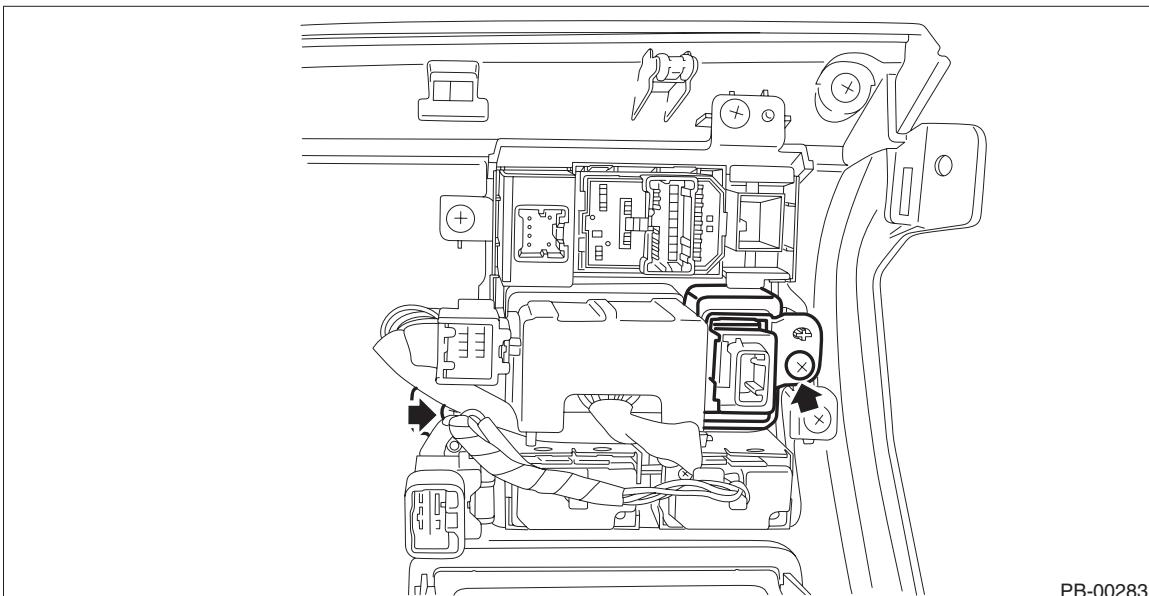

B: INSTALLATION


Install each part in the reverse order of removal.

C: INSPECTION

1. PARKING BRAKE CONTROL SWITCH

Check the resistance between parking brake control switch terminals.

Switch position	Terminal No.	Specification
Press	2 and 9 3 and 9	Less than 1 Ω
Neutral	2 and 9 1 and 3	Less than 1 Ω
Pull	1 and 3 2 and 3	Less than 1 Ω

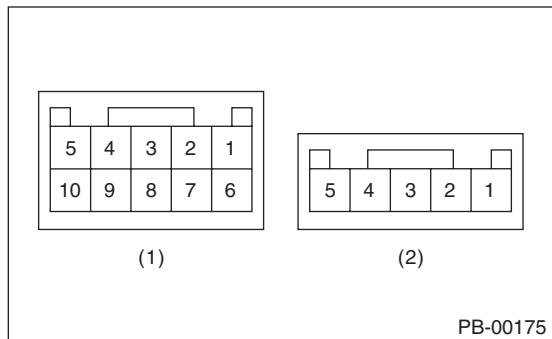

PB-00175

(1) Parking brake control switch

(2) Hill hold switch


NOTE:

Replace the switch if the inspection result is not within the standard value.

2. HILL HOLD SWITCH

Check the resistance between hill hold switch terminals.

Switch position	Terminal No.	Specification
ON	1 and 4	Less than 1 Ω
OFF	—	1 MΩ or more

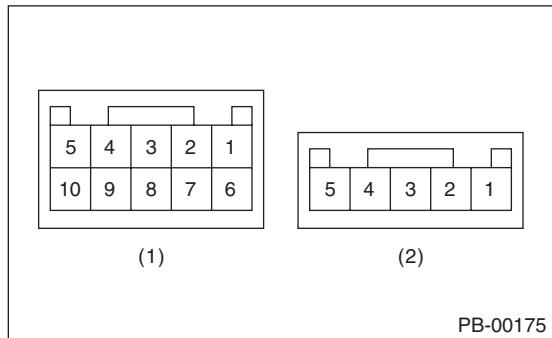

PB-00175

(1) Parking brake control switch

(2) Hill hold switch

NOTE:

Replace the switch if the inspection result is not within the standard value.