

## General Description

### TIRE PRESSURE MONITORING SYSTEM (DIAGNOSTICS)

## 2. General Description

### A: CAUTION

#### 1. SUPPLEMENTAL RESTRAINT SYSTEM “AIRBAG”

The airbag system wiring harness is routed near the TPMS & keyless entry CM or TPMS CM.

##### CAUTION:

- Do not use electrical test equipment on any of the airbag system wiring harness circuits.
- Be careful not to damage the wiring harness of the airbag system, when servicing the TPMS & keyless entry CM or TPMS CM.

#### 2. TPMS & KEYLESS ENTRY CM OR TPMS CM

- If a transmitter is replaced, the ID of the new transmitter must be registered. <Ref. to TPM(diag)-13, OPERATION, Register Transmitter (ID).>
- When adjusting tire inflation pressure indoors in winter, there is a big temperature difference between the indoor facilities and outside. Once the car is outside where the temperature is lower, the air pressure in the tires will drop, causing the tire inflation pressure warning light to illuminate, even if the pressure in the tires was adjusted to standard values indoors. To avoid this, it is necessary to adjust the tire inflation pressure to the high side in consideration of the difference in temperature between inside and outside according to the following table.

##### a. Sedan model

Temperature °C (°F)	Indoor temperature	15.5 (60)		
	Outdoor temperature	-1 (30)	-12 (10)	-23 (-10)
Tire inflation pressure kPa (psi)	Front	250 (36)	265 (38)	280 (40)
	Rear	240 (35)	255 (37)	270 (39)

##### b. OUTBACK model

Temperature °C (°F)	Indoor temperature	15.5 (60)		
	Outdoor temperature	-1 (30)	-12 (10)	-23 (-10)
Tire inflation pressure kPa (psi)	Front	240 (35)	255 (37)	270 (39)
	Rear	230 (33)	245 (35)	255 (37)

### B: INSPECTION

Before performing diagnosis, check the following item which might affect the quality of the tire pressure monitoring system.

#### 1. TIRE

- Inspect that the tire pressure is within the specification while the tire is cool. (Refer to Tire Caution Label.)
- Check the tires for damage or the insertion of foreign matters.

#### 2. BATTERY

Check that amount of battery fluid, gravity and voltage are within the specifications.

**Standard voltage: 12 V or more**

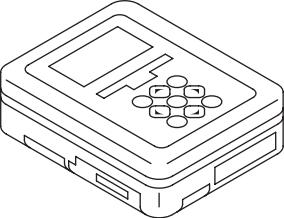
**Specific gravity: 1.260 or more**

## General Description

TIRE PRESSURE MONITORING SYSTEM (DIAGNOSTICS)

### C: PREPARATION TOOL

#### 1. SPECIAL TOOL

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST1B022XU0	1B022XU0	SUBARU SELECT MONITOR III KIT	Used for troubleshooting the electrical system.

#### 2. GENERAL TOOL

TOOL NAME	REMARKS
Circuit tester	Used for measuring resistance, voltage and current.
Transmitter registration tool	Used to register the transmitter ID. Manufacturer: Kent-Moore Item number: J45295