

## VDC OFF Switch

VEHICLE DYNAMICS CONTROL (VDC)

---


### 13.VDC OFF Switch

#### A: REMOVAL

NOTE:

The trunk opener switch is integrated with the VDC OFF switch. (Sedan model)

- 1) Remove the instrument panel lower cover. <Ref. to EI-61, REMOVAL, Instrument Panel Lower Cover.>
- 2) Release the claws and remove the VDC OFF switch.

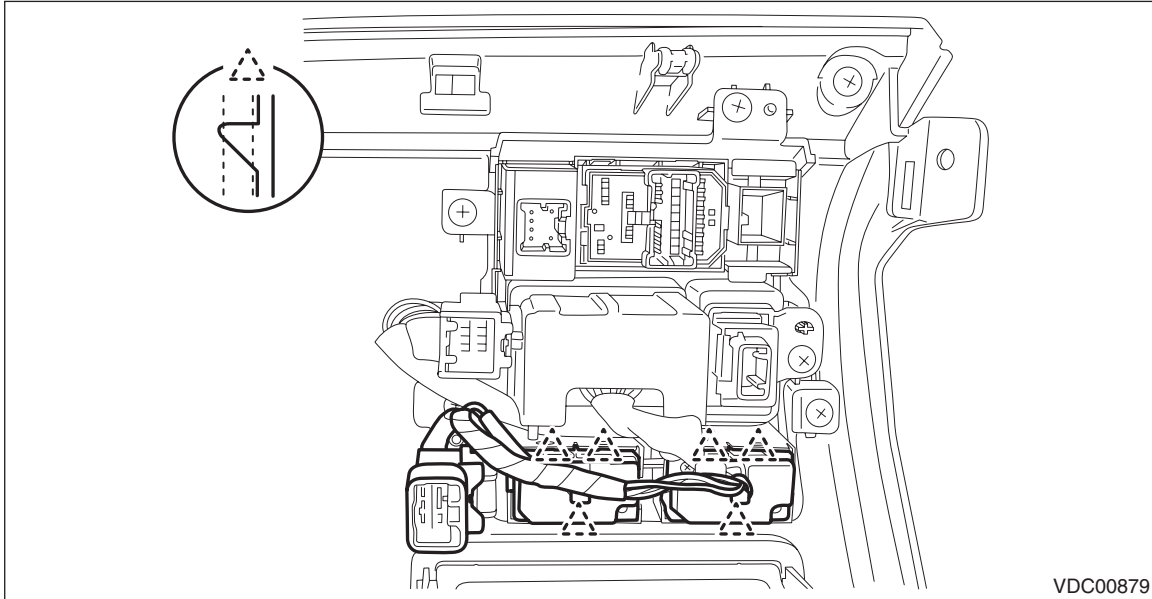


#### B: INSTALLATION

Install each part in the reverse order of removal.

**C: INSPECTION**

- 1) Disconnect the VDC OFF switch connector.
- 2) Check the resistance between the VDC OFF switch terminals.

**Preparation tool: Circuit tester**

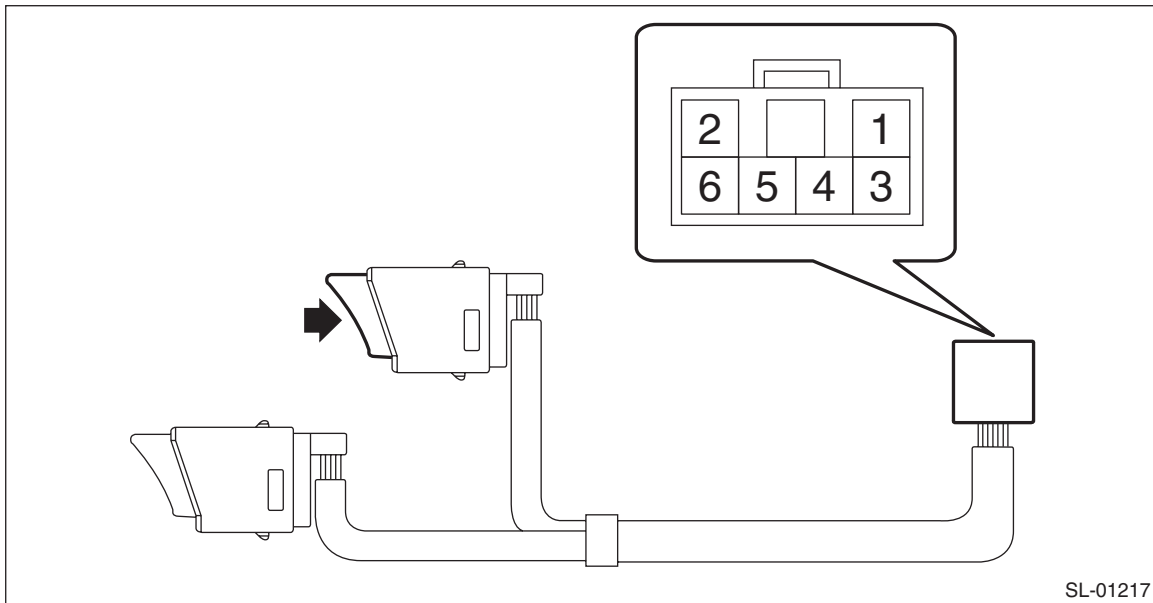

| Terminal No. | Inspection conditions | Standard             |
|--------------|-----------------------|----------------------|
| 1 — 3        | Switch OFF            | 1 M $\Omega$ or more |
|              | Switch ON             | Less than 1 $\Omega$ |

- 3) Replace the VDC OFF switch if the inspection result is not within the standard value.

## VDC OFF Switch

VEHICLE DYNAMICS CONTROL (VDC)

---

# VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

## *VDC(diag)*

---

|                                                                   | Page |
|-------------------------------------------------------------------|------|
| 1. Basic Diagnostic Procedure .....                               | 2    |
| 2. Check List for Interview .....                                 | 4    |
| 3. General Description .....                                      | 8    |
| 4. Electrical Component Location .....                            | 10   |
| 5. Control Module I/O Signal .....                                | 12   |
| 6. Subaru Select Monitor .....                                    | 16   |
| 7. Read Diagnostic Trouble Code (DTC) .....                       | 22   |
| 8. Inspection Mode .....                                          | 23   |
| 9. Clear Memory Mode .....                                        | 24   |
| 10. Warning Light Illumination Pattern .....                      | 25   |
| 11. List of Diagnostic Trouble Code (DTC) .....                   | 34   |
| 12. Diagnostic Procedure with Diagnostic Trouble Code (DTC) ..... | 38   |
| 13. General Diagnostic Table .....                                | 88   |