


Blower Motor

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)


10. Blower Motor

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the clips, and remove the glove box under cover.

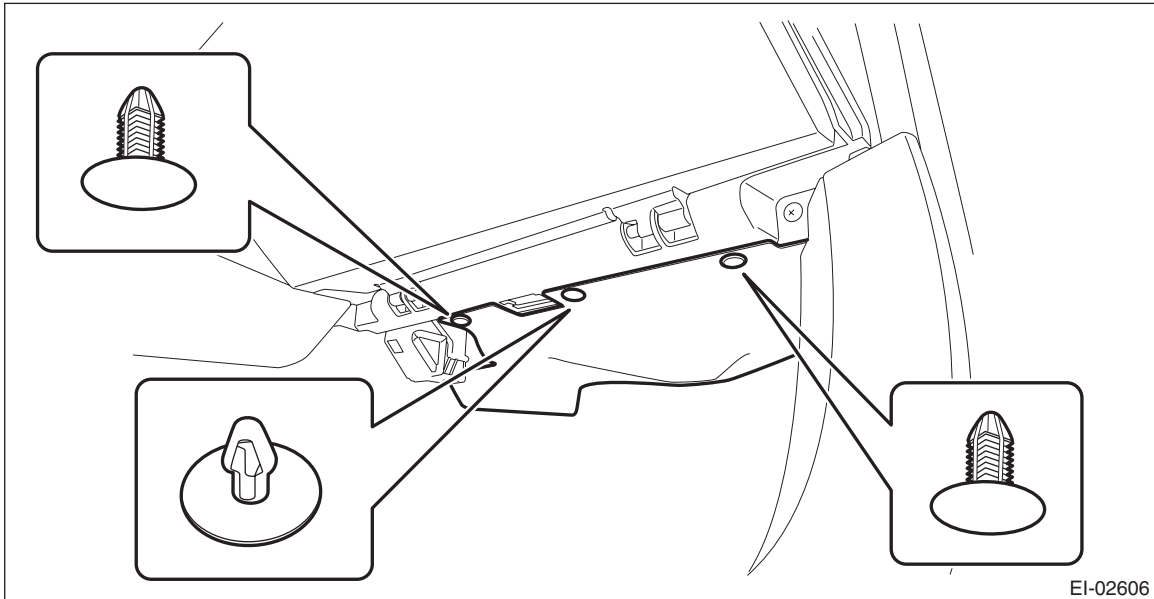

- 3) Remove the blower motor.
 - (1) Disconnect the connector.
 - (2) Remove the screw and remove the blower motor.

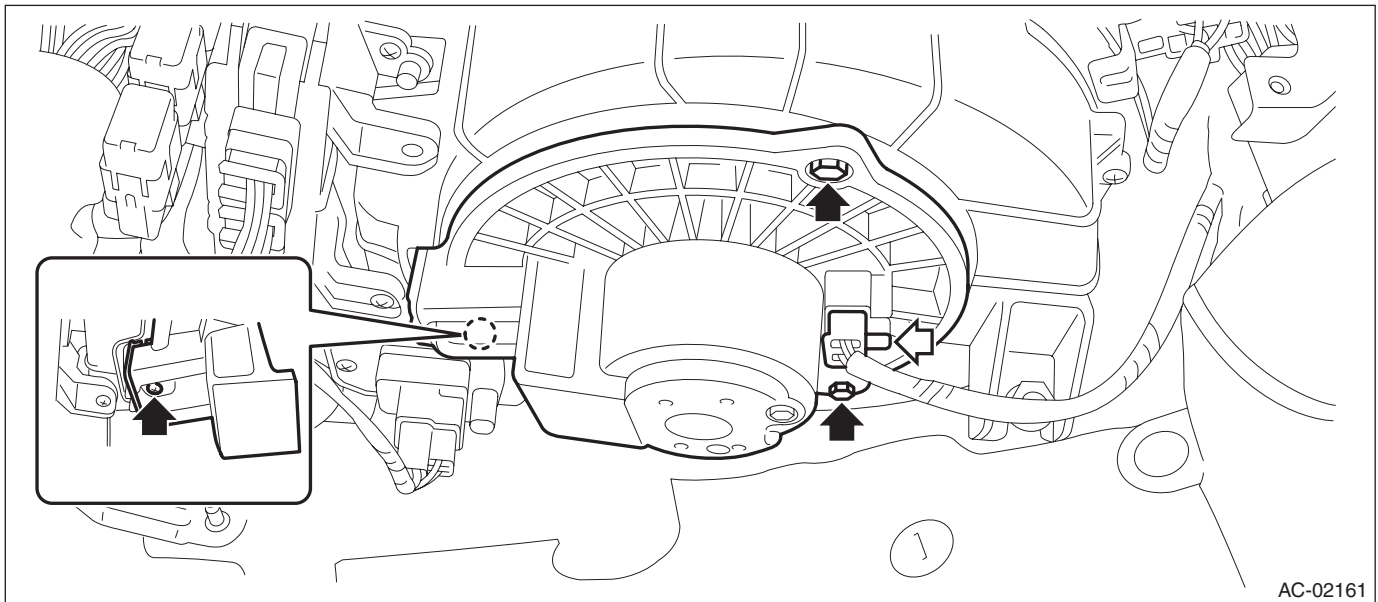

B: INSTALLATION


Install each part in the reverse order of removal.

Blower Motor

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

C: INSPECTION

1) Check the blower motor operation when battery voltage is applied between the terminals of blower motor.

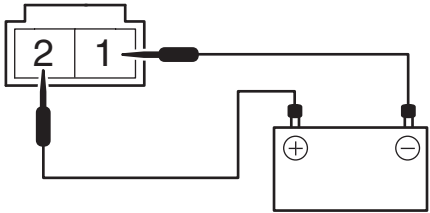Terminal No.	Inspection conditions	Specification	Connection diagram
2 (+) — 1 (—)	Connect battery to the terminals	Rotation	 AC-02576

2) If the blower motor does not operate normally, replace the blower motor.