

## 22. Pressure Sensor

### A: INSPECTION

- 1) Perform a diagnosis code (DTC) check by connecting the Subaru Select Monitor.
- 2) If any diagnosis code (DTC) is displayed, refer to "List of Diagnostic Trouble Code (DTC)" in "HVAC SYSTEM (DIAGNOSTICS)" section. <Ref. to AC(diag)-50, LIST, List of Diagnostic Trouble Code (DTC).>