


32. Heater Duct

A: REMOVAL

1. REAR HEATER DUCT

- 1) Remove the front seats. <Ref. to SE-10, REMOVAL, Front Seat.>
- 2) Remove the instrument panel pad and frame assembly. <Ref. to EI-73, REMOVAL, Instrument Panel Assembly.>
- 3) Remove the rear heater duct.
 - (1) Turn over the floor carpet and remove the rear heater duct slide lock.
 - (2) Release the claws, and then remove the rear heater duct LH and RH.

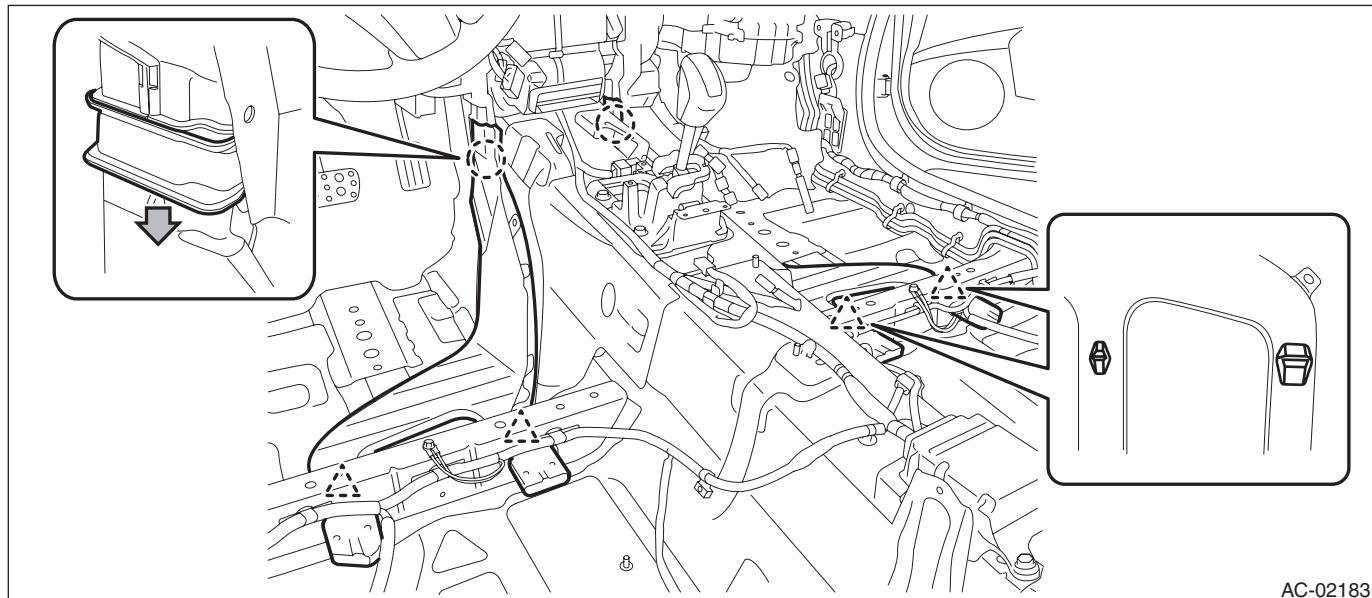


NOTE:

For the model with premium audio system, remove the extension duct.

2. CONSOLE FRONT DUCT

- 1) Remove the instrument panel pad and frame assembly. <Ref. to EI-73, REMOVAL, Instrument Panel Assembly.>
- 2) Remove the clip, and remove the console front duct.

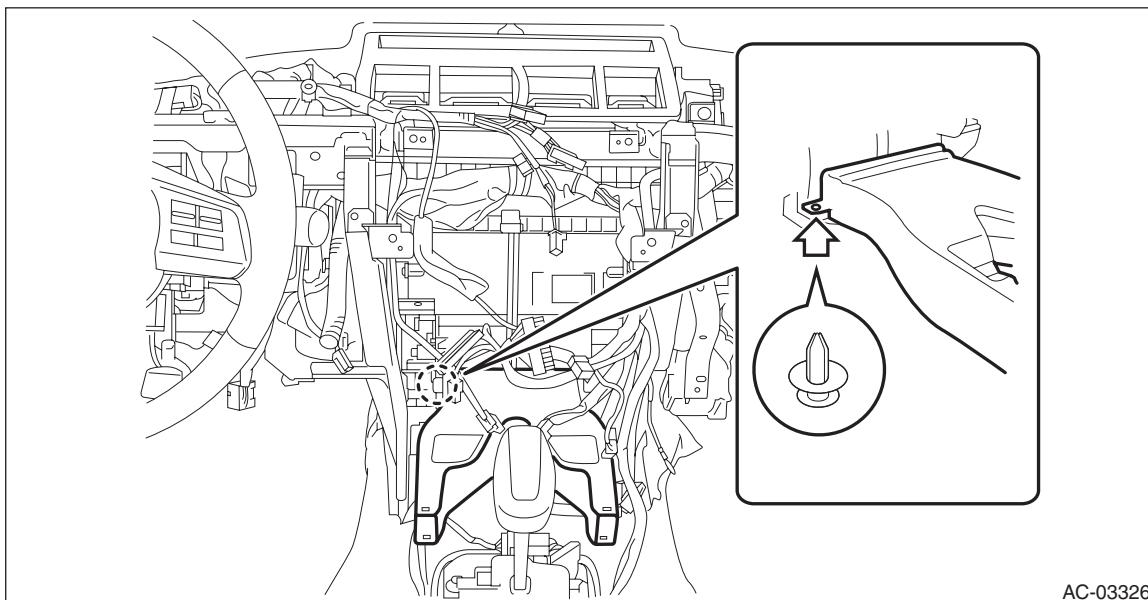


Heater Duct

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

3. CENTER CONSOLE DUCT

- 1) Remove the console box. <Ref. to EI-70, REMOVAL, Console Box.>
- 2) Remove the screws, and remove the center console duct.

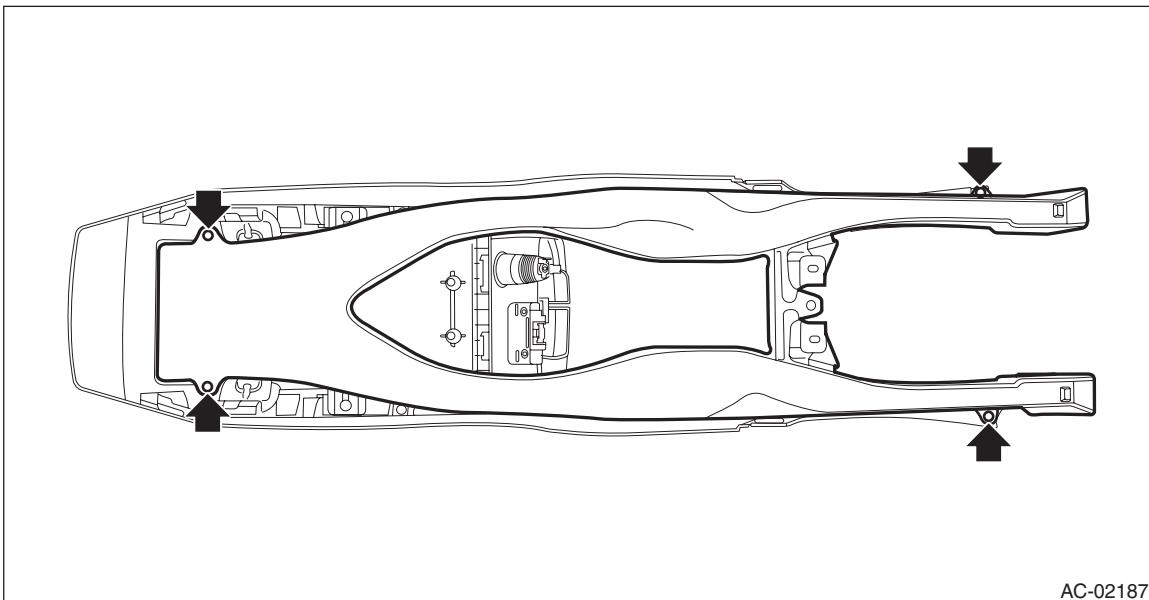

B: INSTALLATION

Install each part in the reverse order of removal.

NOTE:

Refer to "INSTALLATION" of the following parts.

- Front seat (when removing rear heater duct): <Ref. to SE-11, INSTALLATION, Front Seat.>
- Instrument panel assembly (when removing console front duct and rear heater duct): <Ref. to EI-93, INSTALLATION, Instrument Panel Assembly.>
- Console box (when removing center console duct): <Ref. to EI-72, INSTALLATION, Console Box.>

C: INSPECTION

- 1) Check installation condition of duct. Connect the duct properly if defective.
- 2) Check that no foreign matter is mixed in the duct. Remove the foreign matter if any.