

## 5. Front Door Glass

### A: REMOVAL


- 1) Remove the front door trim. <Ref. to EI-57, FRONT DOOR, REMOVAL, Door Trim.>
- 2) Remove the sealing cover.

**CAUTION:**

- Carefully remove the butyl tape. Excessive force will easily break the cover.
- If cover gets broken, replace it with a new part.



- 3) Remove the inner pad.
- 4) Attach the battery ground cable and power window switch and turn the ignition to ON.
- 5) Remove the front door glass.
  - (1) Operate the power window switch to move the front door glass to the position where the mounting bolts can be seen.
  - (2) Remove the bolt.

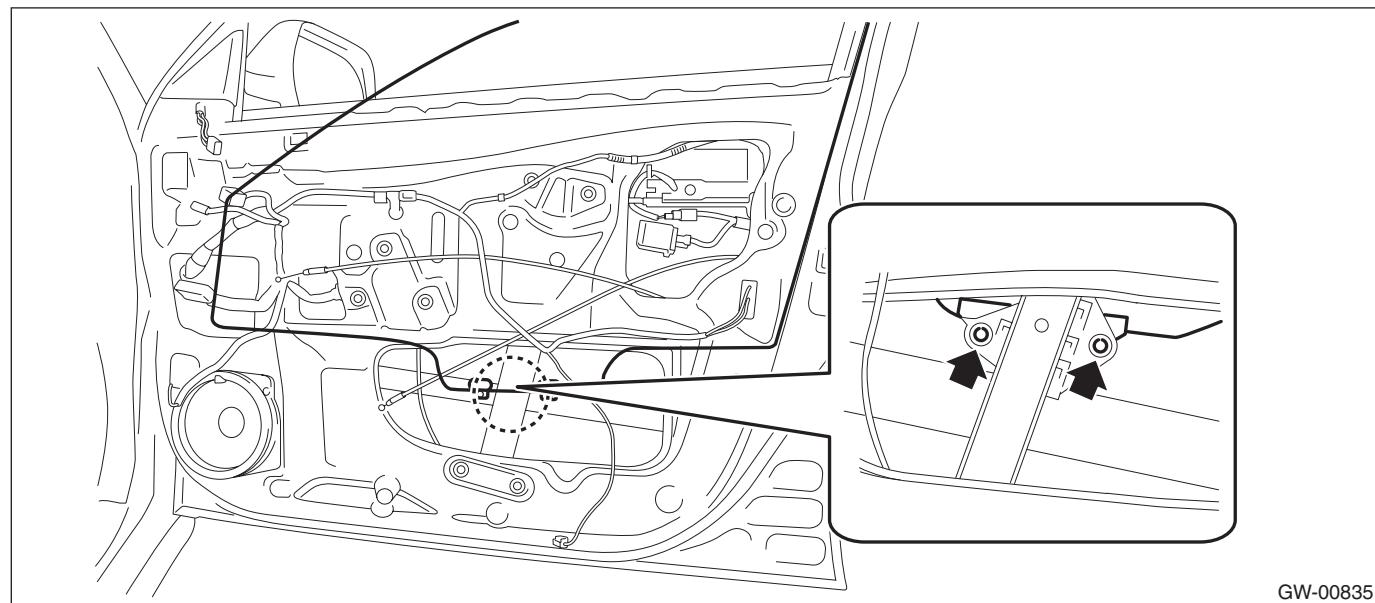

GW-00835


# Front Door Glass

## GLASS/WINDOWS/MIRRORS

(3) While tilting the glass, remove the windshield glass.

### CAUTION:

Avoid impact and damage to the glass.

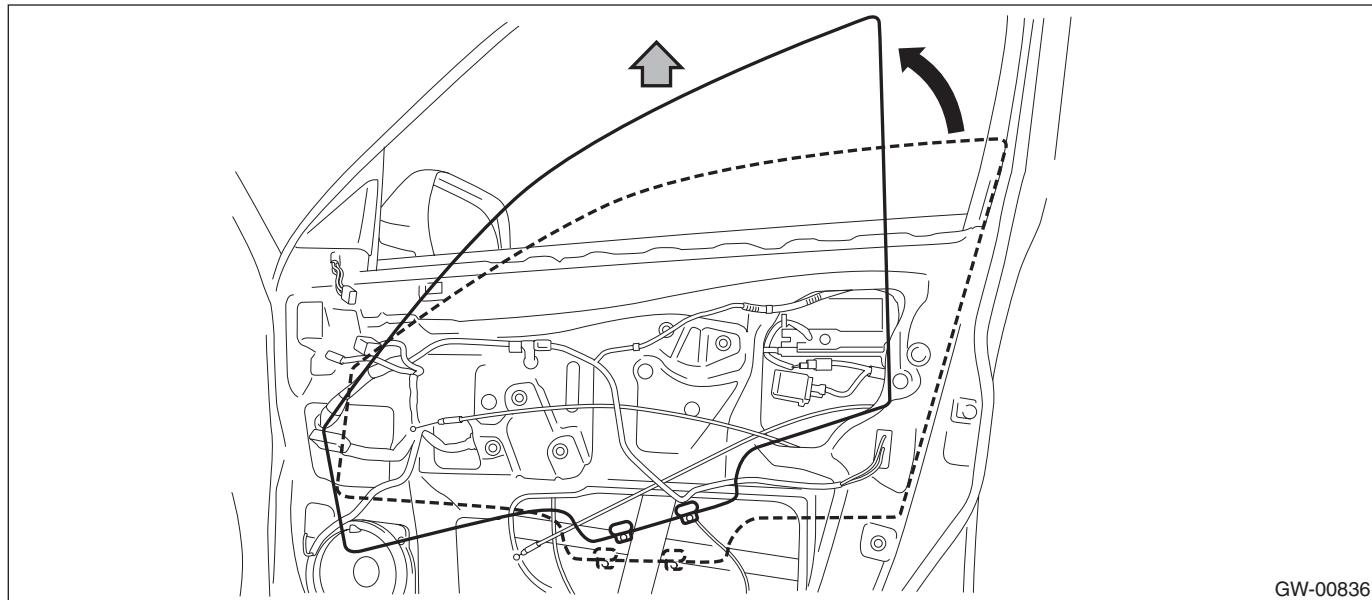

## B: INSTALLATION

### CAUTION:

Make sure that the glass run rubber is placed securely in the door frame and sash.

Install each part in the reverse order of removal.

### *Tightening torque:*

*Refer to "COMPONENT" of "General Description". <Ref. to GW-4, FRONT DOOR GLASS, COMPONENT, General Description.>*