

11. Multi Display

A: REMOVAL


1) Remove the center speaker cover.

NOTE:

If the cover is hard to remove, first remove the audio assembly or navigation assembly, and then push up the cover from the backside.

(1) Push up the center speaker cover from the audio space.

(2) Disconnect the claws and hooks and remove the center speaker cover.

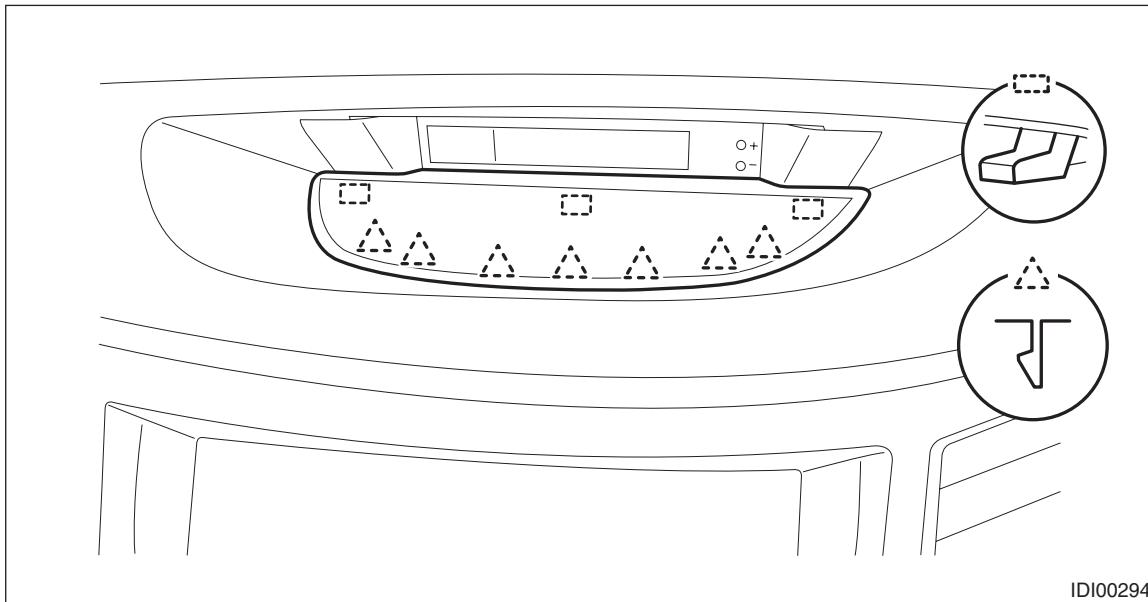


2) Remove the multi display.

CAUTION:

Be careful not to damage the multi display or instrument panel.

- (1) Release the clips and claws, detach the multi display panel LWR.
- (2) Remove the screws and pull out the multi display toward you to disconnect the connectors.

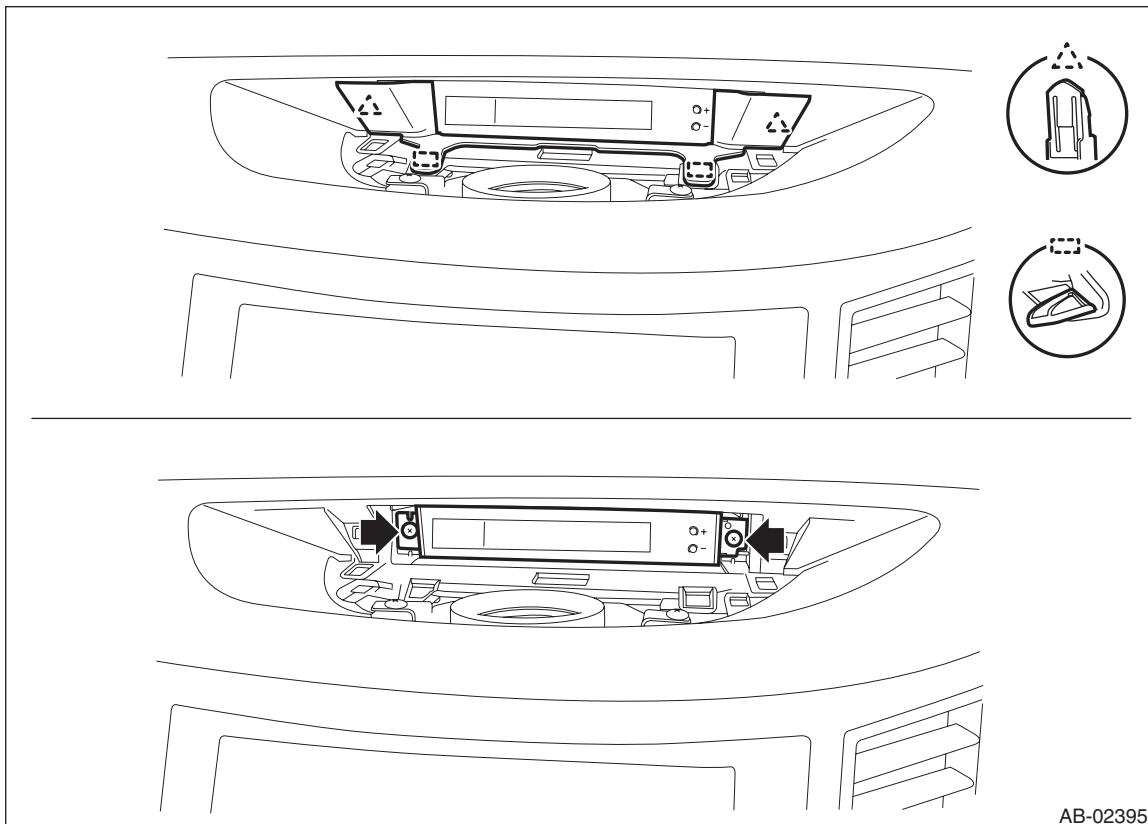

B: INSTALLATION

CAUTION:

- Make sure the electrical connector is connected securely.
- Make sure that the multi display operates normally.

Install each part in the reverse order of removal.