

14. Rear Gate Opener Button

A: REMOVAL


NOTE:

The rear gate opener button is integrated into the license plate light assembly harness.


1) Remove the rear gate garnish. <Ref. to EI-169, REMOVAL, Rear Gate Garnish.>

2) Remove the rear gate opener button.

(1) Release the locks at both ends of the rear gate opener button by pushing with a flat tip screwdriver.

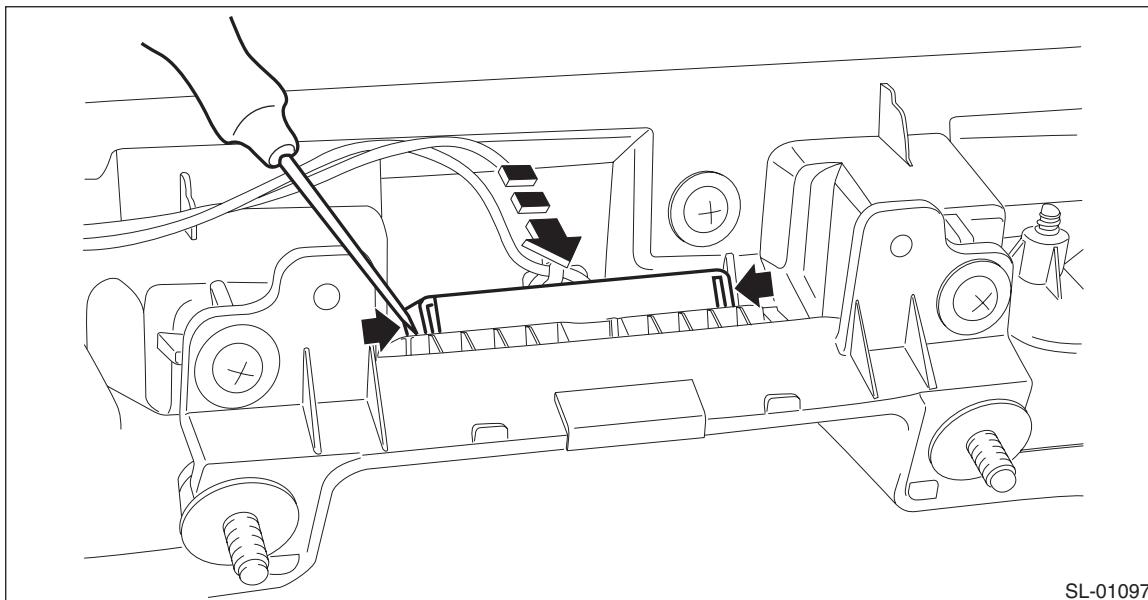


(2) Remove the screws and remove the rear lock button (lock). (model with keyless access)

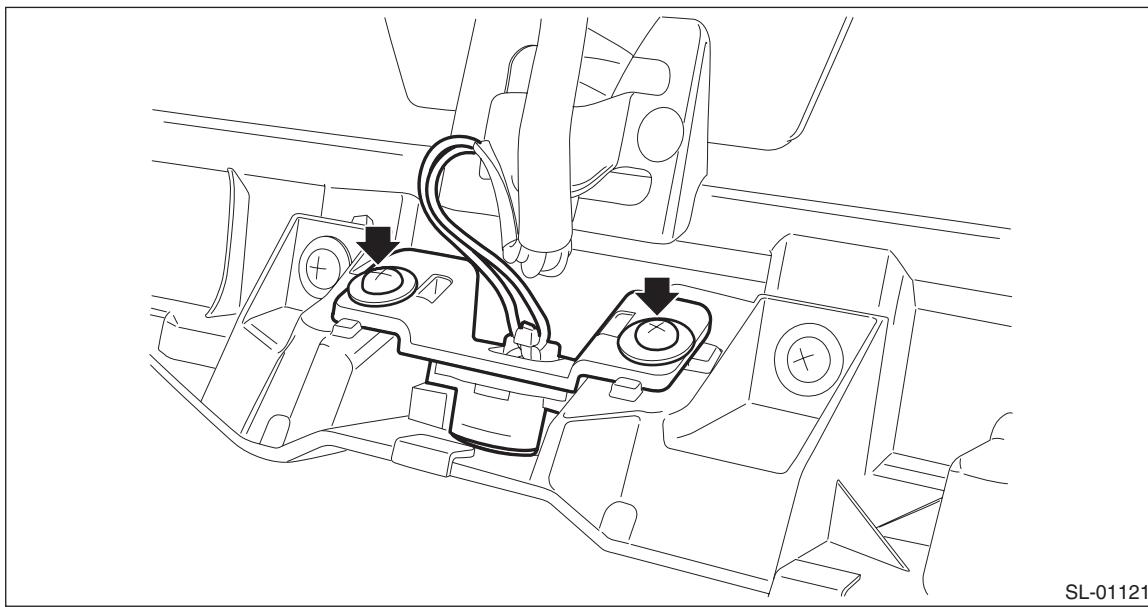


Rear Gate Opener Button

SECURITY AND LOCKS


(3) Disconnect the rear exterior antenna connector. (model with keyless access)

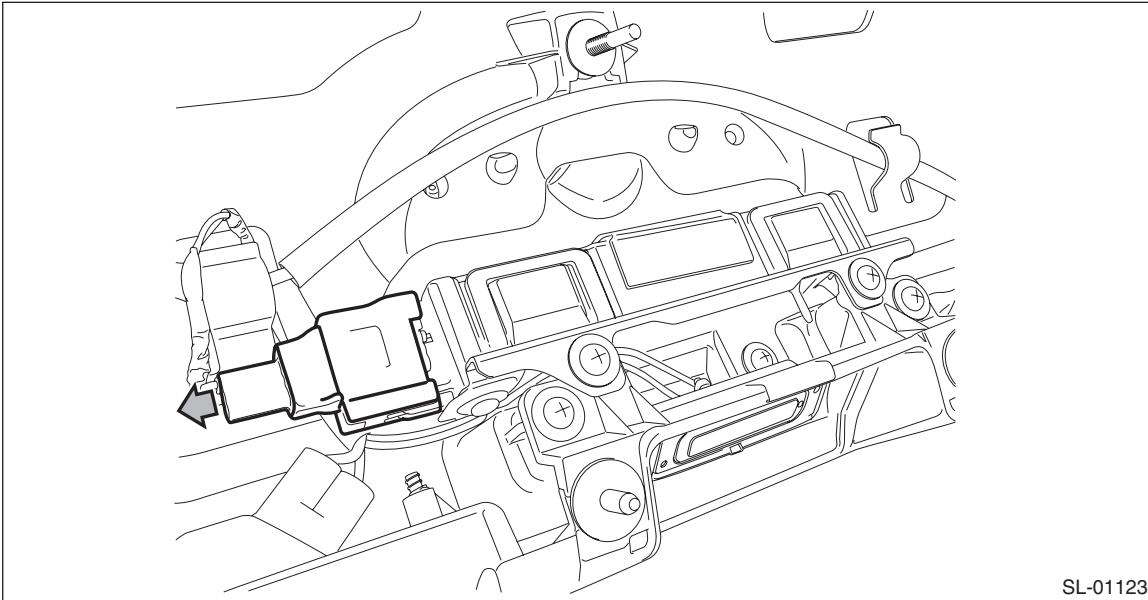

(4) Remove the screws and remove the license plate light.

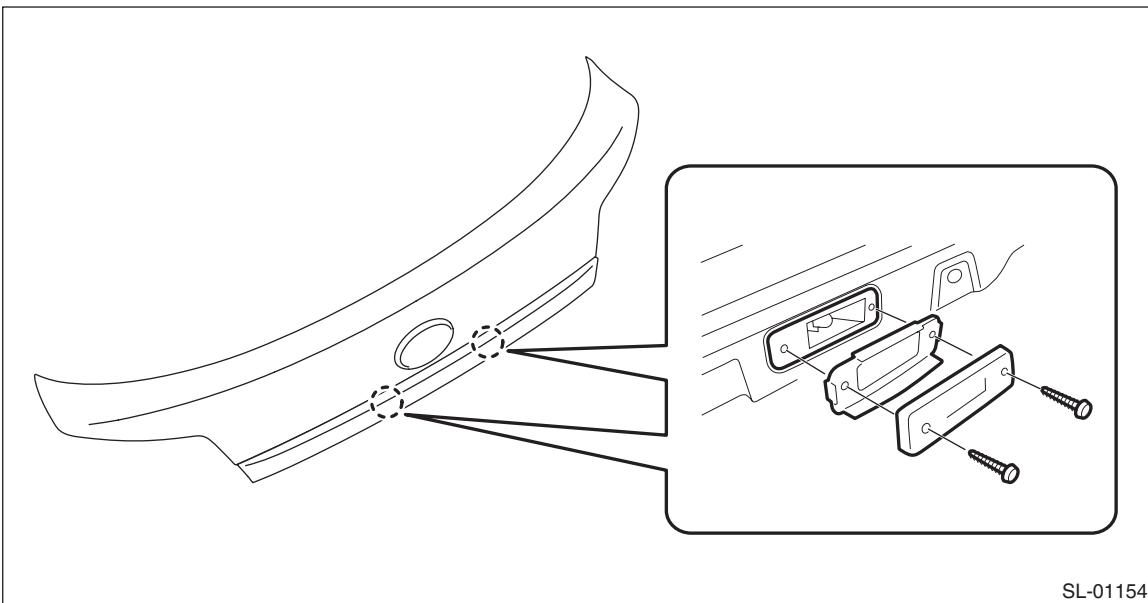

(5) Remove the license plate light assembly harness from the rear gate garnish.

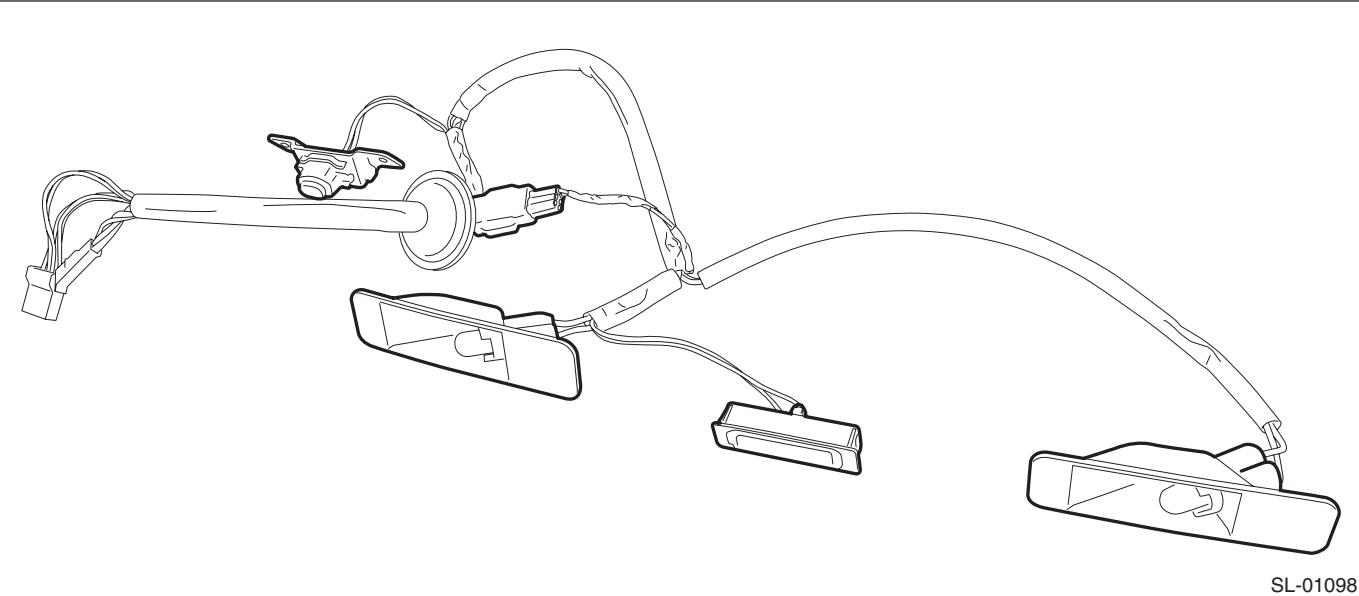

B: INSTALLATION

CAUTION:

Make sure that the harness grommet is installed securely.

Incomplete installation causes water leak.


Install each part in the reverse order of removal.

C: INSPECTION

- 1) Disconnect the rear gate opener button connector.
- 2) Measure the resistance between rear gate opener button terminals.

Preparation tool:

Circuit tester

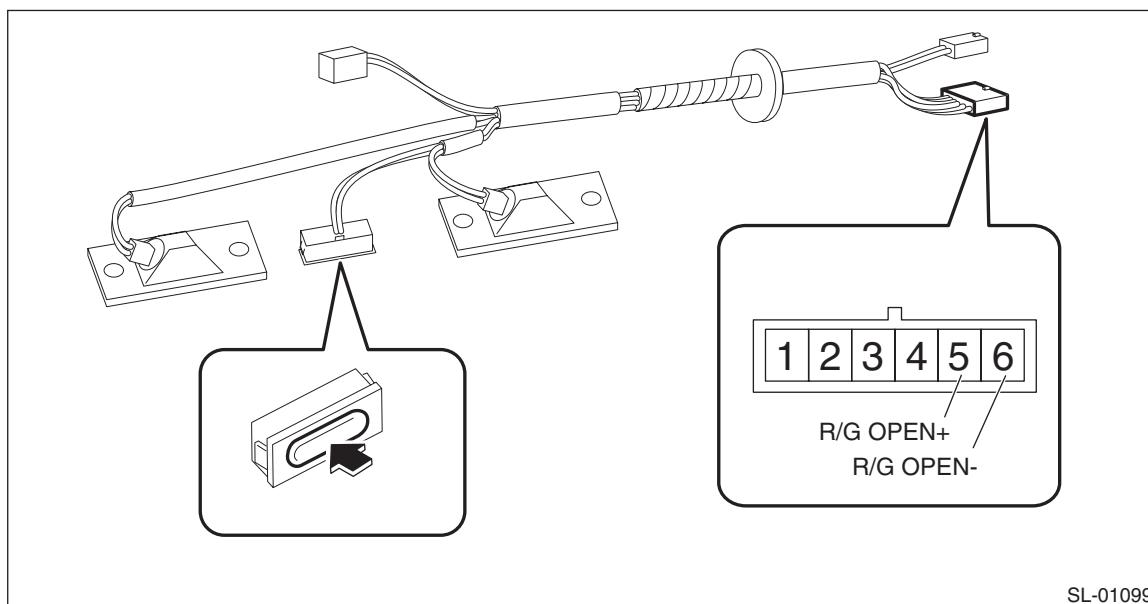

Terminal No.	Inspection conditions	Standard
5 — 6	Open	Less than 1 Ω
	Close	1 MΩ or more

3) Replace the rear gate opener button if the inspection result is not within the standard value.