


22. Security Control Module

A: REMOVAL

- 1) Remove the heater and cooling unit. <Ref. to AC-66, REMOVAL, Heater and Cooling Unit.>
- 2) Remove the security control module.
 - (1) Disconnect the connector.
 - (2) Remove the nuts, and remove the security control module.

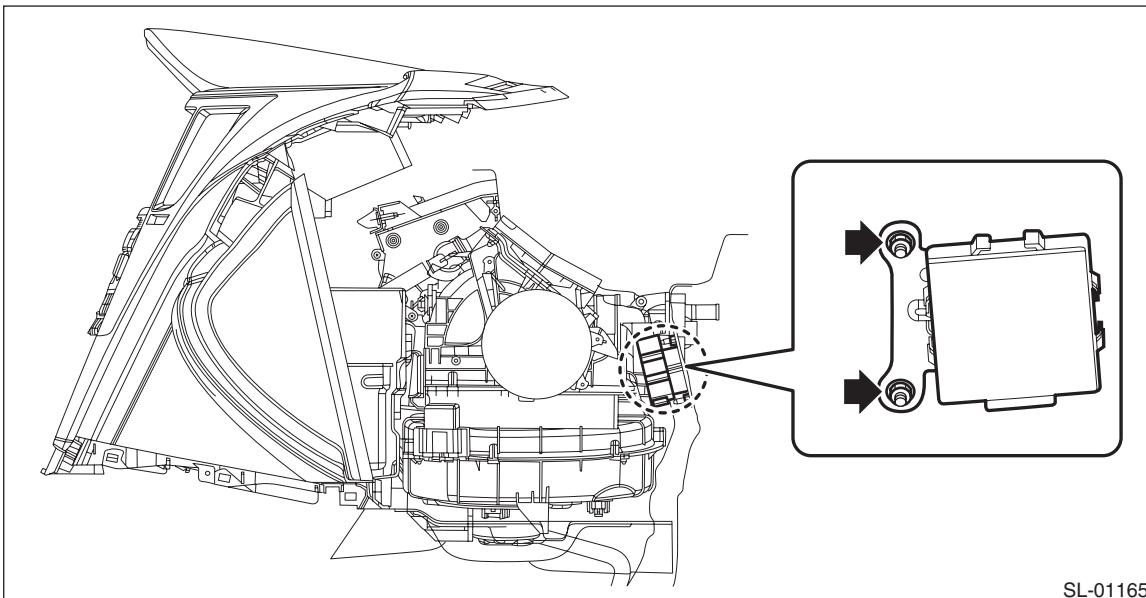

B: INSTALLATION

CAUTION:

You must register the immobilizer when a immobilizer-related control module has been replaced. For procedures, refer to the “PC application help for Subaru Select Monitor”.

Install each part in the reverse order of removal.

Tightening torque:

Security control module: 7.5 N·m (0.76 kgf·m, 5.5 ft-lb)